


SIEMENS

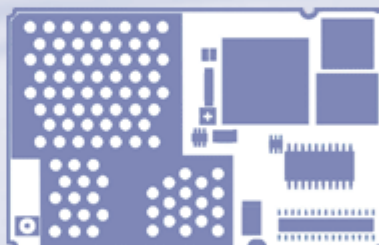

Java User's Guide

Siemens Cellular Engines

Version: 12
DocId: wm_java_usersguide_v12
Products: TC65, AC65, AC75, XT65, XT75

User's Guide

Document Name: **Java User's Guide**

Version: **12**

Date: **2008-02-25**

DocId: **wm_java_usersguide_v12**

Status **Confidential / Released**

Supported Products: **TC65, AC65, AC75, XT65, XT75**

GENERAL NOTES - EXCLUSION OF LIABILITY

PRODUCT IS DEEMED ACCEPTED BY RECIPIENT AND IS PROVIDED WITHOUT INTERFACE TO RECIPIENT'S PRODUCTS. THE DOCUMENTATION AND/OR PRODUCT ARE PROVIDED FOR TESTING, EVALUATION, INTEGRATION AND INFORMATION PURPOSES. THE DOCUMENTATION AND/OR PRODUCT ARE PROVIDED ON AN "AS IS" BASIS ONLY AND MAY CONTAIN DEFICIENCIES OR INADEQUACIES. THE DOCUMENTATION AND/OR PRODUCT ARE PROVIDED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, SIEMENS FURTHER DISCLAIMS ALL WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANTABILITY, COMPLETENESS, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. THE ENTIRE RISK ARISING OUT OF THE USE OR PERFORMANCE OF THE PRODUCT AND DOCUMENTATION REMAINS WITH RECIPIENT. THIS PRODUCT IS NOT INTENDED FOR USE IN LIFE SUPPORT APPLIANCES, DEVICES OR SYSTEMS WHERE A MALFUNCTION OF THE PRODUCT CAN REASONABLY BE EXPECTED TO RESULT IN PERSONAL INJURY. APPLICATIONS INCORPORATING THE DESCRIBED PRODUCT MUST BE DESIGNED TO BE IN ACCORDANCE WITH THE TECHNICAL SPECIFICATIONS PROVIDED IN THESE GUIDELINES. FAILURE TO COMPLY WITH ANY OF THE REQUIRED PROCEDURES CAN RESULT IN MALFUNCTIONS OR SERIOUS DISCREPANCIES IN RESULTS. FURTHERMORE, ALL SAFETY INSTRUCTIONS REGARDING THE USE OF MOBILE TECHNICAL SYSTEMS, INCLUDING GSM PRODUCTS, WHICH ALSO APPLY TO CELLULAR PHONES MUST BE FOLLOWED. SIEMENS OR ITS SUPPLIERS SHALL, REGARDLESS OF ANY LEGAL THEORY UPON WHICH THE CLAIM IS BASED, NOT BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, DIRECT, INDIRECT, PUNITIVE OR OTHER DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION OR DATA, OR OTHER PECUNIARY LOSS) ARISING OUT THE USE OF OR INABILITY TO USE THE DOCUMENTATION AND/OR PRODUCT, EVEN IF SIEMENS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE FOREGOING LIMITATIONS OF LIABILITY SHALL NOT APPLY IN CASE OF MANDATORY LIABILITY, E.G. UNDER THE GERMAN PRODUCT LIABILITY ACT, IN CASE OF INTENT, GROSS NEGLIGENCE, INJURY OF LIFE, BODY OR HEALTH, OR BREACH OF A CONDITION WHICH GOES TO THE ROOT OF THE CONTRACT. HOWEVER, CLAIMS FOR DAMAGES ARISING FROM A BREACH OF A CONDITION, WHICH GOES TO THE ROOT OF THE CONTRACT, SHALL BE LIMITED TO THE FORESEEABLE DAMAGE, WHICH IS INTRINSIC TO THE CONTRACT, UNLESS CAUSED BY INTENT OR GROSS NEGLIGENCE OR BASED ON LIABILITY FOR INJURY OF LIFE, BODY OR HEALTH. THE ABOVE PROVISION DOES NOT IMPLY A CHANGE ON THE BURDEN OF PROOF TO THE DETRIMENT OF THE RECIPIENT. SUBJECT TO CHANGE WITHOUT NOTICE AT ANY TIME. THE INTERPRETATION OF THIS GENERAL NOTE SHALL BE GOVERNED AND CONSTRUED ACCORDING TO GERMAN LAW WITHOUT REFERENCE TO ANY OTHER SUBSTANTIVE LAW.

Copyright

Transmittal, reproduction, dissemination and/or editing of this document as well as utilization of its contents and communication thereof to others without express authorization are prohibited. Offenders will be held liable for payment of damages. All rights created by patent grant or registration of a utility model or design patent are reserved.

Copyright © Siemens AG 2008

Trademark notice

Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Content

1	Preface	11
2	Overview	12
2.1	Related Documents	12
2.2	Terms and Abbreviations	13
3	Installation	15
3.1	System Requirements.....	15
3.2	Installation CD for AC65/AC75 and XT65/XT75	16
3.3	Installation CD for TC65.....	17
3.3.1	Components.....	18
3.3.1.1	Module Exchange Suite	18
3.3.1.2	WTK	18
3.3.1.3	SDK / JDK	19
3.3.1.4	NetBeans IDE 5.0	19
3.3.1.5	NetBeans IDE 5.5.1	19
3.3.1.6	Eclipse 3.1.2 IDE and Eclipse ME Plugin 1.5.x	20
3.3.1.7	Eclipse 3.2.2 IDE and Eclipse ME Plugin 1.5.5 or 1.6.8.....	20
3.3.1.8	GPS Evaluation Software.....	21
3.3.1.9	Integrated Documentation Suite (IDS)	21
3.4	Set up Java Development Environment with Eclipse IDE (Quick Start-up)	22
3.5	Siemens Mobility Toolkit Installation	24
3.5.1	Installing the Standard Development Toolkit	24
3.5.2	Installing the SMTK Environment.....	24
3.5.3	Installing NetBeans IDE 5.0 / NetBeans IDE 5.5.1	26
3.5.4	Installing Eclipse 3.0, Eclipse 3.1 or Eclipse 3.2	26
3.5.5	Installing Borland JBuilder X, 2005 and 2006 Enterprise/Developer ..	27
3.5.6	Installing Module Exchange Suite (MES).....	27
3.6	SMTK Uninstall	27
3.7	Upgrades	27
4	Software Platform	28
4.1	Software Architecture.....	28
4.2	Interfaces	29
4.2.1	ASC0 - Serial Device	29
4.2.2	General Purpose I/O	29
4.2.3	DAC/ADC	29
4.2.4	ASC1.....	29
4.2.5	Digital Audio Interface (DAI)	29
4.2.6	I2C/SPI.....	29
4.2.7	GPS	30
4.2.8	JVM Interfaces	31
4.2.8.1	IP Networking.....	31
4.2.8.2	Media	31

4.2.8.3	Other Interfaces	31
4.3	Data Flow of a Java Application Running on the Module	32
4.4	Handling Interfaces and Data Service Resources	33
4.4.1	Module States	33
4.4.1.1	State 1: Default – No Java Running	33
4.4.1.2	State 2: No Java Running, General Purpose I/O and I2C/SPI	34
4.4.1.3	State 4: Default – Java Application Active	34
4.4.1.4	State 5: Java Application Active, General Purpose I/O and I2C/SPI	34
4.4.2	Module State Transitions	35
5	Maintenance	36
5.1	IP Service	36
5.2	Remote SIM Access	37
5.3	Power Saving	37
5.4	Charging	38
5.5	Airplane Mode	38
5.6	Alarm	38
5.7	Shutdown	39
5.7.1	Automatic Shutdown	39
5.7.2	Manual Shutdown	39
5.7.3	Restart after Switch Off	39
5.7.4	Watchdog	39
5.8	Special AT Command Set for Java Applications	40
5.8.1	Switching from Data Mode to Command Mode	40
5.8.2	Mode Indication after MIDlet Startup	40
5.8.3	Long Responses	40
5.8.4	Configuration of Serial Interface	40
5.8.5	Java Commands	41
5.8.6	AutoExec Function	41
5.9	System Out	41
5.9.1	Serial interfaces	41
5.9.2	File	42
5.9.3	UDP	42
5.10	GPIO	42
5.11	Restrictions	42
5.11.1	Flash File System	42
5.11.2	Memory	42
5.12	Performance	43
5.12.1	Java	43
5.12.2	Pin I/O	44
5.12.3	Data Rates on RS-232 API	44
5.12.3.1	Plain Serial Interface	45
5.12.3.2	Voice Call in Parallel	45
5.12.3.3	Scenarios with GPRS/EGDE Connection	45

	5.12.3.4 Upload	46
	5.12.3.5 Download	47
5.13	System Time	49
6	MIDlets	50
6.1	MIDlet Documentation	50
6.2	MIDlet Life Cycle	50
6.3	Hello World MIDlet	52
7	File Transfer to Module	53
7.1	Module Exchange Suite	53
7.1.1	Windows Based	53
7.1.2	Command Line Based	53
7.2	Over the Air Provisioning	53
7.3	Security Issues	54
7.3.1	Module Exchange Suite	54
7.3.2	OTAP	54
8	Over The Air Provisioning (OTAP)	55
8.1	Introduction to OTAP	55
8.2	OTAP Overview	55
8.3	OTAP Parameters	56
8.4	Short Message Format	57
8.5	Java File Format	58
8.6	Procedures	59
8.6.1	Install/Update	59
8.6.2	Delete	60
8.7	Time Out Values and Result Codes	61
8.8	Tips and Tricks for OTAP	61
8.9	OTAP Tracer	62
8.10	Security	62
8.11	How To	62
9	Compile and Run a Program without a Java IDE	64
9.1	Build Results	64
9.2	Compile	65
9.3	Run on the Module with Manual Start	65
9.4	Run on the Module with Autostart	66
9.4.1	Switch on Autostart	66
9.4.2	Switch off Autostart	66
10	Compile and Run a Program with a Java IDE	67
10.1	Eclipse 3.1.2 (with ME Plugin 1.2.3)	67
10.1.1	Setup a New Project	67
11	Debug Environment	72
11.1	Data Flow of a Java Application in the Debug Environment	72
11.2	Emulator	73

11.3	Java IDE	75
11.3.1	NetBeans IDE 5.0, NetBeans 5.5 or NetBeans 5.5.x.....	75
11.3.1.1	Switching Emulator to IMP-NG Emulator	76
11.3.1.2	Templates.....	77
11.3.1.3	Examples	78
11.3.1.4	Compile and Run	79
11.3.1.5	Starting Debug Session without Downloading Java Files ...	79
11.3.1.6	Displaying Java "System.out" in NetBeans IDE window	80
11.3.2	Eclipse 3.0 and Eclipse 3.1	81
11.3.2.1	Eclipse 3.0.....	81
11.3.2.2	Eclipse 3.1.....	81
11.3.2.3	Eclipse 3.2.....	81
11.3.2.4	Using Eclipse with ME Plugin up to Version 1.2.3.....	82
11.3.2.5	Using Eclipse with ME Plugin 1.5.x.....	83
11.3.2.6	Using Eclipse with ME Plugin 1.6.x.....	85
11.3.2.7	Import Example	86
11.3.2.8	Compile and Debug	87
11.3.2.9	Starting Debug Session without Downloading Java Files ...	89
11.3.3	Borland JBuilder X	91
11.3.3.1	Examples	92
11.3.3.2	Starting Debug Session without Downloading Java Files ...	93
11.3.4	Borland JBuilder 2005 and JBuilder 2006 Enterprise/Developer	94
11.3.4.1	Examples	95
11.4	Breakpoints	95
11.5	Switching Java "System.out" to IDE Debug Window	96
11.6	Important Information for Java Debugging on Windows Vista	97
12	Java Security	98
12.1	Secure Data Transfer.....	98
12.1.1	Create a Secure Data Transfer Environment Step by Step	100
12.2	Execution Control.....	103
12.2.1	Change to Secured Mode Concept.....	104
12.2.2	Concept for the Signing the Java MIDlet	105
12.3	Application and Data Protection.....	106
12.4	Structure and Description of the Java Security Commands	106
12.4.1	Structure of the Java Security Commands	107
12.4.2	Build Java Security Command	108
12.4.3	Send Java Security Command to the Module.....	109
12.5	Create a Java Security Environment Step by Step	110
12.5.1	Create Key Store	110
12.5.2	Export X.509 Root Certificate	110
12.5.3	Create Java Security Commands	110
12.5.4	Sign a MIDlet	112
12.6	Attention.....	112

13	Java Tutorial	113
13.1	Using the AT Command API.....	113
13.1.1	Class ATCommand.....	113
13.1.1.1	Instantiation with or without CSD Support.....	113
13.1.1.2	Sending an AT Command to the Device, the send() Method..	114
13.1.1.3	Data Connections.....	115
13.1.1.4	Synchronization.....	117
13.1.2	ATCommandResponseListener Interface.....	117
13.1.2.1	Non-Blocking ATCommand.send() Method.....	117
13.1.3	ATCommandListener Interface	118
13.1.3.1	ATEvents	118
13.1.3.2	Implementation.....	119
13.1.3.3	Registering a Listener with an ATCommand Instance	120
13.2	Programming the MIDlet.....	121
13.2.1	Threads.....	121
13.2.2	Example	121
14	Differences to the TC45.....	123

Tables

Table 1:	GPRS upload data rate with different number of timeslots, CS2	46
Table 2:	GPRS upload data rate with different number of timeslots, CS4	46
Table 3:	EDGE upload data rate with two timeslots, CS5.....	46
Table 4:	EDGE upload data rate with two timeslots, CS9.....	46
Table 5:	GPRS Download data rate with different number of timeslots, CS2	48
Table 6:	GPRS Download data rate with different number of timeslots, CS4	48
Table 7:	EDGE Download data rate with different number of timeslots, CS5	48
Table 8:	EDGE Download data rate with different number of timeslots, CS9	48
Table 9:	A typical sequence of MIDlet execution	51
Table 10:	Parameters and keywords	56

Figures

Figure 1:	Overview	12
Figure 2:	Installation of Eclipse ME-Plugin 1.2.3: Dialog box Feature Updates	22
Figure 3:	Installation of Eclipse ME-Plugin 1.2.3: Dialog box Updates sites to visit.....	22
Figure 4:	Installation of Eclipse ME-Plugin 1.2.3: dialog box Search Results	23
Figure 5:	Installation of Eclipse ME-Plugin 1.2.3: dialog box Restart Eclipse	23
Figure 6:	Interface Configuration.....	31
Figure 7:	Data flow of a Java application running on the module.....	32
Figure 8:	Module State 1	33
Figure 9:	Module State 2	34
Figure 10:	Module State 4	34
Figure 11:	Module State 5	34
Figure 12:	Module State Transition Diagram.....	35
Figure 13:	Test case for measuring Java command execution throughput.....	43
Figure 14:	Test case for measuring Java MIDlet performance and handling pin-IO	44
Figure 15:	Scenario for testing data rates on ASC1	45
Figure 16:	Scenario for testing data rates on ASC1 with a voice call in parallel	45
Figure 17:	Scenario for testing data rates on ASC1 with GPRS data upload	47
Figure 18:	Scenario for testing data rates on ASC1 with GPRS data download.....	47
Figure 19:	OTAP Overview	55
Figure 20:	OTAP: Install/Update Information Flow (messages in brackets are optional)	59
Figure 21:	OTAP: Delete Information Flow (messages in brackets are optional)	60
Figure 22:	Create new Eclipse project: Create a J2ME MIDP Midlet Suite.....	67
Figure 23:	Create new Eclipse project: New J2ME Project.....	67
Figure 24:	Create new Eclipse project: Midlet Suite Properties	68
Figure 25:	Create new Eclipse project: work area with new created project.....	68
Figure 26:	Create new Eclipse project: Create a J2ME Midlet.....	69
Figure 27:	Create new Eclipse project: Create a New J2ME Midlet.....	69
Figure 28:	Create new Eclipse project: Edit some Java commands	70
Figure 29:	Create new Eclipse project: Edit "deployed" path to Jar file.....	70
Figure 30:	Data flow of a Java application in the debug environment.....	72
Figure 31:	NetBeans IDE 5.0 - installed emulators	76
Figure 32:	NetBeans IDE 5.0 - Switching to IMP-NG emulator.....	76
Figure 33:	NetBeans IDE 5.0 - Selecting an IMP-NG MIDlet template (e.g. project "Test").....	77
Figure 34:	NetBeans IDE 5.0 - selecting sample project "Hello World Sample"	78
Figure 35:	NetBeans IDE 5.0 - confirmation of sample project "Hello World Sample"	78
Figure 36:	NetBeans IDE 5.0 - add emulator option "-noload" (e.g. project "HelloSample")	79
Figure 37:	NetBeans IDE 5.0 - Displaying Java "System.out" in NetBeans IDE window	80
Figure 38:	Eclipse – Display of different integrated emulators	82
Figure 39:	Eclipse – J2ME platform	83
Figure 40:	Eclipse with ME Plugin 1.5.0 – Display of different integrated emulators	84
Figure 41:	Eclipse with ME Plugin 1.5.0 – J2ME platform.....	85
Figure 42:	Eclipse – Project import	86
Figure 43:	Eclipse - Example	86
Figure 44:	Eclipse – Create package	87
Figure 45:	Eclipse - Configuration	88
Figure 46:	Eclipse - Configuration	89

Figure 47:	Eclipse 3.2.x ME1.5.x and 1.6.x select System Java Thread for showing breakpoint line in Java source	90
Figure 48:	JBuilder X – JDK settings.....	91
Figure 49:	JBuilder X – Siemens Library.....	91
Figure 50:	JBuilder X – Sample Projects.....	92
Figure 51:	JBuilder X – Starting the debugging session	92
Figure 52:	JBuilder X – Edit project properties for starting the emulator.....	93
Figure 53:	JBuilder - Runtime Configuration	93
Figure 54:	JBuilder 2006 Enterprise/Developer – JDK settings	94
Figure 55:	JBuilder 2006 Enterprise/Developer – Siemens Library	94
Figure 56:	JBuilder 2006 Enterprise/Developer – Sample Projects	95
Figure 57:	Emulator configuration file “switching Java System.out to serial port”	96
Figure 58:	Using Windows Vista: Set Eclipse.exe perament to "Run as administrator"..	97
Figure 59:	Mode 1 – Customer Root Certificate does not exist.....	99
Figure 60:	Mode 2 - Server Certificate and Certificate into module are identical	99
Figure 61:	Mode 2 - Server Certificate and self signed root Certificate in module form a chain.....	100
Figure 62:	Insert Customer Root Certificate.....	104
Figure 63:	Prepare MIDlet for Secured Mode	105
Figure 64:	Build Java Security Command	108

1 Preface

This document covers the full range of IMP-NG Java products from Siemens, currently including:

1. TC65 Module
2. TC65 Terminal
3. AC75/AC65 Module
4. XT75/XT65 Module

Differences between the products are noted in the particular chapters. Throughout the document, all supported products are referred to as ME (Mobile Equipment). For use in file, directory or path names, the string "<productname>" represents the actual name of a product, for example TC65. Screenshots are provided as examples and, unless otherwise stated, apply to all supported products.

2 Overview

The ME features an ultra-low profile and low-power consumption for data (CSD and GPRS), voice, SMS and fax. Java technology and several peripheral interfaces on the module allow you to easily integrate your application.

This document explains how to work with the ME, the installation CD and the tools provided on the installation CD.

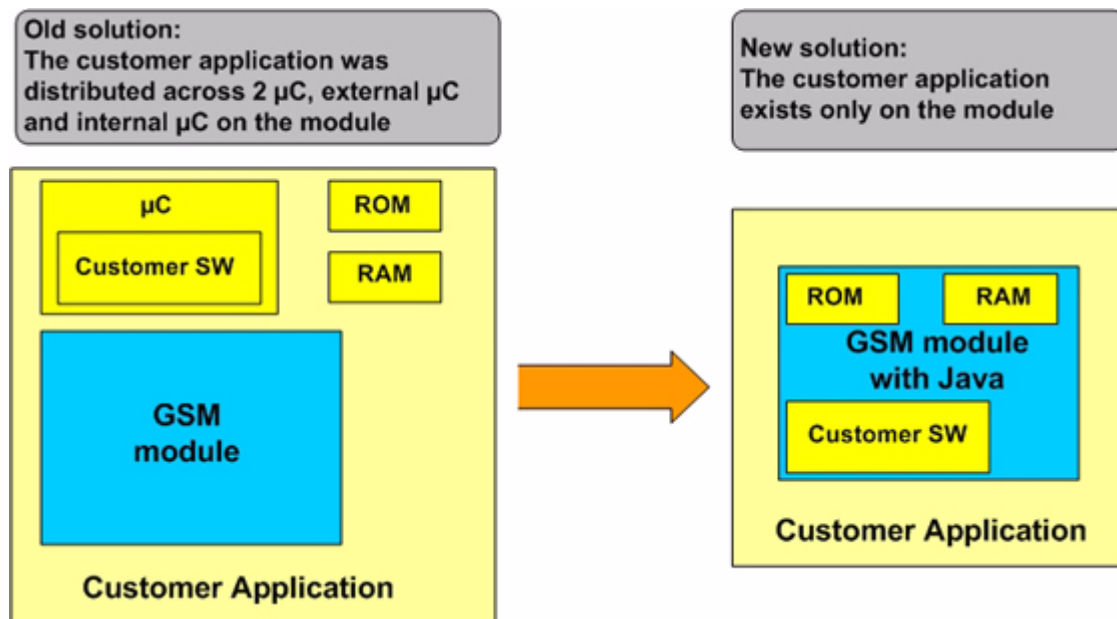


Figure 1: Overview

2.1 Related Documents

List of documents referenced throughout this manual:

- [1] AT Command Set of your Siemens Wireless product
- [2] Hardware Interface Description of your Siemens Wireless product
- [3] Java doc \wtk\doc\html\index.html
- [4] IMP-NG, JSR228, Standard

For further documents see [Chapter 3.2](#).

2.2 Terms and Abbreviations

Abbreviation	Description
API	Application Program Interface
ASC	Asynchronous Serial Controller
CLDC	Connected Limited Device Configuration
CSD	Circuit-Switched Data
DAI	Digital Audio Interface
DCD	Data Carrier Detect
DSR	Data Set Ready
GPIO	General Purpose I/O
GPRS	General Packet Radio Service
GPS	Global Positioning System
HTTP	Hypertext Transfer Protocol
I/O	Input/Output
IDE	Integrated Development Environment
IDS	Integrated Documentation Suite
IP	Internet Protocol
Java ME™	Java Mobile Edition aka. J2ME
Java SE™	Java Standard Edition
JAD	Java Application Description
JAR	Java Archive
JDK	Java Development Kit
JVM	Java Virtual Machine
LED	Light Emitting Diode
ME	Mobile Equipment
MES	Module Exchange Suite
MIDP	Mobile Information Device Protocol
OTA	Over The Air
OTAP	Over The Air Provisioning of Java Applications
PDP	Packet Data Protocol
PDU	Protocol Data Unit
SDK	Standard Development Kit
SMS	Short Message Service
SMTK	Siemens Mobile Toolkit
TCP	Transfer Control Protocol
URC	Unsolicited Result Code

Abbreviation	Description
URL	Universal Resource Locator
VBS	Visual Basic Script
WTK	Wireless Toolkit

3 Installation

3.1 System Requirements

The Siemens Mobility Toolkit (SMTK) requires that you have:

1. Windows 2000, Windows XP or Windows Vista¹ installed
2. 110 Mbytes free disk space for SMTK
3. Administration privileges
4. Java 2 SDK, Standard Edition 1.4. To install the JDK version 1.4.2_09 provided, follow the instructions in [Section 3.5.1](#)
Java 2 SDK, Standard Edition 1.5 is required for TC65.

If a Java IDE such as NetBeans IDE 5.0, NetBeans IDE 5.5.1¹, Eclipse 3.0.1, Eclipse 3.0.2, Eclipse 3.1.0, Eclipse 3.1.1, Eclipse 3.1.2, Eclipse 3.2.x¹, JBuilder X, 2005 or 2006 Enterprise/Developer is installed, it can be integrated into the SMTK environment during the installation of the SMTK. To install one of the IDEs, follow the installation instructions in [Section 3.5.3](#) and [Section 3.5.4](#) respectively.

If you wish to access the module via USB ensure that the USB cable is plugged between the module's USB interface and the PC. Unless already done, install the appropriate USB modem driver. To do so, use the "usbmodem.inf" file supplied with your Siemens module.

¹. Supported only for TC65

3.2 Installation CD for AC65/AC75 and XT65/XT75

The Siemens Mobility Toolkit Installation CD includes:

- Module Exchange Suite (MES setup is distributed on CD under "MES\Setup.exe")
- WTK (is distributed as zip file on the CD e.g. "WTK\ac75_wtk.zip")
 - bin
 - various tools
 - doc
 - html
 - java docs for APIs
 - lib
 - classes.zip
 - src
 - various examples
- Java SDK
 - J2sdk-1_4_2_09-windows-i586-p.exe
- NetBeans IDE 5.0
 - netbeans-5_0-windows.exe (NetBeans IDE 5.0)
 - netbeans_mobility-5_0-win.exe (NetBeans Mobility package 5.0)
- Eclipse 3.1.2
 - eclipse-SDK-3.1.2-win32.zip (Eclipse 3.1.2)
- EclipseME plugin 1.2.3²
 - eclipseme.feature_1.2.3_site.zip (Eclipse ME Plugin 1.2.3)
- EclipseME plugin 1.5.0³
 - eclipseme.feature_1.5.0_site.zip (Eclipse ME Plugin 1.5.0)
- EclipseME plugin WM (only required for Eclipse 3.0.1 and Eclipse 3.0.2)
- GPS Evaluation Software ⁴
 - ucentersetup.exe (GPS Evaluation SW)
- Integrated Documentation Suite (IDS)
 - IDS.zip
- Documents:
 - DSB75_HW_Description.pdf
 - <productname>_AT_Command_Set.pdf
 - <productname>_HW_Description.pdf
 - <productname>T_HW_Description.pdf (only if terminal version is available)
 - <productname>_ReleaseNote.pdf
 - Java_UserGuide.pdf (this document)
 - Remote_SAT_Guide.pdf
 - AN_02_Audio.pdf
 - AN_07_Battery.pdf
 - AN_16_FW_Update.pdf
 - AN_17_OTA_FW_Update.pdf
 - AN_22_TTY.pdf
 - AN_24_Dev_Guide.pdf
 - AN_32_USB.pdf

Some of the content can only be accessed after the installation.

² EclipseME plugin 1.2.1 is also supported, but not distributed as part of the CD.

³ EclipseME plugin 1.5.0 is supported by TC65, XT65/XT75 and AC65/AC75. It is distributed as part of the installation CD.

⁴ GPS Evaluation Software is only distributed as part of the XT75 CD (only for products with GPS)

3.3 Installation CD for TC65

The Siemens Mobility Toolkit Installation CD includes:

- Module Exchange Suite (MES setup is distributed on CD under "MES\Setup.exe")
- WTK (is distributed as zip file on the CD e.g. "WTK\tc65_wtk.zip")
 - bin
 - various tools
 - doc
 - html
 - java docs for APIs
 - lib
 - classes.zip
 - src
 - various examples
- Java SDK
 - jdk-1_5_0_07-windows-i586-p.exe
- NetBeans IDE 5.5.1
 - netbeans-5_5_1-windows.exe (NetBeans IDE 5.5.1)
 - netbeans_mobility-5_5_1-windows.exe (NetBeans Mobility package 5.5.1)
- Eclipse 3.1.2
 - eclipse-SDK-3.1.2-win32.zip (Eclipse 3.1.2)
- Eclipse 3.2.2
 - eclipse-SDK-3.2.2-win32.zip (Eclipse 3.2.2)
- EclipseME plugin 1.5.5
 - eclipseme.feature_1.5.5_site.zip (Eclipse ME Plugin 1.5.5)
- EclipseME plugin 1.6.8
 - eclipseme.feature_1.6.8_site.zip (Eclipse ME Plugin 1.6.8)
- Integrated Documentation Suite (IDS)
 - IDS.zip
- Documents:
 - <productname>_Datasheet.pdf
 - DSB75_HW_Description.pdf
 - <productname>_AT_Command_Set.pdf
 - <productname>_HW_Description.pdf
 - <productname>T_HW_Description.pdf (only if terminal version is available)
 - <productname>_ReleaseNote.pdf
 - Java_UserGuide.pdf (this document)
 - Remote_SAT_Guide.pdf
 - AN_02_Audio.pdf
 - AN_07_Battery.pdf
 - AN_16_FW_Update.pdf
 - AN_22_TTY.pdf
 - AN_24_Dev_Guide.pdf
 - AN_26_Power_Supply.pdf
 - AN_32_USB.pdf
 - AN_45_Jamming_Detection_RLS.pdf

Some of the content can only be accessed after the installation.

3.3.1 Components

3.3.1.1 Module Exchange Suite

The Module Exchange Suite allows the developer to access the Flash file system on the cellular engine from the development environment over a serial interface. File transfers from PC to module are greatly facilitated by this suite.

The Module Exchange Suite (MES) will be installed under the following directories:

- MES executables (e.g. MESCopy.exe, etc.) in the windows system directory (e.g. C:\WINDOWS\system32)
The version of the MES executables can be read out by using the Windows Explorer context menu → Properties and selecting the Version tab (e.g. MESCopy.exe Version 1.0.0.12, etc.)
- MES server files under "ModuleExchange" directory (e.g. C:\Program Files\ModuleExchange)
The version of the dll files can be read out by using the Windows Explorer context menu → Properties and selecting the Version tab (e.g. MESShellExt.dll Version: 2.0.0.19, MESServer.exe Version: 2.0.0.38, MESSearchApp.exe Version: 2.0.0.5)

The MES installation version can be found under *Control Panel* → *Add or Remove Programs* selecting the installed MES program and clicking on support information (e.g. version 1.00.0008).

3.3.1.2 WTK

WTK is the directory where all the necessary components for product specific Java application creation and debugging are stored.

The version of the installed WTK is stored under the root of the WTK directory in a text file. (e.g. C:\Program Files\Siemens\SMTK\<product name>\WTK\VersionWTK.txt)

3.3.1.3 SDK / JDK

This is software provided by SUN to support Java application development.

SMTK emulator uses the following JDK (stored in JavaSoft Registry key) for starting the Debug Agent:

- Registry path:
HKEY_LOCAL_MACHINE\SOFTWARE\JavaSoft\Java Development Kit\1.4
HKEY_LOCAL_MACHINE\SOFTWARE\JavaSoft\Java Development Kit\1.5⁵
- Registry key:
JavaHome (e.g. "C:\j2sdk1.4.2_09")
JavaHome (e.g. "C:\Program Files\Java\jdk1.5.0_07")⁵
- Registry path:
HKEY_LOCAL_MACHINE\SOFTWARE\JavaSoft\Java Runtime Environment\1.4
HKEY_LOCAL_MACHINE\SOFTWARE\JavaSoft\Java Runtime Environment\1.5⁵
- Registry key:
JavaHome (e.g. "C:\Program Files\Java\j2re1.4.2_09")
JavaHome (e.g. "C:\Program Files\Java\j2re1.5.0_07")⁵

3.3.1.4 NetBeans IDE 5.0

This is a Java IDE provided by SUN to support Java application development.

3.3.1.5 NetBeans IDE 5.5.1

This is a Java IDE provided by SUN to support Java application development. NetBeans IDE 5.5.1 is only supported on TC65 CD.

⁵. required for TC65

3.3.1.6 Eclipse 3.1.2 IDE and Eclipse ME Plugin 1.5.x

This is a Java IDE provided by the Eclipse Foundation to support Java application development. The integration of SMTK into Eclipse with ME Plugin 1.5.0 is supported by the TC65, XT65/XT75 and AC65/AC75 CDs. Eclipse ME Plugin 1.5.5 is only distributed on TC65 CD. The installed Eclipse Version and ME Plugin can be read out after starting Eclipse and selecting:

- Eclipse menu *Help* → *About Eclipse SDK* and looking for the Eclipse version:
e.g. Version: 3.1.2 Build id: M20060118-1600
- Eclipse menu *Help* → *About Eclipse SDK*, press the *Feature Details* button and look for the ME Plugin version:
e.g. EclipseME J2ME Development Tools for the Eclipse Version: 1.5.0

Used JDK from IDE (e.g. selecting Eclipse menu *Help* → *About Eclipse SDK* → *Configuration Details* and look for "java.version" and "java.vm.version").

3.3.1.7 Eclipse 3.2.2 IDE and Eclipse ME Plugin 1.5.5 or 1.6.8

This is a Java IDE provided by the Eclipse Foundation to support Java application development. The integration of SMTK into Eclipse 3.2.2 with ME Plugin 1.6.8 is only supported by the TC65 CD. The installed Eclipse Version and ME Plugin can be read out after starting Eclipse and selecting:

- Eclipse menu *Help* → *About Eclipse SDK* and looking for the Eclipse version:
e.g. Version: 3.2.2 Build id: M20070212-1330
- Eclipse menu *Help* → *About Eclipse SDK*, press *Feature Details* button and look for the ME Plugin version:
e.g. EclipseME J2ME Development Tools for the Eclipse Version: 1.5.5
e.g. EclipseME J2ME Development Tools for the Eclipse Version: 1.6.8

Used JDK from IDE (e.g. selecting Eclipse menu *Help* → *About Eclipse SDK* → *Configuration Details* and look for "java.version" and "java.vm.version").

3.3.1.8 GPS Evaluation Software

The GPS Evaluation Software (u-center) was developed by u-blox AG, Switzerland. This software demonstrates the capabilities of global positioning system (GPS) part incorporated in the XT75 module.

The latest version of the GPS Evaluation Software (u-center) can be downloaded for free from the internet: http://www.u-blox.com/products/u_center.html.

The installed GPS Evaluation Software Version can be read out after starting u-center and selecting:

u-center menu Help → About u-center... and looking for the u-center version:
e.g. Version 4.00 Build
Inside this dialog box you will find contact and support address as well.

Please make the following preparations before using the u-center tool together with XT75 (module with GPS support):

Step 1:

Install u-center
→ GPS_Evaluation_SW\ucentersetup.exe (on XT75 CD)

Step 2:

Switch to transparent GPS mode by using the AT command
AT^SGPSS=1,1

Step 3:

Configure the connected COM port (ASC0 of the XT75 module) by using the
u-center menu Receiver → Port and Receiver → Baudrate

Now the XT75 module and the u-center are ready for operation.

3.3.1.9 Integrated Documentation Suite (IDS)

The Integrated Documentation Suite (IDS) is installed together with SMTK and can be accessed via index.html file under the directory “\IDS” with a browser. Another possibility to access IDS is by using the IMP-NG Java documentation “Javadoc” inside the IDE and selecting the hyperlink IDS placed inside the main menu of IMP-NG Javadoc.

Please keep in mind that the internal structure of JBuilder IDE does not support opening the IDS from inside the JBuilder IDE using hyperlinks.

A further hyperlink to IDS is located in the start menu of <productname> and can be selected via “Integrated Documentation Suite (IDS)”.

3.4 Set up Java Development Environment with Eclipse IDE (Quick Start-up)

Please complete the following steps to set up your Eclipse Java development environment:

Step 1:

Install JDK 1.4.2_09

→ JDK 1.4\j2sdk-1_4_2_09-windows-i586-p.exe

For TC65 install JDK 1.5.0_07 , if no JDK 1.5 or higher is installed on your machine.

Step 2:

Install Eclipse 3.1.2

→ Unzip from CD ("Eclipse\eclipse-SDK-3.1.2-win32.zip") to "C:\Program Files\Eclipse"
(Installation of Eclipse 3.2.2 to be employed with TC65 is completed in the same way.)

Step 3:

Installation Eclipse ME plugin 1.2.3:

(Installation of Eclipse ME plugin 1.6.8 to be employed with TC65 is completed in the same way)

- Start Eclipse IDE
- Select the default workspace suggested by Eclipse
- Start ME plugin installer using Eclipse menu
Help → Software Updates → Find and Install.

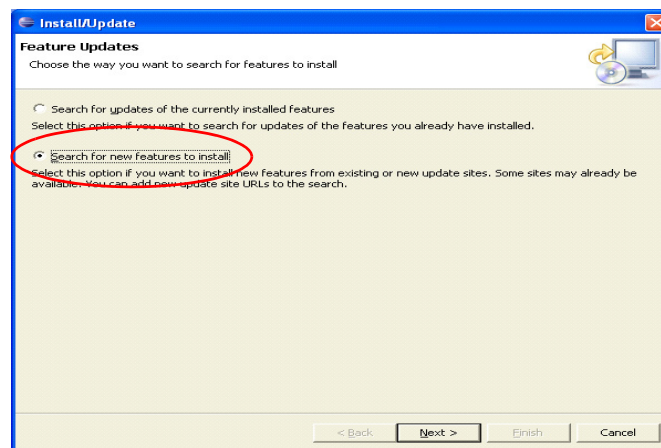


Figure 2: Installation of Eclipse ME-Plugin 1.2.3: Dialog box *Feature Updates*

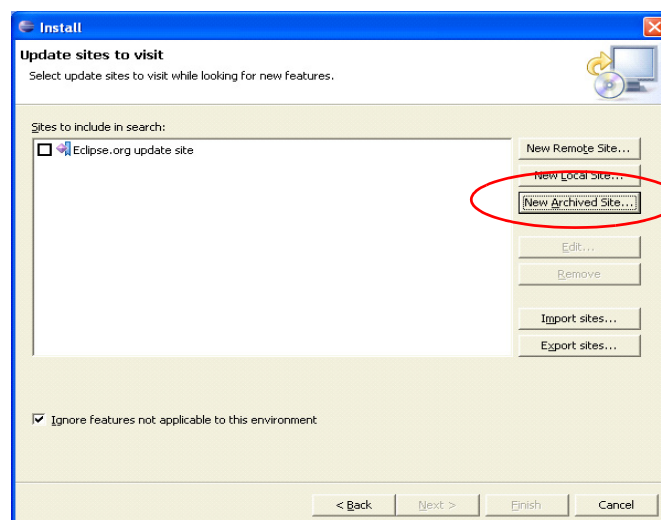


Figure 3: Installation of Eclipse ME-Plugin 1.2.3: Dialog box *Updates sites to visit*

- Select the path where Eclipse ME plugin is located on CD (EclipseMEplugin_123\.....") and select „eclipseme.feature_1.2.3_site.zip"

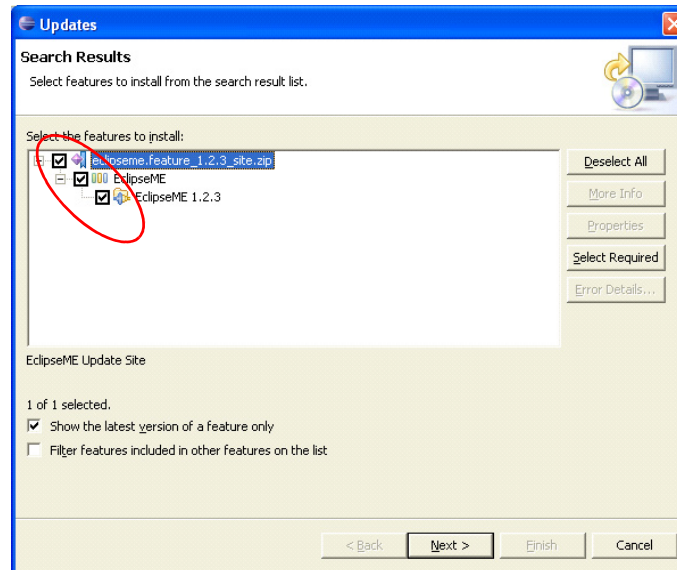


Figure 4: Installation of Eclipse ME-Plugin 1.2.3: dialog box *Search Results*

- In the dialog box *Verification*, select *Install All*.
- In the dialog box *Install/Update*, select *Yes* to restart Eclipse.

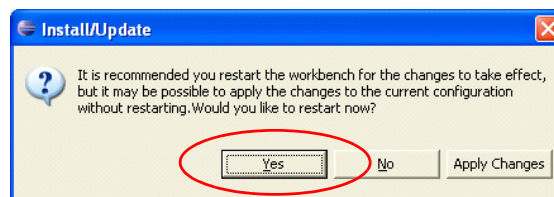


Figure 5: Installation of Eclipse ME-Plugin 1.2.3: dialog box *Restart Eclipse*

- Eclipse IDE is restarted. Please close Eclipse IDE before continuing with installation of SMTK!

Step 4:

Installation of the product's SMTK:

- Start "setup.exe" from CD root path.
- Choose the destination folder of Eclipse "C:\Program Files\Eclipse" in the dialog box *Select Eclipse Folder*.
- Select SMTK (e.g. C:\Program Files\Siemens\SMTK) in dialog box *Destination Folder*.
- Use the the dialog box *Select COM Port* to specify the connection type for on-device debugging and MES transfer (downloading the MIDlet to the module):
 - a) Standard 19200 Modem: Choose the *COM port* and set the *baud rate* (e.g. 115200).
 - b) USB modem: Select "*Siemens AG WM USB Modem*". Note that the USB modem has to be installed previously using Siemens "usbmodem.inf" file.
- After that, MES will be installed without further user action. Please wait until setup is complete.
- Click *Finish* in the summary dialog to confirm the completed installation.

A detailed description of the SMTK installation is given in the following chapters.

3.5 Siemens Mobility Toolkit Installation

The SMTK comes with an installation CD. The installation program automatically installs the necessary components and IDE integrations. Software can be uninstalled and updated with the install program. The next sections cover the installation and removal of the SMTK and the installation of the SDK and the supported IDEs.

3.5.1 Installing the Standard Development Toolkit

1. The JDK version 1.4.2_09 is provided on the SMTK installation disk in the subdirectory "JDK 1.4". To begin the installation, start the "j2sdk-1_4_2_09-windows-i586-p.exe" and follow the instructions of the JDK setup procedure. If there is no JDK installed on the target machine the installation of the provided JDK will be offered automatically during the SMTK installation process. The JDK version 1.5.0_07 is provided and required for TC65.
2. Once the toolkit has been installed, the environment variable "path" can be altered to comfortably use the JDK tools. This is not necessary for using the Siemens SMTK.
3. Open the Control Panel:
 - Open *System*.
 - Click on *Advanced*.
 - Click on the *Environment Variables* button.
 - Choose *path* from the list of system variables.
 - Append the path for the bin directory of the newly installed SDK to the list of directories for the *path* variable.

3.5.2 Installing the SMTK Environment

Before you start the installation please make sure all applications, especially the IDEs are closed.

1. Insert the CD, start setup.exe. When the dialog box appears press the *Next* button.
2. You will be asked to read the license agreement. If you accept the agreement, press *Yes* to continue with the installation.
3. A file including special information about the installation and use of the SMTK is shown. Press *Next* to continue.
4. You will be asked to enter the path name where Eclipse 3.0.1, 3.0.2, 3.1.0, 3.1.1, 3.1.2 or 3.2.x⁶ is installed. Please type in the folder where Eclipse with the ME plugin is installed and press *Next*. If you have not installed Eclipse or do not want to integrate the SMTK into Eclipse, please press *Next* without typing in a selected folder.
5. The installation software checks for the Java SDK. If there is no SDK on the system the installation procedure now offers to install the provided JDK. If this step is refused, the setup process will not continue because a properly installed JDK is mandatory for using the SMTK environment.
6. At this point, the installation software checks for a Java IDE to be integrated with the SMTK. A Java IDE is not necessary to use the SMTK. The IDE installation can be done at any time even if the SMTK is already installed. To integrate the SMTK into the Java IDE run the SMTK setup program in maintenance mode again. However, you can continue the setup procedure and install the IDE installation later or cancel the setup program at this stage and restart it after installing one of the supported Java IDEs. In case you wish to install a Java

⁶. Supported only for TC65

IDE please follow the instructions below and in [Section 3.5.3](#). If no installed IDE is found the SMTK offers to install NetBeans IDE 5.0 and NetBeans Mobility package 5.0 (NetBeans 5.5.1 and NetBeans Mobility package 5.5.1 is distributed with TC65 CD). Alternatively, you can install the SUN IDE by following the instructions in [Section 3.5.3](#).

7. If the SDK and one or more Java IDEs are found, you will be asked to choose which IDE you want integrated into the development environment. Once an IDE has been found and selected, press *Next* to continue. Ensure that your Java IDE is closed.
8. Select the folder where the SMTK will be installed. A folder will be suggested to you but you may browse to select a different one.
9. Choose the path that SMTK will appear under in the Start Menu.
10. In the next installation dialog box you will be asked to create a Dial-up Network connection for on-device debugging. This Dial-up Network connection can be configured either for the Standard 119200 bps Modem integrated in Windows or the USB modem. As a result, a Dial-up Network connection will be created named "IP connection for remote debugging" (the connection will be available after the entire installation of the SMTK environment).
 - If a Dial-up Network connection named "IP connection for remote debugging" is already available for another Siemens IMP-NG product, you can choose to reconfigure the existing connection by pressing *Yes* or leave it unchanged by pressing *No*.
 - If you have selected *Yes* or if there was no on-device connection before, check either "*Serial COM port for using the standard modem installation*" or "*USB COM port for using the USB modem installation*".
 - If you have chosen the Standard 119200 bps Modem select the COM port number, click *Next*. In the resulting dialog box select the baud rate and click *Next* again.
 - If you have chosen the USB modem the available USB modems will be listed. Choose the "Siemens AG WM USB Modem" and click *Next*.

Note: You can reconfigure the COM port for the Dial-Up Network connection any time after the installation by starting the SMTK setup in maintenance mode and selecting "Repair" mode.
11. Select the IP address used for IMP-NG on-device debugging and the UPD port number used for switching the Java "System.out" direction to serial port output.
12. A brief summary of all entries made is shown. Press *Next* to continue.
13. A status message box informs you that the Module Exchange Suite (MES) will be installed now. A separate MES setup wizard opens. Please follow the setup wizard's instructions.
14. All necessary files will be copied from the CD into the target folder.
15. This is the final step. Again, a listing of all installed components appears. Please press *Finish* to end the installation.

How to use the "Modify" or "Repair" mode:

To open either mode click *Control Panel* → *Add or Remove Programs*. Select SMTK installation and press "Modify" or "Repair":

Please keep in mind, that Windows system requires the same location of the installation CD, if you like to use "Modify" or "Repair" for the SMTK installation. The installer is searching for *.msi file and an installer message box will pop up, telling the user to locate the installation CD in the corresponding drive and path. If the installation CD is not located on the displayed drive and path, please insert the CD or copy the CD contents into the required location (drive and path).

Note for installing the SMTK environment on Windows 2000 systems:

Please delete all modems with device name "Standard 19200 bps Modem" before installing the SMTK environment on a Windows 2000 system, because this modem device is used during automatic modem installation and on-device debugging.

3.5.3 Installing NetBeans IDE 5.0 / NetBeans IDE 5.5.1

1. NetBeans IDE 5.0 is provided on the SMTK installation disk in the subdirectory "NETBEANS_5_0". To begin installation, start first "netbeans-5_0-windows.exe" and follow the NetBeans IDE 5.0 setup procedure instructions.
2. Please install next the Mobility package of Sun™ NetBeans IDE 5.0. The Mobility package is required before integration of SMTK!

The Sun™ NetBeans IDE 5.5.1 is distributed with the TC65 CD. Please start "netbeans-5_5_1-windows.exe" for installation of Sun™ NetBeans 5.5.1 and "netbeans_mobility-5_5_1-windows.exe" for installation of Mobility package of Sun™ NetBeans IDE 5.5.1.

Note: The integration of the SMTK into Sun™ NetBeans IDE 5.0 / Sun™ NetBeans IDE 5.5.1 is done for all users.

3.5.4 Installing Eclipse 3.0, Eclipse 3.1 or Eclipse 3.2

Eclipse 3.1.2 (CD directory "\Eclipse\") and Eclipse ME Plugin 1.2.3 (CD directory "\EclipseME_123\")⁷ or Eclipse ME Plugin 1.5.0 (CD directory "\EclipseMEplugin_150\") are provided on the SMTK CD. The installation of Eclipse is shortly described in [Section 3.4](#).⁸

Eclipse can be freely downloaded from <http://www.eclipse.org>. In order to use Eclipse with the ME the EclipseME plug-in is also needed. It can be downloaded from <http://eclipseme.org>.

Using Eclipse 3.0.1 or Eclipse 3.0.2:

A customized version of this plug-in (CD directory "\EclipseME_WM\")⁹ for Eclipse 3.0.1 and 3.0.2 comes with SMTK. It is required to use this plug-in for Eclipse 3.0.1 and Eclipse 3.0.2, because EclipseME plugin 1.2.3 requires Eclipse 3.1.0 and later and not installable for the older Eclipse versions 3.0.1 and 3.0.2.

Using Eclipse 3.1.0, Eclipse 3.1.1 or Eclipse 3.1.2:

Please use EclipseME plug-in 1.2.1 or 1.2.3 for Eclipse version 3.1.0, Eclipse 3.1.1 or Eclipse 3.1.2.

Using Eclipse 3.2. (only supported for TC65):

Please use EclipseME plug-in 1.5.5 or 1.6.x.

It is recommended to use Eclipse 3.2.2 with ME 1.5.5 for working with Java Debugging session.

Note: Only one selection for an Eclipse version at a time for SMTK integration is possible.

⁷ Eclipse ME Plugin 1.2.3 is not provided on TC65 CD.

⁸ Eclipse ME Plugin 1.5.0 is supported on the TC65, XT65/XT75 and AC65/AC75 CDs.

⁹ "\EclipseME_WM" CD directory is not included on TC65 CD.

3.5.5 Installing Borland JBuilder X, 2005 and 2006 Enterprise/Developer

Borland JBuilder can be purchased from <http://www.borland.com/jbuilder>. There are also 30 days trial versions available on the website. Installation instructions can be found there.

Note: The installation path name of JBuilder should not include space characters.

3.5.6 Installing Module Exchange Suite (MES)

The Module Exchange Suite (MES) is installed during the SMTK installation. If you would like to install the Module Exchange Suite separately, repair or remove it, please use the Module Exchange Suite (MES) setup.exe, which is located on the SMTK installation disk in the subdirectory "MES".

3.6 SMTK Uninstall

The SMTK install package comes with an uninstall facility. The entire SMTK or parts of the package can be removed. To start the uninstall facility, open the *Control Panel*, select *Add/Remove Programs*, select the desired SMTK, e.g. *TC65 Software Development Kit* and follow the instructions. The standard modem and Dial-Up Network connection (DUN) are uninstalled automatically, if no SMTK IMP-NG product is installed in parallel. The user will be asked for uninstall of standard modem and Dial-Up Network (DUN) in the case, that another SMTK IMP-NG product is installed.

The Module Exchange Suite (MES) is not uninstalled automatically with the SMTK. If you would like to uninstall the Module Exchange Suite (MES) as well, please run the MES uninstall facility. To run the uninstall program, open the *Control Panel*, select *Add/Remove Programs*, select *Siemens Module Exchange Suite (MES)* and follow the instructions.

Please keep in mind, that standard modem (or USB modem), Dial-Up Network connection and Module Exchange Suite (MES) are required for a proper work of SMTK on-device debugging.

Note for customers migrating from TC45 to TC65:

If you uninstall the TC45 software after the installation of TC65 you need to run the TC65 SDK and MES setup in maintenance mode to restore several files required for TC65. To do so, open the Windows *Control Panel*, double-click *Add or Remove Programs*, select "TC65 Software Development Kit", press the *Change/Remove* button and select *Repair*. In the same manner, reinstall the Siemens Module Exchange Suite (MES)" As an alternative, to avoid this step, remove the TC45 package, before installing TC65 SDK and MES.

3.7 Upgrades

The SMTK can be modified, repaired or removed by running the setup program on the Installation CD.

4 Software Platform

In this chapter, we discuss the software architecture of the SMTK and the interfaces to it.

4.1 Software Architecture

The SMTK enables a customer to develop a Java application on a PC and have it be executable on the Java enabled module. The application is then loaded onto the module. The platform comprises:

- Java™ Micro Edition (Java ME™), which forms the base of the architecture.
The Java ME™ is provided by SUN Microsystems, <http://java.sun.com/javame/>. It is specifically designed for embedded systems and has a small memory footprint. The ME uses: CLDC 1.1 HI, the connected limited device configuration hot spot implementation. IMP-NG, the information module profile 2nd generation, this is for the most part identical to MIDP 2.0 but without the lcdui package.
- Additional Java virtual machine interfaces:
AT Command API
File I/O API
The data flow through these interfaces is shown in [Figure 7](#) and [Figure 29](#).
- Memory space for Java programs:
Flash File System: around 1700k (1200k in XT75)
RAM: around 400k
Application code and data share the space in the flash file system and in RAM.
- Additional accessible periphery for Java applications
 - A maximum of ten digital I/O pins usable, for example, as:
Output: status LEDs
 - Input: Emergency Button
 - One I2C/SPI Interface.
 - One Digital Analog Converter and two Analog Digital Converters.
 - Serial interface (RS-232 API): This standard serial interface could be used, for example, with an external GPS device or a current meter.For detailed information see [Section 4.2](#).

4.2 Interfaces

4.2.1 ASC0 - Serial Device

ASC0, an Asynchronous Serial Controller, is a 9-wire serial interface. It is described in [2]. Without a running Java application the module can be controlled by sending AT commands over ASC0. Furthermore, ASC0 is designed for transferring files from the development PC to the module. When a Java application is started, ASC0 can be used as an RS-232 port or/and System.out. Refer to [3] for details.

4.2.2 General Purpose I/O

There are ten I/O pins that can be configured for general purpose I/O. One pin can be configured as a pulse counter. All lines can be accessed under Java by AT commands or a Java API. See [1] and [2] for information about usage and startup behavior.

4.2.3 DAC/ADC

There are two analogue input lines and one analogue output line. They are accessed by AT commands. See [1] and [2] for details.

The TC65 Terminal does not feature DAC interface.

4.2.4 ASC1

ASC1 is the second serial interface on the module. This is a 4-pin interface (RX, TX, RTS, CTS). It can be used as a second AT interface when a Java application is not running or by a running Java application as RS-232 port or/and System.out.

The TC65 Terminal and products with GPS do not feature ASC1.

4.2.5 Digital Audio Interface (DAI)

The ME has a seven-line serial interface with one input data clock line and input/output data and frame lines to support the DAI. Refer to [1] and [2] for more information.

TC65 Terminal does not feature a DAI interface.

4.2.6 I2C/SPI

There is a 4 line serial interface which can be used as I2C or SPI interface. It is described in [2]. The AT^SSPI AT command configures and drives this interface. For details see [1].

4.2.7 GPS

The on-board GPS functionality can be accessed in 4 different ways from a Java application.

- AT commands via ATCommand
- Java API JSR179
- transparent via CommConnection
- transparent via ATCommand

It is discouraged to use the forth possibility since it uses up a valuable ATCommand instance. Use Java API for non-transparent, use CommConnection for transparent GPS access. Transparent and non-transparent modes can not be used concurrently but it is possible and in some cases may be necessary to use AT commands concurrently with the Java API e.g. for GPS power saving modes. For details about AT command related GPS functionality see [\[1\]](#).

The usage of CommConnection for GPS access is very straight forward. Calling Connector.open with port-id "gps0" opens a transparent channel to the GPS module. Then all protocols supported by the GPS hardware can be used.

The Java location API (JSR179) offers three basic functionalities (for details see [\[3\]](#)):

- location listener, a periodic call-back with current location information
- proximity listener, a call-back when a specified location is close
- landmark store, a storage for landmarks/way-points

The landmark store is persistent. The stores are saved to FFS under a:/lmstores/store_X.xml, where X is the number of the store (0 is the default store).

There can be 8 stores plus 1 default store each containing up to 100 landmarks in up to 8 categories ("no category" also counts as a category). Using AddressInfo with the landmarks might decrease the maximum number of possible landmarks in a store, depending on the amount of AddressInfo data being used. An IOException indicates that a store is full.

There is only one store active at a time. The current store information is kept in RAM and only written to FFS when the application switches to a different store or terminates. Saving a store might take up to 45s! During this time period the VM is blocked, no processing can be done in parallel.

One of the examples that come with the product CD is a tracking application that uses the Java location API.

GPS is only supported in XT75/XT65.

Products with GPS do not feature ASC1. So System.out is set to "null" device by default (see [Section 5.9](#)).

4.2.8 JVM Interfaces

IMP-NG	File API	AT Command API
Connected Limited Device Configuration (CLDC)		
Java ME		

Figure 6: Interface Configuration

Java ME, CLDC and MIDP were implemented by SUN. IMP-NG is a stripped down version of MIDP 2.0 prepared by Siemens and does not include the graphical interface LCDUI. Siemens developed additional APIs like the File I/O and the AT command API. Documentation for Java ME and CLDC can be found at <http://java.sun.com/javame/>. Documentation for the other APIs is found in [3].

4.2.8.1 IP Networking

IMP-NG provides access to TCP/IP similarly to MIDP 2.0.

Because the used network connection, CSD or GPRS, is fully transparent to the Java interface, the CSD and GPRS parameters must be defined separately either by the AT command AT^SJNET [1] or by parameters given to the connector open method, see [3].

4.2.8.2 Media

The playTone method and the tone sequence player are supported. For optimum performance use notes in the range of 48 to 105. Tones outside this range are affected by audio hardware filtering (see [2]).

Media package is only supported in TC65. See [3].

4.2.8.3 Other Interfaces

Neither the PushRegistry interfaces and mechanisms nor any URL schemes for the Platform-Request method are supported. See [3].

4.3 Data Flow of a Java Application Running on the Module

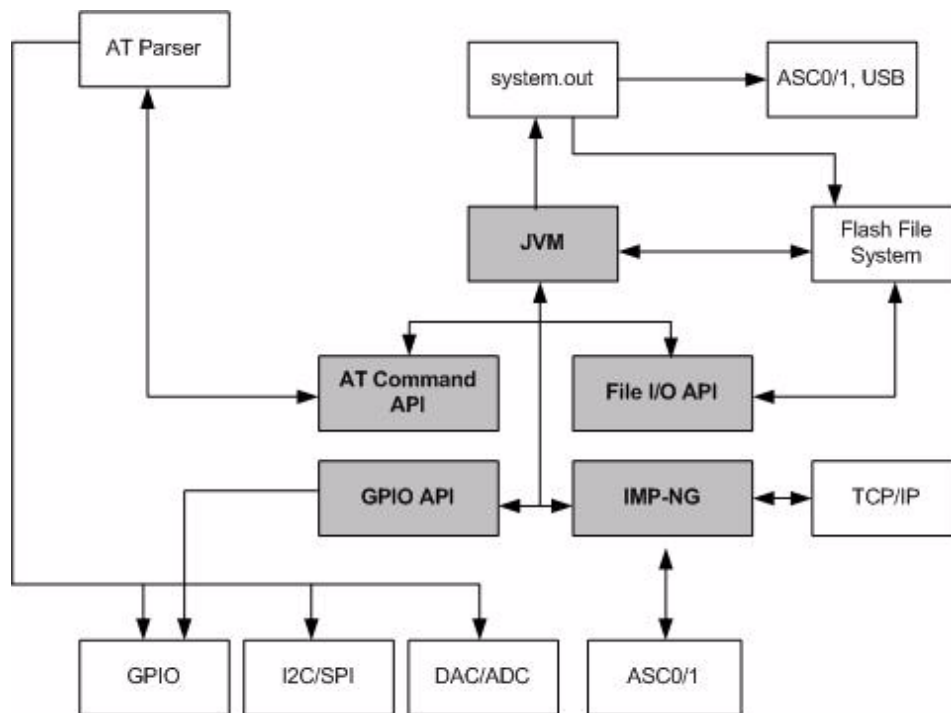


Figure 7: Data flow of a Java application running on the module.

The diagram shows the data flow of a Java application running on the module. The data flow of a Java application running in the debug environment can be found in [Figure 29](#).

The compiled Java applications are stored as JAR files in the Flash File System of module. When the application is started, the JVM interprets the JAR file and calls the interfaces to the module environment.

The module environment consists of the:

- Flash File System: available memory for Java applications
- TCP/IP: module internal TCP/IP stack
- GPIO: general purpose I/O
- ASC0: Asynchronous serial interface 0
- ASC1: Asynchronous serial interface 1
- I2C: 12Cbus interface
- SPI: Serial Peripheral Interface
- DAC: digital analog converter
- ADC: analog digital converter
- AT parser: accessible AT parser

The Java environment on the module consists of the:

- JVM: Java Virtual Machine
- AT command API: Java API to AT parser
- File API: Java API to Flash File System
- IMP-NG: Java API to TCP/IP and ASC0
- GPIO API: Java API to GPIO pins and pulse counter
- Watchdog API: Java API to HW watchdog
- Bearer Control API: Java API for bearer state information and hang-up.

4.4 Handling Interfaces and Data Service Resources

To develop Java applications the developer must know which resources, data services and hardware access are available.


- There are multiple AT parsers available
- There is hardware access over
 - two serial interfaces: ASC1 and ASC0 (both fully accessible).
 - general purpose I/O. To configure the hardware access, please refer to [\[1\]](#) and [\[2\]](#).
 - I2C/SPI
 - All restrictions of combinations are described in [Section 4.4.1](#)
- A Java application has:
 - instances of the AT command class, one with CSD and the others without, each of which would, in turn, be attached to one of the AT parsers.
 - two instances of access to a serial interface, ASC0 and ASC1, through the CommConnection API. Access to the control lines of these interfaces through CommConnection-ControlLines (TC65 only).
 - System.out over any serial interface or into the file system

4.4.1 Module States

The module can exist in the following six states in relation to a Java application, the serial interfaces, GPIO and I2C/SPI. See [\[1\]](#) for information about the AT commands referenced. A state transition diagram is shown in [Figure 11](#).

This section shows how Java applications must share AT parsers, GPIO pins and I2C/SPI resources. DAC, ADC and DAI are not discussed here.

Color legend for the following figures:

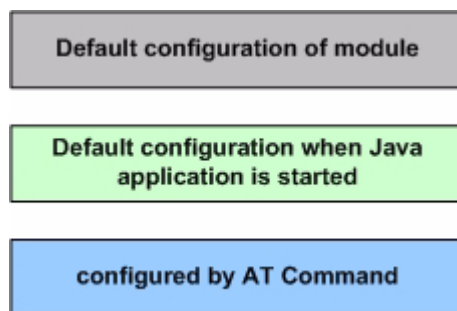

4.4.1.1 State 1: Default – No Java Running

This is the default state. The Java application is inactive and there is an AT interface with CSD on ASC0 as well as ASC1. The initial state of the pins is according to [\[4\]](#).

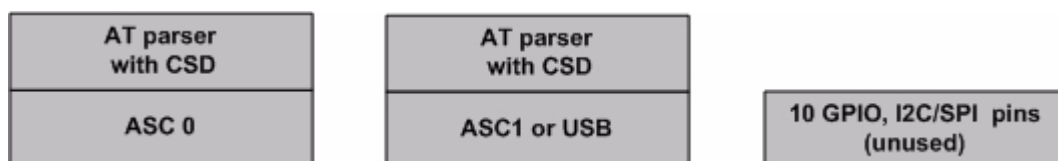


Figure 8: Module State 1

4.4.1.2 State 2: No Java Running, General Purpose I/O and I2C/SPI

The Java application is inactive. There is an AT parser with CSD on ASC0 as well as ASC1. Up to ten I/O pins are used as general purpose I/O plus a I2C/SPI interface. The pins are configured by AT^SCPIN and AT^SSPI (refer [\[1\]](#)).



Figure 9: Module State 2

4.4.1.3 State 4: Default – Java Application Active

The Java application is active and ASC0 and ASC1 are used as System.out and/or CommConnection. Java instances of AT commands are connected to the available AT parsers. The Java application is activated with AT^SJRA (refer to [\[1\]](#)) or autostart.



Figure 10: Module State 4

4.4.1.4 State 5: Java Application Active, General Purpose I/O and I2C/SPI

The Java application is active and ASC0 and ASC1 are used as System.out and/or CommConnection. The Java application is activated with AT^SJRA. The I/O pins are configured with AT^SCPIN, the I2C/SPI interface with AT^SSPI. Refer to [\[1\]](#) for AT command details.




Figure 11: Module State 5

4.4.2 Module State Transitions

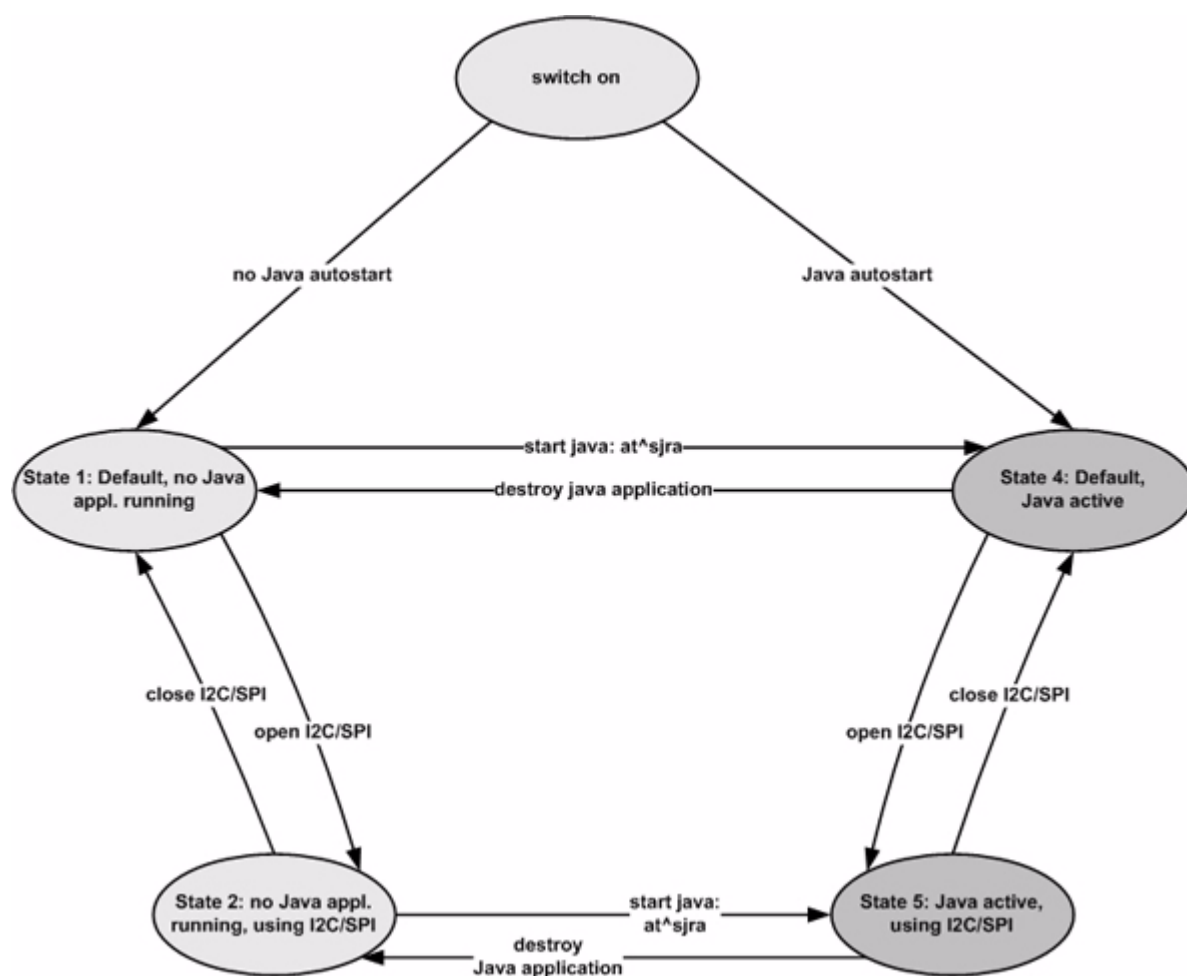


Figure 12: Module State Transition Diagram

Note: No AT parser is available over serial interface ASC0 or ASC1 while a Java application is running on the module.

5 Maintenance

The basic maintenance features of the ME are described below. Explicit details of these functions and modes can be found in [1] and [2].

5.1 IP Service

Apart from the standard Java IP networking interfaces (UDPDatagramConnection, SocketConnection, ...) the ME also supports a set of Internet Services controlled by AT command. There are some correlations between the Java and the AT IP Services.

- The connection profile 0 is also used by Java: when Java starts up a networking connection it tries to set and activate connection profile 0 with the parameters configured by AT^SJNET or in the connector.open method.
- Java tries to (re-)use an active Internet Service profile: if using connection profile 0 fails, because e.g. this (or another) connection profile is already used by the Internet Services, Java networking also uses this, already active, profile.
- Deactivation of the connection profile happens when all applications are finished: Java has its networking idle time. For the Internet Services an inactivity timeout referred to as parameter <inactTO> is available (configurable by AT^SICS and AT^SCFG).

So that means that Java networking and AT Internet Services can be used in parallel but care has to be taken about configuring and activation of the connection profile. In the simplest case use connection profile 0 for the Internet Services and set the parameters to the same values as the Java networking parameters. This way it makes no difference whether the connection is activated by the Internet Services or Java.

There are some aspects which have to be kept in mind for all IP Services (Java and AT command):

- When an open TCP connection is cut (e.g. the other side dies/is switched off) it takes around 10 minutes during which retransmissions are sent, until the situation is detected as an error (in Java an exception is thrown).
- The number of IP services used in parallel should be kept small. An active IP service uses up resources and may deteriorate the overall performance.
- If a user rapidly closes and opens TCP/IP connections (e.g. SocketConnection, HTTPConnection), a ConnectionNotFoundException reading "No buffer space available" may be thrown, explaining that all TCP/IP socket resources are exhausted. In the worst case, opening further TCP/IP connections is locked for up to 60 seconds.
- If a service is re-opened on the same port shortly after having closed the ServerSocketConnection, the ServerSocketConnection may not work properly. To ensure that the service works correctly the host is required to wait at least two minutes before reopening a server.
- For information about the bearer state, use the specific IP service command AT^SICI and, in addition, the general network commands AT+COPS and/or AT+CREG.

Some Java products feature the BearerControl class. This class provides bearer state information and a method to hang-up.

5.2 Remote SIM Access

While Remote SIM Access (RSA) is normally closely coupled with the GSM 07.10 multiplexer there are some things to keep in mind when using it with Java.

- Java must not be started when RSA and/or the GSM 07.10 multiplexer is activated.
- When activating the RSA mode (AT^SRSA) via a Java AT Command channel while Java is running the parameter <muxChan> of the AT^SRSA command is ignored and RSA is activated on the channel where the command was issued. The Input- and Outputstream can then be used to transfer RSA protocol data.

5.3 Power Saving

The module supports several power saving modes which can be configured by the AT command AT+CFUN [1]. Power saving affects the Java application in two ways. First, it limits access to the serial interface (RS-232-API) and the GPIO pins. Second, power saving efficiency is directly influenced by the way a Java application is programmed.

Java hardware access limitations:

- In NON-CYCLIC SLEEP mode (cfun=0) the serial interface cannot be accessed. Toggling RTS does end NON-CYCLIC SLEEP mode. In CYCLIC SLEEP mode (CFUN=7 or 9) the serial interface can be used with hardware flow control (CTS/RTS).
- In all SLEEP modes the GPIO polling frequency is reduced so that only signal changes which are less than 0.2Hz can be detected properly. Furthermore, the signal must be constant for at least 2.7s to detect any changes. For further details see AT^SCPOL in [1] or refer to [2].

Java power saving efficiency:

- As long as any Java thread is active, power consumption cannot be reduced, regardless whether any SLEEP mode has been activated or not. A Java application designed to be power efficient should not have any unnecessarily active threads (e.g. no busy loops). Threads waiting in a blocking method (e.g. read) do not hinder power saving.
- When using networking functionality close all connectors and hang-up the bearer manually (using ATH for circuit switched connections or AT+CGATT=0 in case of GPRS) every time you intend to reduce power consumption. Disable the network idle timeout (=0).

When going to low power mode there always might be a transition time of around 10s till low power consumption state is reached.

5.4 Charging

Please refer to [1] and [2] for general information about charging. Charging can be monitored by the running Java application. The JVM is active in Charge mode and in Charge-Only mode if autostart is activated. Only a limited number of AT commands are available when the module is in Charge-Only mode. A Java application must be able to handle the Charge-Only mode and reset the module to reinstate the normal mode. See [2] for information about the Charge-Only mode. The Charge-Only mode is indicated by URC “^SYSSTART CHARGE-ONLY MODE”.

Note: When a Java application is started in Charge-Only mode only AT Command APIs without CSD are available. The mode-indicating URC is created after issuing the very first AT command on any opened channel. To read the URC it is necessary to register a listener (see [3]) on this AT command API instance before passing the first AT command.

5.5 Airplane Mode

The main characteristic of this mode is that the RF is switched off and therefore only a limited set of AT commands is available. The mode can be entered or left using the appropriate AT^SCFG command. This AT command can also be used to configure the airplane mode as the standard startup mode, see [2]. The JVM is started when autostart is enabled. A Java application must be able to handle this mode. The airplane mode is indicated by URC “^SYSSTART AIRPLANE MODE”. Since the radio is off all classes related to networking connections, e.g. SocketConnection, UDPDatagramConnection, SocketServerConnection, HTTPConnection, will throw an exception when accessed.

5.6 Alarm

The ALARM can be set with the AT+CALA command. Please refer to the AT Command Set [1] and Hardware Interface Description [2] for more information. One can set an alarm, switch off the module with AT^SMSO, and have the module restart at the time set with AT+CALA. When the alarm triggers the module restarts in a limited functionality mode, the “airplane mode”. Only a limited number of AT commands are available in this mode, although the JVM is started when autostart is enabled. A Java application must be able to handle this mode and reset the module to reinstate the normal mode. The mode of a module started by an alarm is indicated by the URC “^SYSSTART AIRPLANE MODE”.

Note: For detailed information which functionality is available in this mode see [1] and [2]. The mode indicating URC is created after issuing the very first AT command on any opened channel.

5.7 Shutdown

If an unexpected shutdown occurs, data scheduled to be written will get lost due to a buffered write access to the flash file system. The best and safest approach to powering down the module is to issue the AT^SMSO command. This procedure lets the engine log off from the network and allows the software to enter a secure state and save all data. Further details can be found in [2].

5.7.1 Automatic Shutdown

The ME is switched off automatically in different situations:

- under- or overtemperature
- under- or overvoltage

Appropriate warning messages transmitted by the ME to the host application are implemented as URCs. To activate the URCs for temperature conditions use the AT^SCTM command. Undervoltage and overvoltage URCs are generated automatically when fault conditions occur.

For further detail refer to the commands AT^SCTM and AT^SBC described in the AT Command Set [1]. In addition, a description of the shutdown procedures can be found in [2].

5.7.2 Manual Shutdown

The module can be switched off manually with the AT command, AT^SMSO or when using the TC65 Terminal by pressing the ignition key for a period of time (see [2]). In these cases the midlets destroyApp method is called and the application has 5s time to clean up and call the notifydestroy method. After the 5s the VM is shut down.

5.7.3 Restart after Switch Off

When the module is switched off without setting an alarm time (see the AT Command Set [3]), e.g. after a power failure, external hardware must restart the module with the Ignition line (IGT). The Hardware Interface Description [2] explains how to handle a switched off situation.

5.7.4 Watchdog

The Watchdog class allows to access the HW watchdog of the system from application level. Depending on the setting (at^scfg) the userware watchdog can do nothing, switch-off or reboot the system.

Watchdog class is only available in TC65.

5.8 Special AT Command Set for Java Applications

For the full AT command set refer to [1]. There are differences in the behaviour AT commands issued from a Java application in comparison to AT commands issued over a serial interface.

5.8.1 Switching from Data Mode to Command Mode

Cancellation of the data flow with “+++” is not available in Java applications, see [1] for details. To break the data flow use *breakConnection()*. For details refer to [3].

5.8.2 Mode Indication after MIDlet Startup

After starting a module without autobauding on, the startup state is indicated over the serial interface. Similarly, after MIDlet startup the module sends its startup state (^SYSSTART, ^SYSSTART AIRPLANE MODE etc.) to the MIDlet. This is done via a URC to the AT Command API instance which executes the very first AT Command from within Java. To read this URC it is necessary to register a listener (see [3]) on this AT Command API instance before passing the first AT Command.

5.8.3 Long Responses

The AT Command API can handle responses of AT commands up to a length of 1024 bytes. Some AT commands have responses longer than 1024 bytes, for these responses the Java application will receive an Exception.

Existing workarounds:

- Instead of listing the whole phone book, read the entries one by one
- Instead of listing the entire short message memory, again list message after message
- Similarly, read the provider list piecewise
- Periods of monitoring commands have to be handled by Java, e.g. AT^MONI, AT^SMONG. These AT commands have to be used without parameters, e.g. for AT^MONI the periods must be implemented in Java.

5.8.4 Configuration of Serial Interface

While a Java application is running on the module, only the AT Command API is able to handle AT commands. All AT commands referring to a serial interface are ignored. This includes the commands:

- AT+IPR (sets a fixed local bit rate)
- AT\Q1, AT\Q2 and AT\Q3 (sets type of flow control)

If Java is running, the firmware will ignore any settings from these commands. Responses to the read, write or test commands will be invalid or deliver „ERROR“.

Note: When a Java application is running, all settings of the serial interface are done with the class *CommConnection*. This is fully independent of any AT commands relating to a serial interface.

5.8.5 Java Commands

There is a small set of special Java AT commands:

- AT^SJRA, start a Java application
- AT^SJNET, configuration of Java networking connections
- AT^SJOTAP, start and configuration of over the air provisioning
- AT^SJSEC, security configuration

Refer to the AT command Set [\[1\]](#).

5.8.6 AutoExec Function

Under Java, the AutoExec function's AT command execution has some restrictions (see [\[1\]](#) for details on the AutoExec function). If an AT command is executed, neither URC nor command response are indicated to the Java application. Therefore, it is recommended to use the AutoExec function under Java only with commands that shut down the module, e.g., with AT+CFUN=0,1, as a watch dog. Any other AT command execution should be implemented with Java means and the ATCommand class.

5.9 System Out

Any output printed to the System.out stream by a Java application can be redirected to one of the serial interfaces, a file, a "NULL" device (i.e. the output will be discarded) or a UDP socket for using the debugger from an IDE. The configuration can be done at any time using the AT command AT^SCFG (see [\[1\]](#) for details) and is non-volatile.

5.9.1 Serial interfaces

System.out can be written to any of the serial interfaces ASC0, ASC1 or USB. If System.out is redirected to one of the interfaces used for the Java CommConnection, the interface will be shared between System.out and the CommConnection. This will result in mixed output, if data is written to the CommConnections OutputStream and something is printed via System.out at the same time.

Using System.out and CommConnection on the same serial interface may be done if a device connected to the serial port is only transmitting data to the module. It is recommended to ensure already in the HW design that output from the module cannot be transferred to a connected device.

5.9.2 File

The System.out print can be redirected into log files within the module's flash file system. The output will be written alternatingly into two files which can be concatenated afterwards to have a single log file.

Writing the output to a file will slow down the virtual machine. To reduce the impact of logging the output may be written first to a buffer before it is written to the file (buffered mode). The buffered output is written either if the buffer is filled or after 200 ms. If the buffer is not used (secure mode) the output is written directly to the file. Because excessive writing to the module's flash file system decreases the life time of the flash memory, we recommend using the System.out to file redirection only during development phases.

5.9.3 UDP

Redirection to a UDP socket is used in conjunction with the debugger. UDP is used by default when using on-device-debugging ([Chapter 10](#)). This can be changed by editing the emulator's ini-file.

If the output is redirected to an UDP socket, any changes of the System.out configuration are ignored while the Virtual Machine is running. The UDP Socket settings will not be stored in the module.

5.10 GPIO

The GPIO Java API (classes: InPort, OutPort, InPortListener, StartStopPulseCounter, LimitPulseCounter and LimitPulseCounterListener) is a replacement for the GPIO AT commands (AT^SPIO, AT^SCPIN, ...). Using these classes frees up AT command resources and improves performance. Both APIs can only be used alternatively. Of course the basic system characteristics of a poll interval of 4.6ms (in SLEEP mode up to 2.7s) for pin state change detection does also apply here.

GPIO Java API is only supported in TC65.

5.11 Restrictions

5.11.1 Flash File System

The maximum length of a complete path name, including the path and the filename, is limited by the Flash file system on the module to 124 characters. It is recommended that names of classes and files be distinguished by more than case sensitivity.

5.11.2 Memory

The CLDC 1.1 HI features a just-in-time compiler. This means that parts of the Java byte code which are frequently executed are translated into machine code to improve efficiency. This feature uses up RAM space. There is always a trade off between code translation to speed up execution and RAM space available for the application.

5.12 Performance

The performance study was focused on comparable performance values under various circumstances.

5.12.1 Java

This section gives information about the Java command execution throughput ("jPS"= Java statements per second). The scope of this measurement is only the statement execution time, not the execution delay (Java command on AT interface → Java instruction execution → reaction on GPIO).

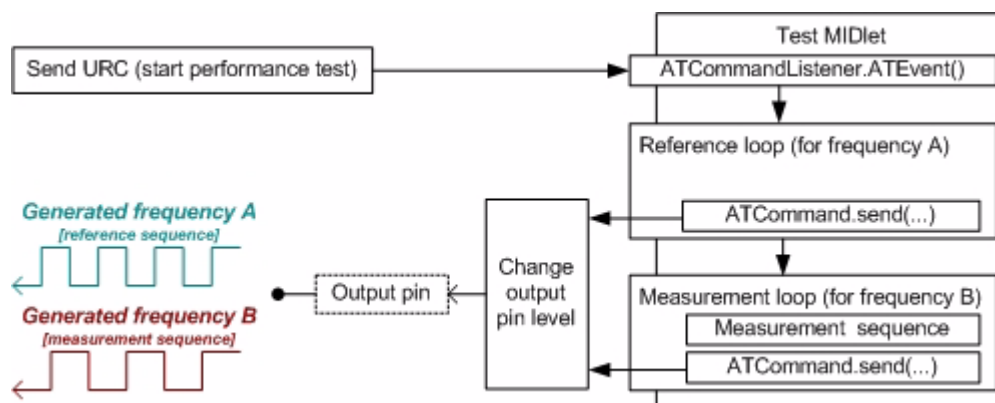


Figure 13: Test case for measuring Java command execution throughput

The following Java instruction was used for calculation of the typical jPS:

value = (2 x number of calculation statements) /
((1 / frequencyB) - (1 / frequencyA));

Measurement and calculation were done using:

- **duration of each loop** = 600 s
- **number of calculation statements** = 50 "result=(CONSTANT_VALUE/variable_value);"-Instructions (executed twice per pin cycle)
- **frequencyA** as measured with a universal counter
- **frequencyB** as measured with a universal counter

The reference loop has the same structure as the measurement loop except that the measurement sequence is moved.

State	jPS-Value (mean)
ME in IDLE mode / Not connected	~49000
CSD connection	~46000

Since only a small amount of Java code is executed in this test, it is easily optimized by the CLDC's HI just-in-time compiler. More complex applications might not reach that execution speed.

5.12.2 Pin I/O

The pin I/O test was designed to find out how fast a Java MIDlet can process URCs caused by Pin I/O and react to these URCs. The URCs are generated by feeding an input pin with an external frequency. As soon as the Java MIDlet is informed about the URC, it tries to regenerate the feeding frequency by toggling another output pin.

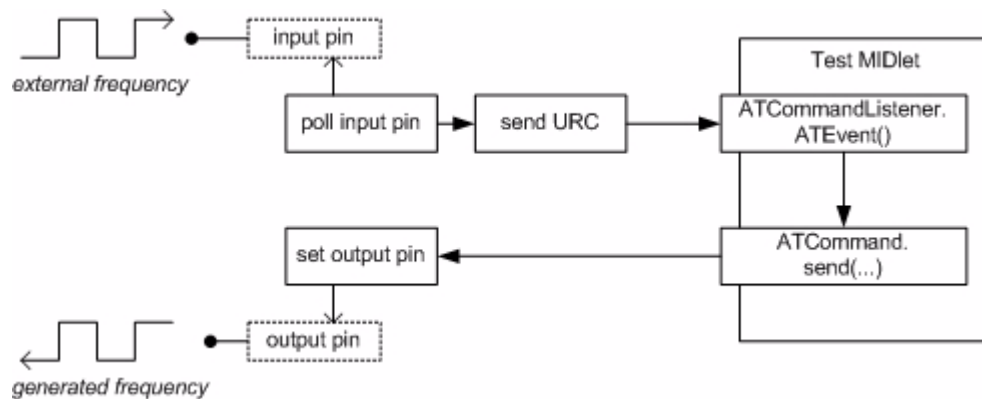


Figure 14: Test case for measuring Java MIDlet performance and handling pin-IO

The results of this test show that the delay from changing the state on the input pin to a state change on the output pin is at least around 50 ms, but that time strongly depends on the amount of garbage to collect and number of threads to be served by the virtual machine. Consequently, pin I/O is not suitable for generating or detecting frequencies.

5.12.3 Data Rates on RS-232 API

For details about the software platform and interfaces refer to [Chapter 4](#), "Software Platform". This section summarises limitations and preconditions for performance when using the interface `CommConnection` from package `com.siemens.mp.io` (refer to [\[3\]](#)).

The data rate on RS232 depends on the size of the buffer used for reading from and writing to the serial interface. It is recommended that method `read (byte[] b)` be used for reading from the serial interface. The recommended buffer size is 2kbyte. To achieve error free data transmission the flow control on `CommConnection` must be switched on: `<autorts>` and `<autocts>`, the same for the connected device.

Different use cases are listed to give an idea of the attainable data rates. All applications for measurement use only one thread and no additional activities other than those described were carried out in parallel.

5.12.3.1 Plain Serial Interface

Scenario: A device is connected to ASC0 (refer to [Section 4.2.4](#)). The Java application must handle data input and output streams. A simple Java application (with only one thread) which loops incoming data directly to output, reaches data rates up to 180kbit/s. Test conditions: hardware flow control enabled (<autorts> and <autocts>), 8N1, and baud rate on ASC0 set to 230kbaud (→ theoretical maximum: 184kbit/s net data rate).



Figure 15: Scenario for testing data rates on ASC1

5.12.3.2 Voice Call in Parallel

Same scenario as in [Section 5.12.3.1](#), but with a voice call added. The application reflects incoming data directly to output and, additionally, handles an incoming voice call. The data rates are also up to 180kbit/s. Test conditions: same as in [Section 5.12.3.1](#).

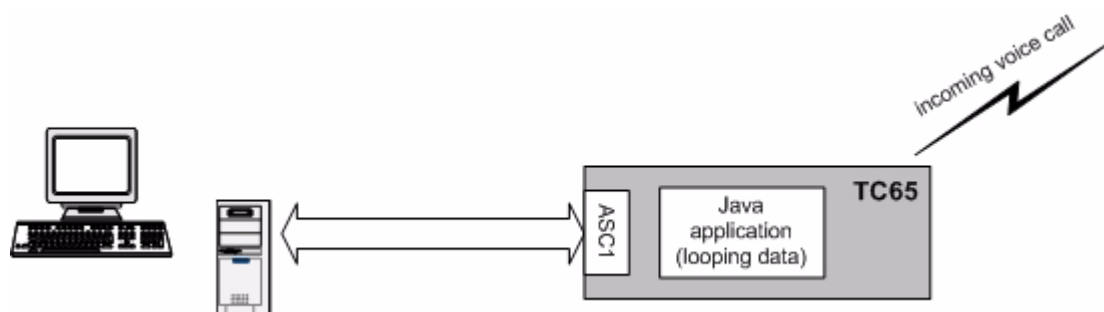


Figure 16: Scenario for testing data rates on ASC1 with a voice call in parallel

5.12.3.3 Scenarios with GPRS/EGDE Connection

The biggest challenges to the module performance are setting up a GPRS/EDGE connection, receiving data on `javax.microedition.io` interfaces and sending or receiving the data on the RS232 API with the help of a Java application.

5.12.3.4 Upload

The ME supports up to four uplink time slots for GPRS and up to two for EGDE. The Java application receives data over RS232 API and sends them over GPRS to a server.

Table 1: GPRS upload data rate with different number of timeslots, CS2

Upload data rate with x timeslots Coding scheme 2 [kbit/s]											
1 time-slot	theor. Value ¹	% from theor. Value	2 time-slots	theor. Value ¹	% from theor. Value	3 time-slots	theor. Value ¹	% from theor. Value	4 time-slots	theor. Value ¹	% from theor. Value
9	12	75%	15	24	63%	20	36	55%	16	48	33%

¹. net transmission rates for LLC layer

Table 2: GPRS upload data rate with different number of timeslots, CS4

Upload data rate with x timeslots Coding scheme 4 [kbit/s]											
1 time-slot	theor. Value ¹	% from theor. Value	2 time-slots	theor. Value ¹	% from theor. value	3 time-slots	theor. Value ¹	% from theor. value	4 time-slots	theor. Value ¹	% from theor. value
13	20	65%	22	40	55%	20	60	33%	13	80	16%

¹. net transmission rates for LLC layer

Table 3: EDGE upload data rate with two timeslots, CS5

Upload data rate with x timeslots Coding scheme 5 [kbit/s]		
2 timeslots	theor. Value ¹	% from theor. Value
33	44	73%

¹. net transmission rates for LLC layer

Table 4: EDGE upload data rate with two timeslots, CS9

Upload data rate with x timeslots Coding scheme 9 [kbit/s]		
2 timeslots	theor. Value ¹	% from theor. Value
72	118	61%

¹. net transmission rates for LLC layer

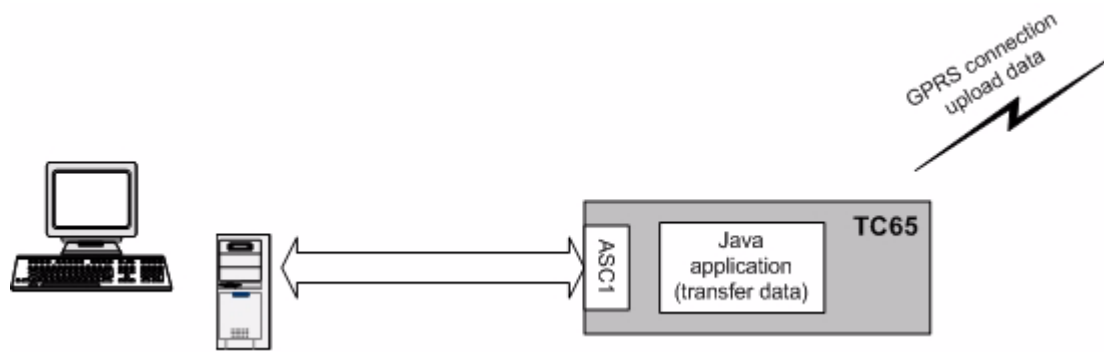


Figure 17: Scenario for testing data rates on ASC1 with GPRS data upload

5.12.3.5 Download

The data rate for downloading data over GPRS/EDGE depends on the number of assigned timeslots and the coding schemes given by the net. The ME supports up to four downlink time slots. For the measurements, the Java application receives data from the server over GPRS and sends them over RS232 to an external device.

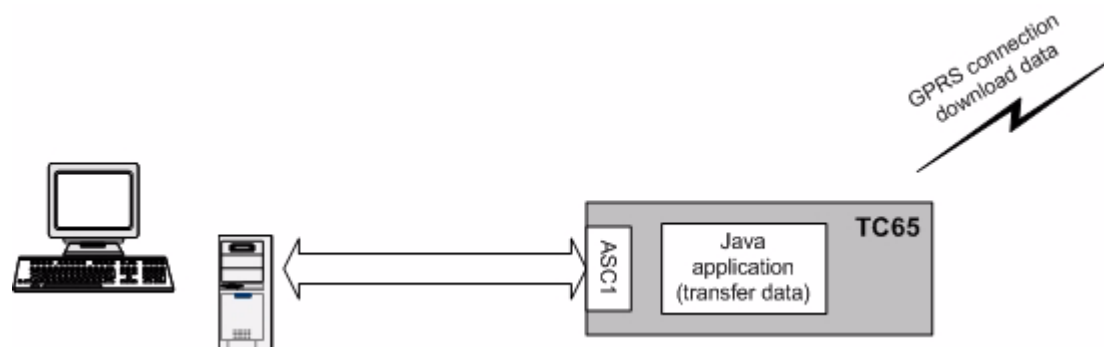


Figure 18: Scenario for testing data rates on ASC1 with GPRS data download

The tables below show the download data rates that can be achieved if hardware flow control is enabled on the CommConnection interface and the port speed is set to 460800.

Table 5: GPRS Download data rate with different number of timeslots, CS2

Download data rate with x timeslots Coding scheme 2 [kbit/s]											
1 time-slot	theor. Value ¹	% from theor. Value	2 time-slots	theor. Value ¹	% from theor. Value	3 time-slots	theor. Value ¹	% from theor. Value	4 time-slots	theor. Value ¹	% from theor. Value
11	12	91%	21	24	87%	29	36	81%	35	48	73%

¹. net transmission rates for LLC layer

Table 6: GPRS Download data rate with different number of timeslots, CS4

Download data rate with x timeslots Coding scheme 4 [kbit/s]											
1 time-slot	theor. Value ¹	% from theor. Value	2 time-slots	theor. Value ¹	% from theor. value	3 time-slots	theor. Value ¹	% from theor. value	4 time-slots	theor. Value ¹	% from theor. value
17	20	85%	31	40	78%	35	60	58%	38	80	48%

¹. net transmission rates for LLC layer

Table 7: EDGE Download data rate with different number of timeslots, CS5

Download data rate with x timeslots Coding scheme 5 [kbit/s]					
1 time-slot	theor. Value ¹	% from theor. Value	4 time-slots	theor. Value ¹	% from theor. Value
20	22	91%	78	89	87%

¹. net transmission rates for LLC layer

Table 8: EDGE Download data rate with different number of timeslots, CS9

Download data rate with x timeslots Coding scheme 9 [kbit/s]					
1 time-slot	theor. Value ¹	% from theor. Value	4 time-slots	theor. Value ¹	% from theor. value
50	59	85%	184	236	77%

¹. net transmission rates for LLC layer

5.13 System Time

When Java starts up, it initializes its time base from the system's real time clock. If the RTC is changed by AT command (AT+CCLK) later on, the Java time does not adjust. So, the time you get with (AT+CCLK) and the time you get with `System.currentTimeMillis()` may not necessarily be identical.

6 MIDlets

The Java ME™ Mobile Information Device Profile (MIDP) provides a targeted Java API for writing wireless applications. The MIDP runs on top of the Connected Limited Device Configuration (CLDC), which in turn, runs on top of the Java ME™. MIDP applications are referred to as MIDlets. MIDlets are controlled by the mobile device implementation that supports the CLDC and MIDP. Since IMP-NG is a subset of MIDP 2.0, IMP includes MIDlets. The MIDlet code structure is very similar to applet code. There is no main method and MIDlets always extend from the MIDlet class. The MIDlet class in the MIDlet package provides methods to manage a MIDlet's life cycle.

6.1 MIDlet Documentation

MIDP and MIDlet documentation can be found at <http://wireless.java.sun.com/midp/> and in the html document directory of the wtk,
...\Siemens\SMTK\<productname>\wtk\doc\index.html

6.2 MIDlet Life Cycle

The MIDlet life cycle defines the protocol between a MIDlet and its environment through a simple well-defined state machine, a concise definition of the MIDlet's states and APIs to signal changes between the states. A MIDlet has three valid states:

- *Paused* – The MIDlet is initialised and is quiescent. It should not be holding or using any shared resources.
- *Active* – The MIDlet is functioning normally.
- *Destroyed* – The MIDlet has released all of its resources and terminated. This state is only entered once.

State changes are controlled by the MIDlet interface, which supports the following methods:

- *pauseApp()* – the MIDlet should release any temporary resources and become passive.
- *startApp()* – the MIDlet starts its execution, needed resources can be acquired here or in the MIDlet constructor.

Note: Take care that the startApp() method is always properly terminated before calling the destroyApp() method. For example, avoid that threads launched by startApp() enter a closed loop, and be sure that all code was entirely executed. This is especially important for OTAP, which needs to call destroyApp().

- *destroyApp()* – the MIDlet should save any state and release all resources

Note: To destroy only the Java application without switching off the module, the destroyApp() method can be called explicitly. To destroy the Java application and switch off the module at the same time, it is sufficient to send the AT^SMSO command from somewhere in your code, because this procedure implies calling the destroyApp() method. Likewise, resetting the module with AT+CFUN=x,1 also implies calling the destroyApp() method. Note that AT+CFUN=x,1 will restart the module – to restart Java afterwards either use the autostart mode configured with AT^SCFG or restart Java with AT^SJRA.

From this you can see that the commands AT^SMSO and AT+CFUN=x,1 should never be sent within the destroyApp() method. It is good practice to always call the notifyDestroyed() method at the end of your destroyApp method. And use the destroyApp method as single exit point of your midlet.

- *notifyDestroyed()* – the MIDlet notifies the application management software that it has cleaned up and is done.
Note: the only way to terminate a MIDlet is to call *notifyDestroyed()*, but *destroyApp()* is not automatically called by *notifyDestroyed()*. You must not terminate your midlet (i.e. having no threads left) and not calling *notifyDestroyed()* before.
- *notifyPaused()* – the MIDlet notifies the application management software that it has paused
- *resumeRequest()* – the MIDlet asks application management software to be started again.

Table 9: A typical sequence of MIDlet execution

Application Management Software	MIDlet
The application management software creates a new instance of a MIDlet.	The default (no argument) constructor for the MIDlet is called; it is in the Paused state.
The application management software has decided that it is an appropriate time for the MIDlet to run, so it calls the <i>MIDlet.startApp</i> method for it to enter the Active state.	The MIDlet acquires any resources it needs and begins to perform its service.
The application management software no longer needs the application be active, so it signals it to stop performing its service by calling the <i>MIDlet.pauseApp</i> method.	The MIDlet stops performing its service and might choose to release some resources it currently holds.
The application management software has determined that the MIDlet is no longer needed, or perhaps needs to make room for a higher priority application in memory, so it signals the MIDlet that it is a candidate to be destroyed by calling the <i>MIDlet.destroyApp</i> method.	If it has been designed to do so, the MIDlet saves state or user preferences and performs clean up.

6.3 Hello World MIDlet

Here is a sample HelloWorld program.

```
/**
 * HelloWorld.java
 */

package example.helloworld;
import javax.microedition.midlet.*;
import java.io.*;

public class HelloWorld extends MIDlet {

    /**
     * HelloWorld - default constructor
     */
    public HelloWorld() {
        System.out.println("HelloWorld: Constructor");
    }

    /**
     * startApp()
     */
    public void startApp() throws MIDletStateChangeException {
        System.out.println("HelloWorld: startApp");
        System.out.println("\nHello World!\n");
        destroyApp();
    }

    /**
     * pauseApp()
     */
    public void pauseApp() {
        System.out.println("HelloWorld: pauseApp()");
    }

    /**
     * destroyApp()
     */
    public void destroyApp(boolean cond) {
        System.out.println("HelloWorld: destroyApp(" + cond + ")");
        notifyDestroyed();
    }
}
```

7 File Transfer to Module

7.1 Module Exchange Suite

The Module Exchange Suite allows you to view the Flash file system on the module as a directory from Windows Explorer. Make sure that the module is turned on and that one of the module's serial interfaces (ASC0, ASC1 or USB) is connected to the COM port that the Module Exchange Suite is configured to. The configured COM port can be checked or changed under Properties of the Module directory. Please note that the Module Exchange Suite can be used only if the module is in normal mode and the baud rate is configured to a fixed value of 460800, 230400, 115200, 57600, 38400 or 19200. While running the module with the Module Exchange Suite, subdirectories and files can be added to the flash file system of module. Keep in mind that a maximum of 200 flash objects (files and subdirectories) per directory in the flash file system of the module is recommended.

7.1.1 Windows Based

The directory is called "Module" and can be found at the top level of workspace "MyComputer". To transfer a file to the module, simply copy the file from the source directory to the target directory in the "Module → Module Disk (A:)".

7.1.2 Command Line Based

A suite of command line tools is available for accessing the module's Flash file system. They are installed in the Windows System directory so that the tools are available from any directory. The module's file system is accessed with *mod:*. The tools included in this suite are MESdel, MEScopy, MESxcopy, MESdir, MESmkdir, MESrmdir, MESport, MESclose and MESformat. Entering one of these commands without arguments will describe the command's usage. The tools mimic the standard directory and file commands. A path inside the module's file system is identified by using "mod:" followed by the module disk which is always "A:" (e.g. "MESdir mod:a:" lists the contents of the module's root directory).

7.2 Over the Air Provisioning

See [Chapter 8](#) for OTA provisioning.

7.3 Security Issues

The developer should be aware of the following security issues. Security aspects in general are discussed in [Chapter 12](#).

7.3.1 Module Exchange Suite

The serial interface should be mechanically protected.

The copy protection rules for Java applications prevent opening, reading, copying, moving or renaming of JAR files. It is not recommended that the name of a Java application (for example <name>.jar) be used for a directory, since the copy protection will refuse access to open, copy or rename such directories.

7.3.2 OTAP

- A password should be used to update with OTA (SMS Authentication)
- Parameters should be set to fixed values (AT^SJOTAP) whenever possible so that they cannot be changed over the air.
- The HTTP server should be secure. (e.g. Access control via basic authentication).

8 Over The Air Provisioning (OTAP)

8.1 Introduction to OTAP

OTA (Over The Air) Provisioning of Java Applications is a common practice in the Java world. OTAP describes mechanisms to install, update and delete Java applications over the air. The ME implements the Over The Air Application Provisioning as specified in the IMP-NG standard (JSR228).

The OTAP mechanism described in this document does not require any physical user interaction with the device; it can be fully controlled over the air interface. Therefore it is suitable for Java devices that are designed not to require any manual interaction such as vending machines or electricity meters.

8.2 OTAP Overview

To use OTAP, the developer needs, apart from the device fitted with the Java enabled module, an http server, which is accessible over a TCP/IP connection either over GPRS or CSD, and an SMS sender, which can send Class1, PID \$7d short messages. This is the PID reserved for a module's data download.

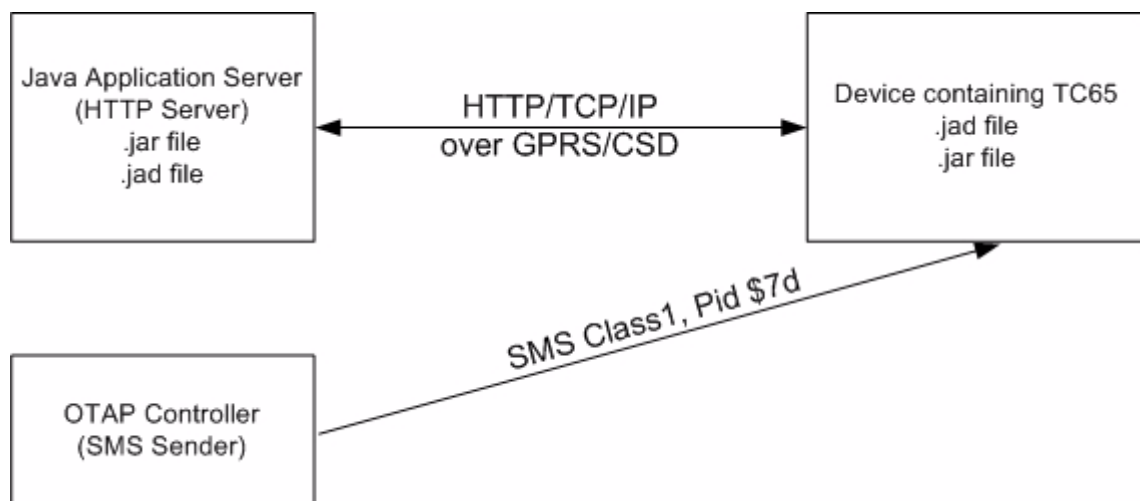


Figure 19: OTAP Overview

The Java Application Server (http Server) contains the .jar and the .jad file to be loaded on the device. Access to these files can be protected by http basic authentication.

The OTAP Controller (SMS Sender) controls the OTAP operations. It sends SMs, with or without additional parameters, to the devices that are to be operated. These devices then try to contact the http server and download new application data from it. The OTAP Controller will not get any response about the result of the operation. Optionally the server might get a result response over http.

There are two types of OTAP operations:

- Install/Update: A new JAR and JAD file are downloaded and installed.
- Delete: A complete application (.jar, .jad, all application data and its directory) is deleted.

8.3 OTAP Parameters

There is a set of parameters that control the OTAP procedures. These parameters can either be set by AT command (AT^SJOTAP, refer to [1] during the production of the device, or by SM (see Section 8.4) during operation of the device in the field. None of the parameters, which are set by AT command, can be overwritten by SM.

- JAD File URL: the location of the JAD file is used to install or update procedures. The JAD file needs to be located on the net (e.g. <http://someserver.net/somefile.jad> or <http://192.168.1.2/somefile.jad>).
- Application Directory: this is the directory where a new application (JAD and JAR file) is installed. The delete operation deletes this directory completely. When entering the application directory with AT^SJOTAP or a short message ensure that the path name is not terminated with a slash. For example, type "a:" or "a:/otap" rather than "a:/" or "a:/otap/". See examples provided in Chapter 6.
- http User: a username used for authentication with the http server.
- http Password: a password used for authentication with the http server.
- Bearer: the network bearer used to open the HTTP/TCP/IP connection, either GPRS or CSD.
- APN or Number: depending on the selected network bearer this is either an access point name for GPRS or a telephone number for CSD.
- Net User: a username used for authentication with the network.
- Net Password: a password used for authentication with the network.
- DNS: a Domain Name Server's IP address used to query hostnames.
- NotifyURL: the URL to which results are posted. This parameter is only used when the MIDlet-Install-Notify attribute or MIDlet-Delete-Notify attribute is not present in descriptor.

There are parameters that can only be set by AT command:

- SM Password: it is used to authenticate incoming OTAP SMs. Setting this password gives an extra level of security.
Note: If a password set by AT command, all SMs must include this password
- Ignore SM PID (TC65 only): when setting this the PID in received SMs is ignored.
- Hide HTTP authentication parameters (TC65 only): this allows to hide the http authentication parameters in the at^sjotap read command and the otap tracer.

Table 10: Parameters and keywords

Parameters	Max. Length AT	Keyword SM	Install/update	delete
JAD File URL	100	JADURL	mandatory	unused
Application Directory	50	APPDIR	mandatory	mandatory
HTTP User	32	HTTPUSER	optional	unused
HTTP Password	32	HTTPPWD	optional	unused
Bearer	--	BEARER	mandatory	optional/P
APN or Number	65	APNORNUM	mandatory for CSD	optional/P
Net User	32	NETUSER	optional	optional/P
Net Password	32	NETPWD	optional	optional/P
DNS	--	DNS	optional	optional/P
Notify URL	100	NOTIFYURL	optional	optional/P
SM Password	32	PWD	optional	optional

Table 10: Parameters and keywords

Parameters	Max. Length AT	Keyword SM	Install/update	delete
Ignore SM PID	--	--	--	--
Hide HTTP authentication parameters	--	--	--	--

The length of the string parameters in the AT command is limited (see [Table 10](#)), the length in the SM is only limited by the maximum SM length.

The minimum set of required parameters depends on the intended operation (see [Table 10](#)). "optional/P" indicates that this parameter is only necessary when a POST result is desired.

8.4 Short Message Format

An OTAP control SM must use a Submit PDU with Class1, PID \$7d and 8 bit encoding. As a fallback for unusual network infrastructures the SM can also be of Class0 and/or PID \$00. The content of the SM consists of a set of keywords and parameter values all encoded in ASCII format. These parameters can be distributed over several SMs. There is one single keyword to start the OTAP procedure. For parameters that are repeated in several SMs only the last value sent is valid. For example, an SM could look like this:

Install operation:

First SM:

```
OTAP_IMPNG
PWD:secret
JADURL:http://www.greatcompany.com/coolapps/mega.jad
APPDIR:a:/work/appdir
HTTPUSER:user
HTTPPWD:anothersecret
```

Second SM:

```
OTAP_IMPNG
PWD:secret
BEARER:gprs
APNORNUM:access.to-thenet.net
NETUSER:nobody
NETPWD:nothing
DNS:192.168.1.2
START:install
```

Delete operation:

```
OTAP_IMPNG
PWD:secret
APPDIR:a:/work/appdir
START:delete
```

The first line is required: it is used to identify an OTAP SM. All other lines are optional and their order is insignificant, each line is terminated with an LF: '\n' including the last one. The keywords, in capital letters, are case sensitive. A colon separates the keywords from their values.

The values of APPDIR, BEARER and START are used internally and must be lower case. The password (PWD) is case sensitive. The case sensitivity of the other parameter values depends on the server application or the network. It is likely that not all parameters can be sent in one SM. They can be distributed over several SMs. Every SM needs to contain the identifying first line (OTAP_IMPNG) and the PWD parameter if a mandatory password has been enabled. OTAP is started when the keyword START, possibly with a parameter, is contained in the SM and the parameter set is valid for the requested operation. It always ends with a reboot, either when the operation is completed, an error occurred, or the safety timer expired. This also means that all parameters previously set by SM are gone.

Apart from the first and the last line in this example, these are the parameters described in the previous section. Possible parameters for the START keyword are: "install", "delete" or nothing. In the last case, an install operation is done by default.

The network does not guarantee the order of SMs. So when using multiple SMs to start an OTAP operation their order on the receiving side might be different from the order in which they were sent. This could lead to trouble because the OTAP operation might start before all parameters are received. If you discover such problems, try waiting a few seconds between each SM.

8.5 Java File Format

In general, all Java files have to comply with the IMP-NG and ME specifications. There are certain components of the JAD file that the developer must pay attention to when using OTAP:

- MIDlet-Jar-URL: make sure that this parameter points to a location on the network where your latest JAR files will be located, e.g. <http://192.168.1.3/datafiles/mytest.jar>, not in the filesystem like <file:///a:/java/mytest/mytest.jar>. Otherwise this JAD file is useless for OTAP.
- MIDlet-Install-Notify: this is an optional entry specifying a URL to which the result of an update/install operation is posted. That is the only way to get any feedback about the outcome of an install/update operation. The format of the posted URL complies with the IMP-NG OTA Provisioning specification. In contrast to the jar and jad file this URL must not be protected by basic authentication.
- MIDlet-Delete-Notify: this is an optional entry specifying a URL to which the result of a delete operation is posted. That is the only way to get any feedback about the outcome of a delete operation. The format of the posted URL complies with the IMP-NG OTA Provisioning specification. In contrast to the jar and jad file this URL must not be protected by basic authentication.
- MIDlet-Name, MIDlet-Version, MIDlet-Vendor: are mandatory entries in the JAD and Manifest file. Both files must contain equal values, otherwise result 905 (see [Section 8.7](#)) is returned.
- MIDlet-Jar-Size must contain the correct size of the jar file, otherwise result 904 (see [Section 8.7](#)) is returned.

Example:

```
MIDlet-Name: MyTest
MIDlet-Version: 1.0.1
MIDlet-Vendor: TLR Inc.
MIDlet-Jar-URL: http://192.168.1.3/datafiles/MyTest.jar
MIDlet-Description: My very important test
MIDlet-1: MyTest, , example.mytest.MyTest
MIDlet-Jar-Size: 1442
MicroEdition-Profile: IMP-NG
MicroEdition-Configuration: CLDC-1.1
```

A suitable Manifest file for the JAD file above might look like:

```
Manifest-Version: 1.0
MIDlet-Name: MyTest
MIDlet-Version: 1.0.1
MIDlet-Vendor: TLR Inc.
MIDlet-1: MyTest, , example.mytest.MyTest
MicroEdition-Profile: IMP-NG
MicroEdition-Configuration: CLDC-1.1
```

8.6 Procedures

8.6.1 Install/Update

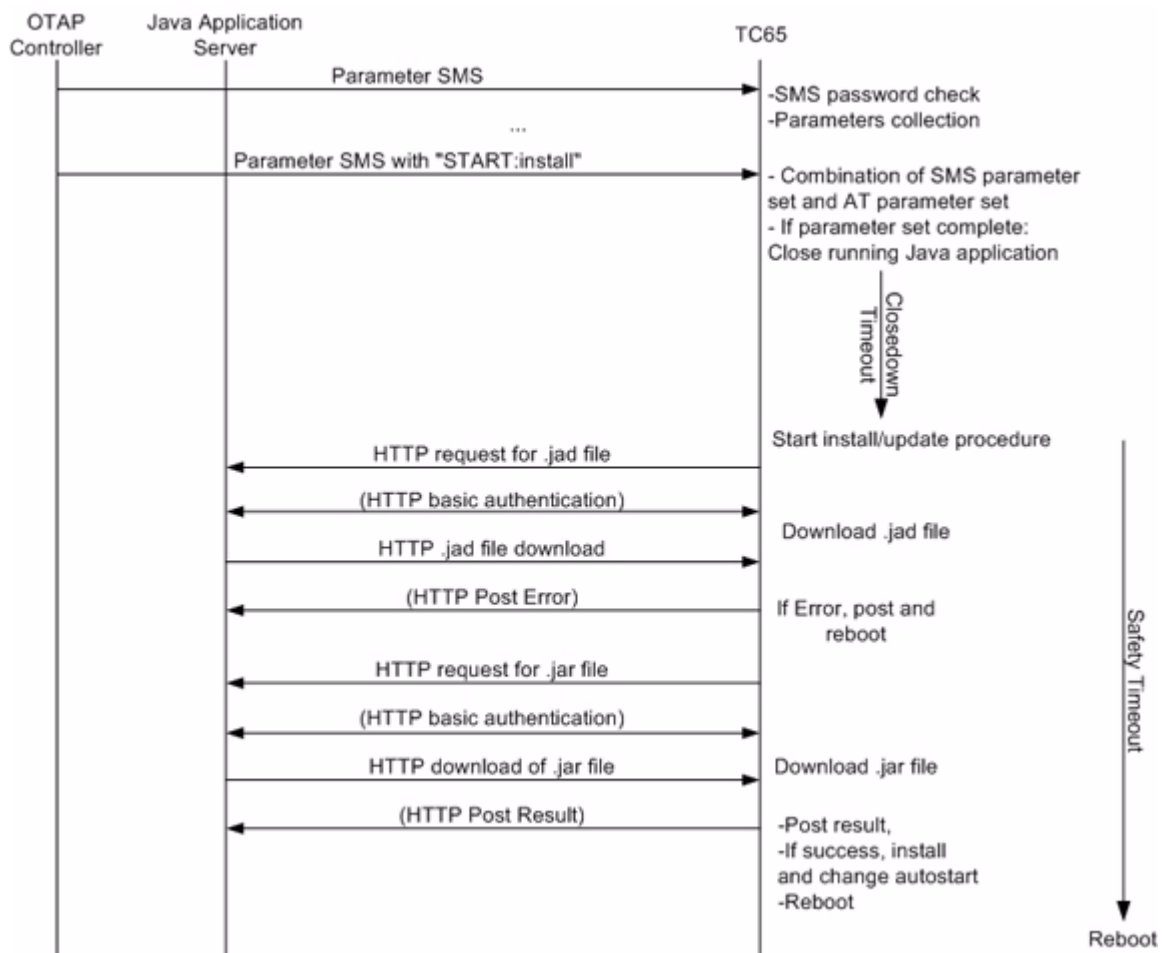


Figure 20: OTAP: Install/Update Information Flow (messages in brackets are optional)

When an SM with keyword START:install is received and there is a valid parameter set for the operation, the module always reboots either when the operation completed, an error occurred or the safety timer expired. If there is any error during an update operation the old application is kept untouched, with one exception. If there is not enough space in the file system to keep

the old and the new application at the same time, the old application is deleted before the download of the new one, therefore it is lost when an error occurs. If install/update was successful, autostart is set to the new application.

8.6.2 Delete

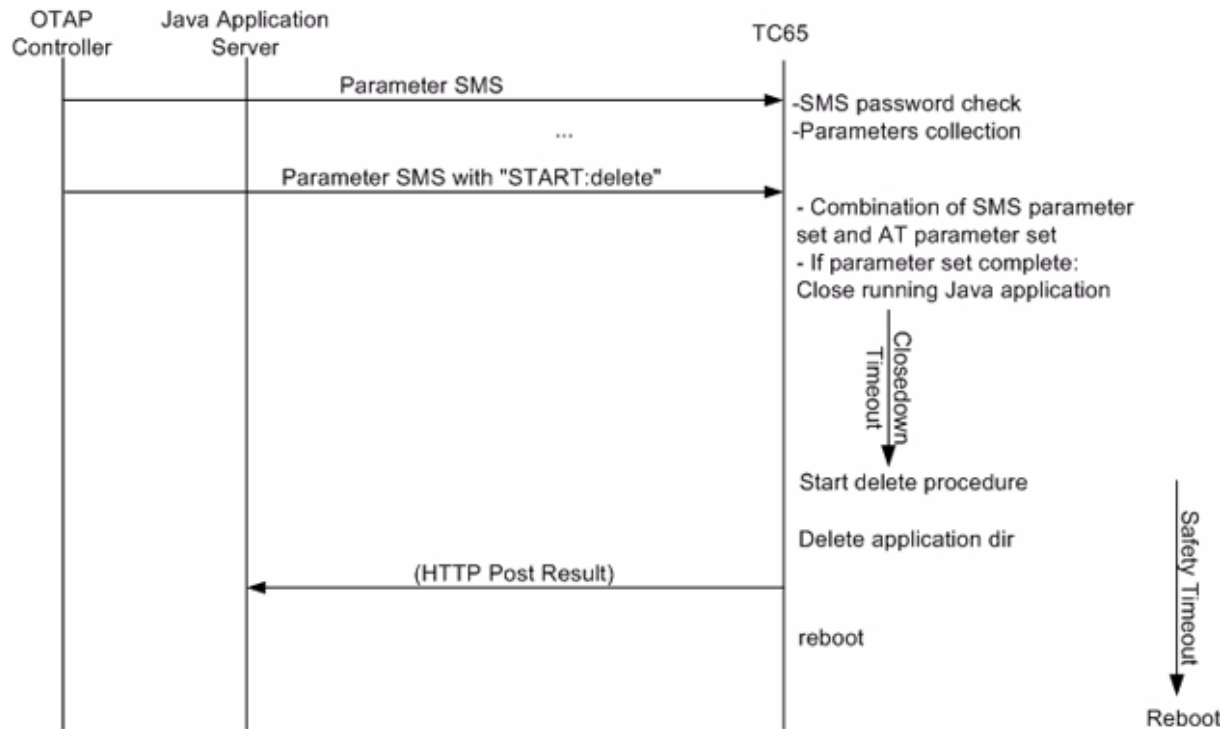


Figure 21: OTAP: Delete Information Flow (messages in brackets are optional)

When an SM with keyword START: delete is received and there is a valid parameter set for this operation, the module reboots either when the operation completed, an error occurred or the safety timer expired. If there is any error the application is kept untouched. Autostart is not changed.

8.7 Time Out Values and Result Codes

Timeouts:

- Closedown Timeout: 10 seconds
- Safety Timeout: 10 minutes

Result Codes: Supported status codes in body of the http POST request:

- 900 Success
- 901 Insufficient memory in filesystem
- 902 - not supported-
- 903 - not supported-
- 904 JAR size mismatch, given size in JAD file does not match real size of jar file
- 905 Attribute mismatch, one of the mandatory attributes MIDlet-name, MIDlet-version, MIDlet-Vendor in the JAD file does not match those given in the JAR manifest
- 906 Invalid descriptor, something is wrong with the format of the .jad file
- 907 invalid JAR, the JAR file was not available under MIDlet-Jar-URL, files could not be extracted from JAR archive, or something else is wrong with the format of the file.
- 908 incompatible configuration or profile
- 909 application authentication failure, signature did not match certificate
- 910 application authorization failure, tried to replace signed with unsigned version
- 911 -not supported-
- 912 Delete Notification

All HTTP packets (GET, POST) sent by the module contain the IMEI number in the User-Agent field, e.g.

User-Agent: <productname>/000012345678903 Profile/IMP-NG Configuration/CLDC-1.1

This eases device identification at the HTTP server.

8.8 Tips and Tricks for OTAP

- For security reasons it is recommended that an SMS password be used. Otherwise the `idelete` operation can remove entire directories without any authentication.
- For extra security, set up a private CSD/PPP Server and set its phone number as a fixed parameter. This way, applications can only be downloaded from one specific server.
- As a side effect, OTAP can be used to simply reboot the module. Simply start an OTAP procedure with a parameter set which will not really do anything, such as a delete operation on a nonexistent directory.
- If you do not want to start OTAP by SMS let your Java application do it by issuing the `AT^SJOTAP` command. This triggers an install/update operation as described in [Section 8.6.1](#) but without the SMS part.

Note: If a malfunctioning Java application is loaded the SM method will still be needed for another update.

- The OTAP procedure cannot be tested in the debug environment
- Be aware that the module needs to be logged into the network to do OTAP. That means that either the Java application must enter the PIN, the PIN needs to be disabled or Autopin (see [\[1\]](#)) needs be used.
- The OTAP procedure might fail due to call collision, e.g. an incoming call when OTAP tries to start a CSD connection.

8.9 OTAP Tracer

For easy debugging of the OTAP scenario, the OTAP procedure can be traced over the serial interface. The trace output shows details of the OTAP procedure and the used parameters. To enable the OTAP trace output use the AT command `AT^SCFG`, e.g. `AT^SCFG=Trace/Syslog/OTAP,1`

The serial interface on which you issue this command is then exclusively used for the OTAP tracer. All other functionality which is normally present (AT commands or `CommConnection` and `System.out` in Java) is not available when the tracer is on.

This feature is intended to be used during development phase and not in deployed devices.

8.10 Security

Java Security as described in [Chapter 12](#) also has consequences for OTAP. If the module is in secured mode the MIDlet signature is also relevant to the OTAP procedure. This means:

- If the application is an unsigned version of an installed signed version of the same application then status code 910 is returned.
- If the applications signature does not match the module's certificate then status code 909 is returned.

8.11 How To

This chapter is a step-by-step guide for using OTAP.

1. Do you need OTAP? Is there any chance that it might be necessary to update the Java application, install a new one or delete it? It could be that device is in the field and you cannot or do not want to update it over the serial line. If the answer is "yes" then read through the following steps, if the answer is "no" then consider simply setting the OTAP SMS password to protect your system. Then you are finished with OTAP.
2. Take a look at the parameters ([Section 8.3](#)), which control OTAP. You need to decide which of them you want to allow to be changed over the air (by SMS) and which you do not. This is mainly a question of security and what can fit into a short message. Then set the "unchangeable" parameters with the AT command (`AT^SJOTAP`).
3. Prepare the http server. The server must be accessible from your device over TCP/IP. That means there is a route from your device over the air interface to the http server and back. When in doubt, write a small Java application using the `URLConnection` Interface to test it.
4. Prepare the JAR and JAD files which are to be loaded over the air. Make sure that these files conform to the requirements listed in [Section 8.5](#) and that they represent a valid application which can be started by `AT^SJRA`.
5. Put the files (JAR and JAD) on the http Server. The files can either be publicly available or protected through basic authentication. When in doubt try to download the files from the server by using a common Web browser on a PC, which can reach your http server over TCP/IP.
6. Prepare the SM sender. The sender must be able to send SMSs, which conform to [Section 8.4](#), to your device. When in doubt try to send "normal" SMSs to your device which can then be read out from the AT command interface.
7. Test with a local device. Send a suitable short message to your device, which completes the necessary parameter, sets and starts the operation. The operation is finished when the

device reboots. You can now check the content of the file system and if the correct jar and jad files were loaded into the correct location.

8. Analyze errors. If the above test failed, looking at your device's behavior and your http servers access log can give you a hint as to what went wrong:
 - If the device did not terminate the running Java application and did not reboot, not even after the safety timeout, either your SM was not understood (probably in the wrong format) or it did not properly authenticate (probably used the wrong password) or your parameter set is incomplete for the requested operation.
 - If the device terminated the running Java application, but did not access your http server, and rebooted after the safety timeout, there were most likely some problems when opening the network connection. Check your network parameters.
 - If the device downloaded the jad and possibly even the jar file but then rebooted without saving them in the file system, most likely one of the errors outlined in [Section 8.5](#) occurred. These are also the only errors which will return a response. They are posted to the http server if the jad file contains the required URL.
9. Start update of remote devices. If you were able to successfully update your local device, which is hopefully a mirror of all your remote devices, you can start the update of all other devices.

9 Compile and Run a Program without a Java IDE

This chapter explains how to compile and run a Java application without a Java IDE.

9.1 Build Results

A JAR file must be created by compiling an SMTK project. A JAR file will contain the class files and auxiliary resources associated with an application. A JAD file contains information (file name, size, version, etc.) on the actual content of the associated JAR file. It must be written by the user. The JAR file has the “.jar” extension and the JAD file has the “.jad” extension. A JAD file is always required no matter whether the module is provisioned with the Module Exchange Suite, as described in [Section 7.1](#), or with OTA provisioning. OTA provisioning is described in [Chapter 7](#).

In addition to class and resource files, a JAR file contains a manifest file, which describes the contents of the JAR. The manifest has the name manifest.mf and is automatically stored in the JAR file itself. An IMP manifest file for:

```
package example.mytest;  
public class MyTest extends MIDlet
```

includes at least:

```
Manifest-Version: 1.0  
MIDlet-Name: MyTest  
MIDlet-Version: 1.0.1  
MIDlet-Vendor: Siemens  
MIDlet-1: MyTest, example.mytest.MyTest  
MicroEdition-Profile: IMP-NG  
MicroEdition-Configuration: CLDC-1.1
```

A JAD file must be written by the developer and must include at least:

```
MIDlet-Name: MyTest  
MIDlet-Version: 1.0.1  
MIDlet-Vendor: Siemens  
MIDlet-1: MyTest, example.mytest.MyTest  
MIDlet-Jar-URL: http://192.168.1.3/datafiles/MyTest.jar  
MIDlet-Jar-Size: 1408  
MicroEdition-Profile: IMP-NG  
MicroEdition-Configuration: CLDC-1.1
```

A detailed description of these attributes can be found in [\[4\]](#).

9.2 Compile

- Launch a *Command Prompt*. This can be done from the *Programs* menu or by typing „cmd“ at the *Run...* prompt in the *Start* menu.
- Change to the directory where the code to be compiled is kept.
Compile the program with the SDK. Examples of build batch files can be found in each sample program found in the examples directory, `\Siemens\SMTK\<productname>\wtk\src\example`.
- If the compile was successful the program can be run from the command line. Examples of run batch files can be found in the examples directories listed above as well.

The batch files for compiling and running the samples refer to master batch files in the `...\Siemens\SMTK\<productname>\wtk\bin` directory and use the system environment variables `IMPNG_JDK_DIR` and `IMPNG_DIR`. `IMPNG_JDK_DIR` points to the root directory of the installed JDK and `IMPNG_DIR` points to the root directory of the Siemens-SMTK-<product-name>-IMPNG installation. The installation process sets these environment variables. A modification is usually not necessary. They may be modified as requested (e.g. when switching to a different JDK) via the advanced system properties.

9.3 Run on the Module with Manual Start

- Compile the application at the prompt as discussed in [Section 9.2](#) or in an IDE.
- Transfer the .jar and .jad file from the development platform to the desired directory on the module using the Module Exchange Suite or OTA provisioning. [Chapter 7](#) explains how to download your application to the module.
- Start a terminal program and connect to ASC0.
- The command `AT^SJRA` is used to start the application and is sent to the module via your terminal program. Either the application can be started by .jar or by .jad file.

Example:

In your terminal program enter: `AT^SJRA=a:/java/jam/example/helloworld/helloworld.jar`
If you prefer to start with .jad file: `AT^SJRA=a:/java/jam/example/helloworld/helloworld.jad`
The Flash file system on the module is referenced by "a:".

Depending on which file you specify the java application manager tries to find the corresponding file in the same directory. This search is not done by name, but by comparing the contained attributes. The first file which contains the same values for MIDlet-Name, MIDlet-Version and MIDlet-Vendor is used.

9.4 Run on the Module with Autostart

- Compile the application at the prompt as discussed in [Section 9.2](#) or in an SMTK integrated IDE.
- Transfer the .jar and .jad file from the development platform to the desired directory on the module using the Module Exchange Suite or OTA provisioning. See [Chapter 7](#).

9.4.1 Switch on Autostart

- There is an AT command, *AT^SCFG*, for configuring the autostart functionality. Please refer to [\[1\]](#).
- Restart the module.

9.4.2 Switch off Autostart

There are three methods for switching off the autostart feature:

- the *AT^SCFG* command, or
- the graphical “autoexec_off.exe” tool (included in the Installation CD software under wtk/bin), or
- the command line “cmd_autoexec_off.exe” tool (included in the Installation CD software under wtk/bin).

To disable the automatic start of a user application in a module these steps must be carried out:

Using the graphical “autoexec_off.exe” tool:

1. Connect the module to the PC
2. Make sure, that the module is switched off
3. Start the “Autoexec_Off” program
4. Select the COM-Port
5. Press the “AutoExec Off” button

Using the command line tool “cmd_autoexec_off.exe”:

1. Connect the module to the PC
2. Make sure, that the module is switched off
3. Start the command line tool “cmd_autoexec_off” with option <com-port> (com1 up to com99 for com port selection)

10 Compile and Run a Program with a Java IDE

10.1 Eclipse 3.1.2 (with ME Plugin 1.2.3)

The following description assumes that Eclipse 3.1.2 is installed from SMTK CD as described in [Section 3.3.1.6](#)

10.1.1 Setup a New Project

Step 1:

Create new Java Project:

- Select Eclipse menu *File* → *New* → *Other...*
- Select J2ME Midlet Suite:

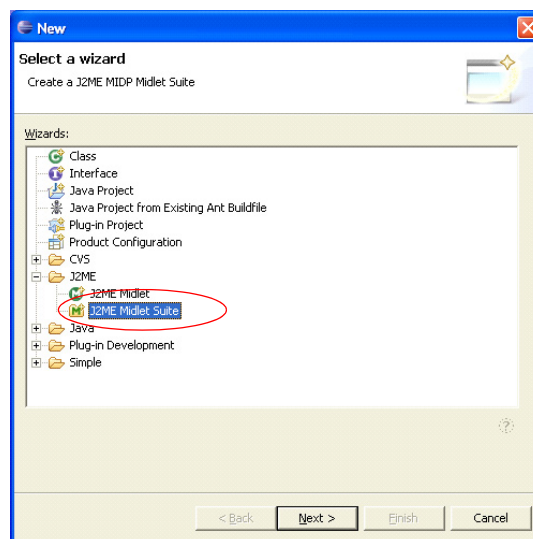


Figure 22: Create new Eclipse project: Create a J2ME MIDP Midlet Suite

- Type in the used name (e.g. Project01) and path for the new project:

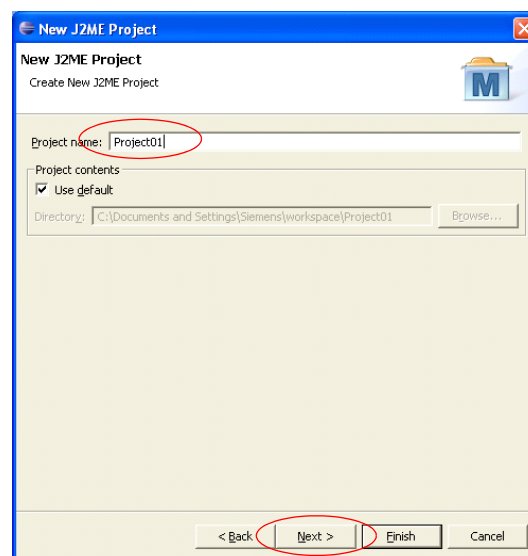


Figure 23: Create new Eclipse project: New J2ME Project

- Select e.g. TC65 Release 2 emulator:

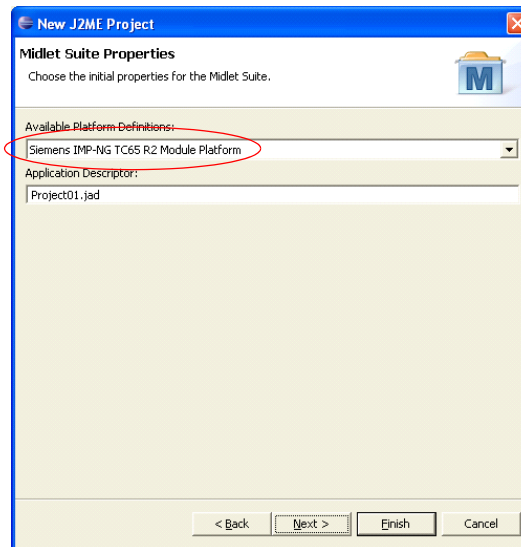


Figure 24: Create new Eclipse project: Midlet Suite Properties

- A new Java Project has been created:

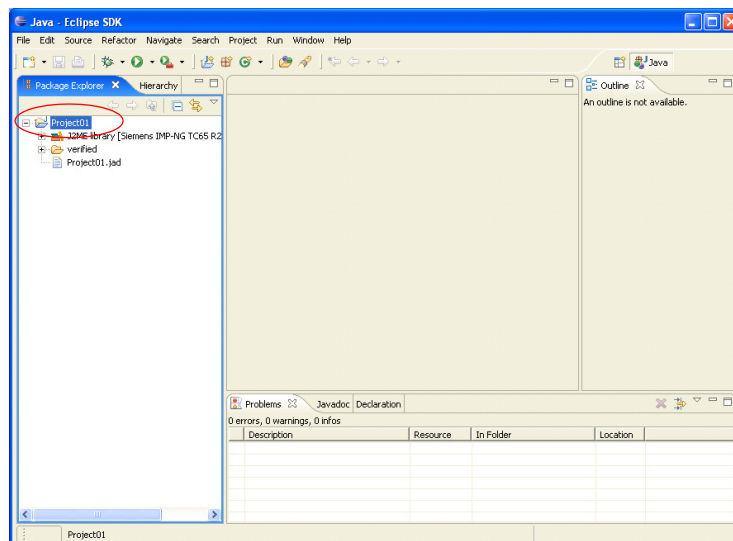


Figure 25: Create new Eclipse project: work area with new created project

- Select "Project01" and press <Ctrl+N> and select "J2ME Midlet":

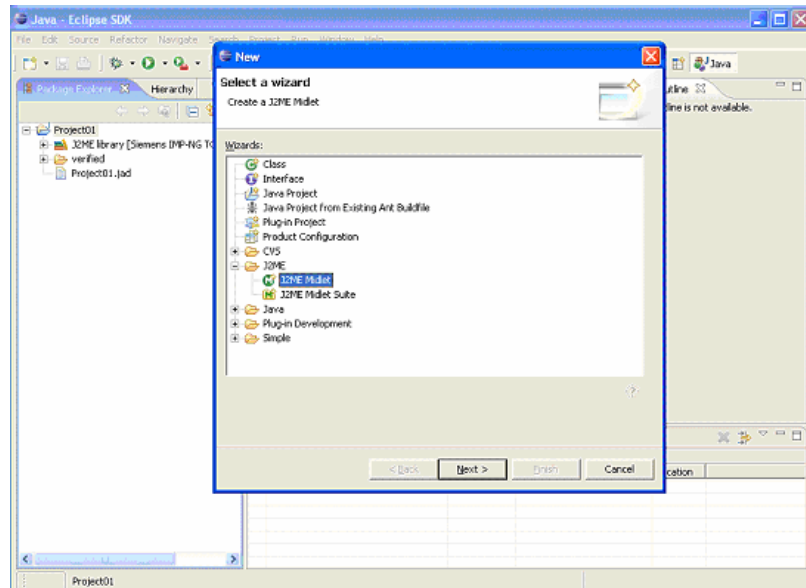


Figure 26: Create new Eclipse project: Create a J2ME Midlet

- Fill in Midlet parameters (package directory, name of Java source file) and press <Finish>:

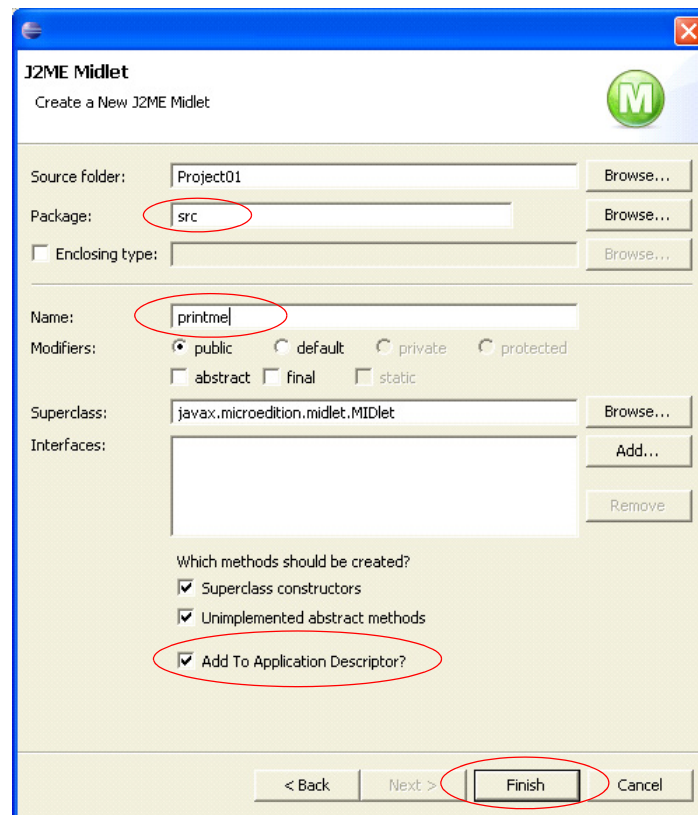


Figure 27: Create new Eclipse project: Create a New J2ME Midlet

Step 2:

Modify Java source file “printme.java” template:

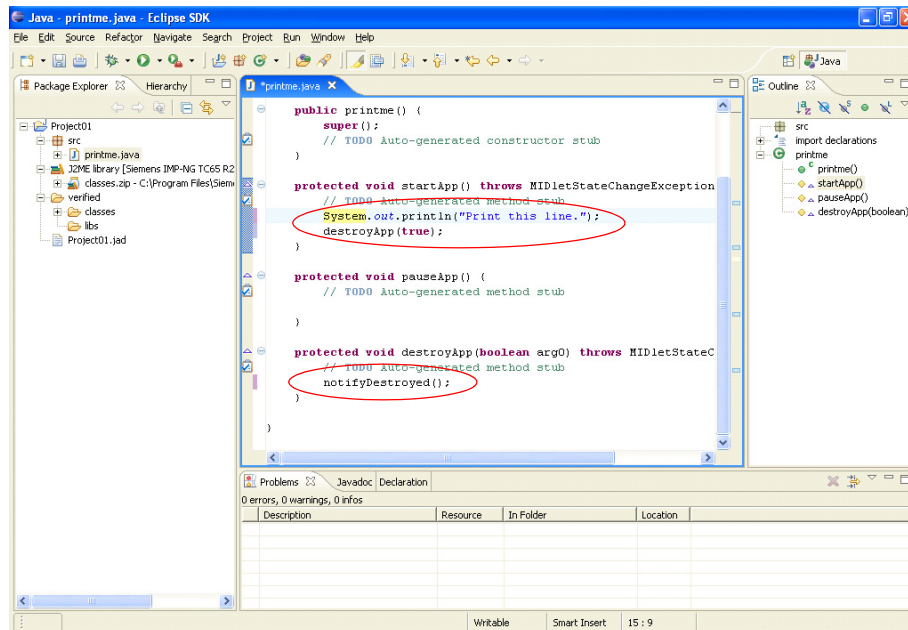


Figure 28: Create new Eclipse project: Edit some Java commands

This application prints the given line via ASC1 (default setting). Please keep in mind to add “notifyDestroyed();” in destroyApp() method. Please refer to [Chapter 6](#) “MIDlets” for more details about Midlet life cycles.

Step 3:

Configure Jad file:

- Double click on “Project01.jad” to open the editor and add “deployed\” path in Midlet Jar URL edit line.

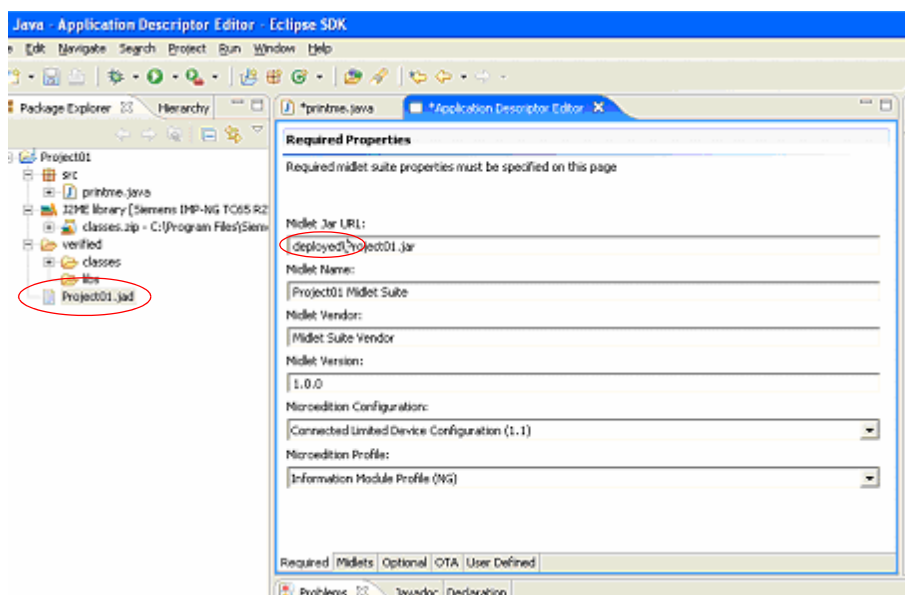


Figure 29: Create new Eclipse project: Edit “deployed” path to Jar file

Step 4:

Create Jad and Jar file:

- Select "Project01"
- Open context menu of "Project01" and select *Create Package* from item *J2ME*
- Jad and Jar file are be created under the "deployed" directory (default setting of Eclipse)

Step 5:

Download Jad and Jar file into the Flash File System of the module and start the Java application:

Manual download and start of Java application:

- Copy Jad and Jar files manually using MES (e.g MES Windows Explorer) into the module
- Start the Java application by using at command "AT^SJRA=a:/Project01.jar" (e.g. using ASC1)
- The Java "System.out" is printed via ASC1 (default setting) and is displayed on terminal programs (e.g. "Print this line.").

Automatic download and start of Java application using IDE:

- Open the context menu of "printme.java" and select *Emulated J2ME Midlet* from item *Run As*.
- The SMTK emulator downloads Jar and Jad file into the Flash File of the module (transmission via MES port that was selected during installation) and automatically starts the Java application.
- The Java "System.out" is printed via ASC1 (default setting) and is displayed on terminal programs (e.g. "Print this line.").

Further information about importing an existing Java project into Eclipse based on the "Hello World" example is described in [Section 11.3.2.7](#).

11 Debug Environment

11.1 Data Flow of a Java Application in the Debug Environment

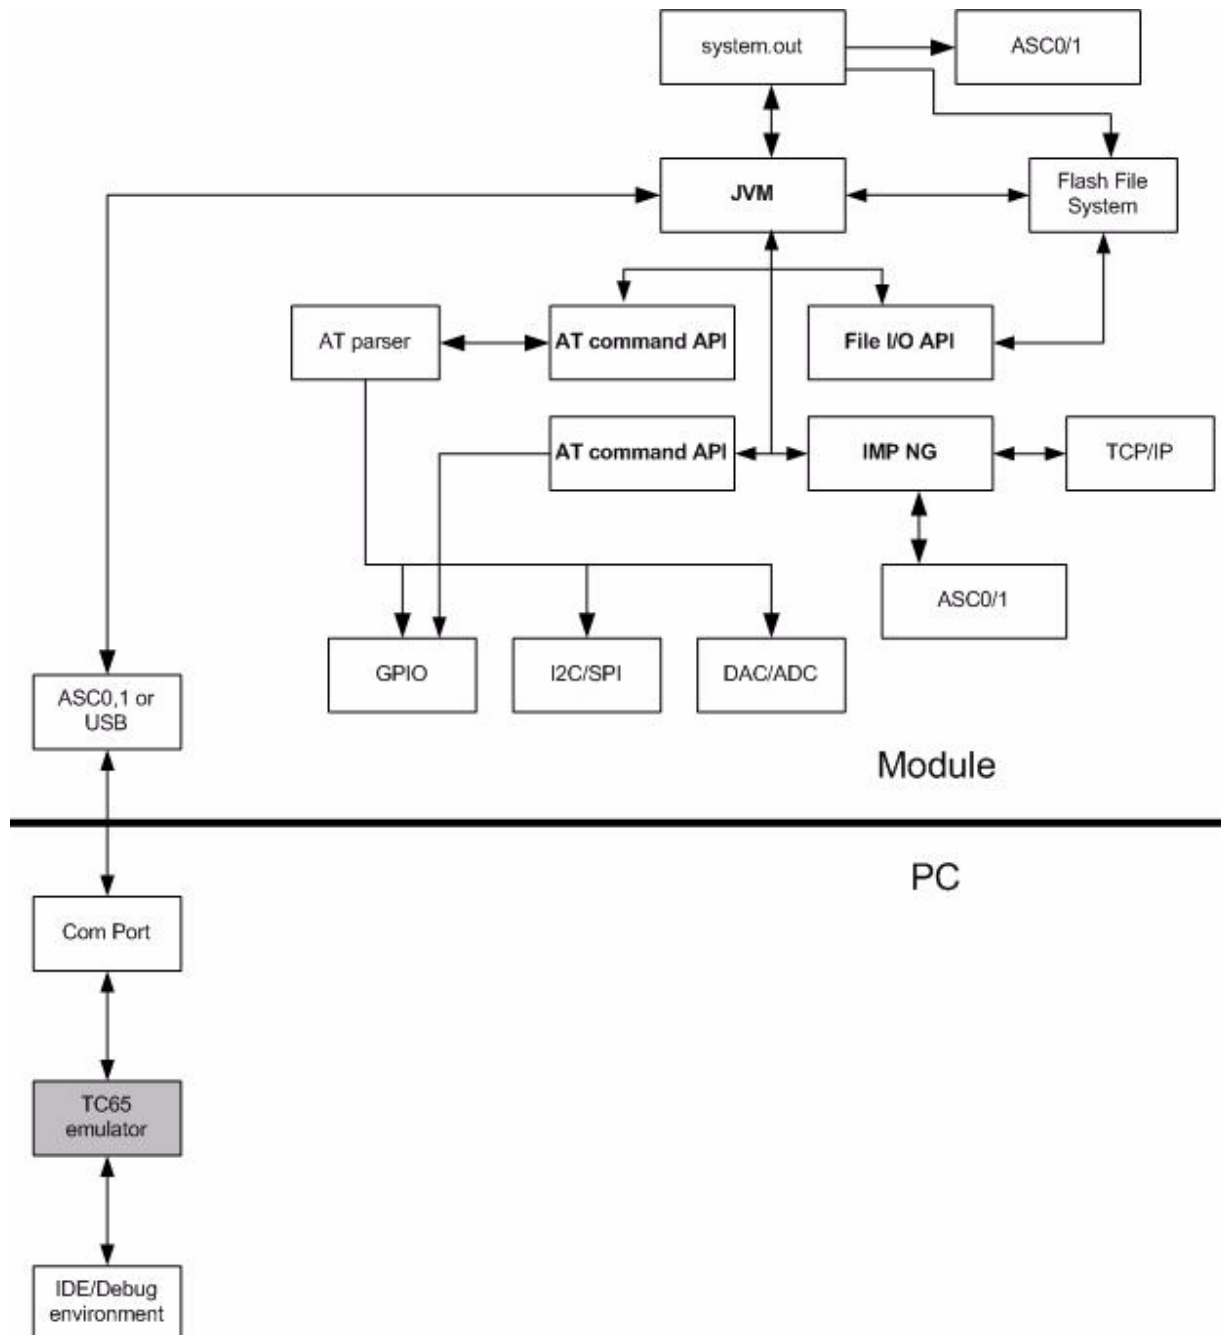


Figure 30: Data flow of a Java application in the debug environment

In the debug environment the module is connected to a PC via a serial interface. This can be a USB or an RS232 line. The application can then be edited, built, debugged or run within an IDE on the PC. When running or debugging the MIDlet under IDE control it is executed on the module (on-device execution) not on the PC. This can be either debugging mode, where the midlet execution can still be controlled from the IDE (on-device debugging) or normal mode, where the midlet is copied to the module and started normally. This ensures that all interfaces behave the same whether debugging mode is used or not.

11.2 Emulator

The ME emulator is part of the SMTK and is used as the controlling entity for on-device debugging. Some values can be configured in the file `wtk/bin/WM_Debug_config.ini` (see below note for TC65). The emulator is running fine without changes in `WM_Debug_config.ini` file, because the settings for the serial interface (COM port and baudrate) are configured during installation of SMTK.

Note: For TC65 the file "`WM_Debug_config.ini`" is stored under the "Application Data" folder of the currently logged in user. Depending on the Windows operation system it can be found under the following directory:

Windows 2000:

e.g. "`c:\Documents and Settings\<your login>\Application Data\Siemens\SMTK\TC65_R3\WM_Debug_Config.ini`"

Windows XP:

e.g. "`c:\Documents and Settings\<your login>\Application Data\Siemens\SMTK\TC65_R3\WM_Debug_Config.ini`"

Windows Vista:

e.g. "`c:\Users\<your login>\AppData\Roaming\Siemens\SMTK\TC65_R3\WM_Debug_Config.ini`"

In case the *Application Data* folder is not visible, it is possible to set the option to show hidden folders (choose Explorer menu *Tool -> Folder option.. ->* and select "*show hidden folder*").

Debugging information between the Debugger (IDE) and the JVM is transferred over an IP connection. In order to establish this IP connection between the PC and the module the emulator needs a special Dial-Up-Network (DUN):

- ISP name: "IP connection for remote debugging"
- Modem: either "Standard 19200 bps Modem" or "<productname> 14400 bps Modem" or USB modem
- Phone number: *88#
- Disable the *Redial if line dropped* option.
- Enable *Connect automatically*

This Dial-Up Network (DUN) connection is installed automatically together with a standard modem or selecting USB modem during installation of SMTK. The emulator uses always the COM port or USB modem settings configured for this Dial-Up Network connection.

You can use any of the three serial interfaces (ASC0, ASC1, USB) to connect with module, but you will lose the functionality which is normally present on the interface. Because of this loss and because of its speed it is recommended that the USB interface be used.

Please keep in mind, that if you like to use a USB modem connection, you have to install and configure that modem connection before starting SMTK installation manually and select Siemens USB modem during SMTK installation. The Dial-up Network will be installed and configured with USB modem during SMTK installation. There are some points to notice in case of using the USB interface in a debugging session. If you are starting a debugging session very quickly once again after end of a previous debugging session, the emulator is not able to select the USB interface and is selecting a standard modem connection. Please wait some seconds to avoid this operation system dependent problem, because the Windows operation system

needs some seconds to enable the USB port once again after the "IP connection for remote debugging" is closed.

If necessary, the IP addresses used for the debug connection can also be changed. This is done in the file "WM_Debug_config.ini". For details, see also the AT^SCFG command and its "Userware/DebugInterface" parameters described in [\[1\]](#). Please keep in mind, that the IP address range 10.x.x.x is not supported for the configuration of debugging!

During installation of SMTK some new programs are installed for handling the debugging session in conjunction with the IDE. The installation routine of the SMTK doesn't change any configuration of an existing firewall on your PC.

In the case, that a firewall is installed on your PC and the local configured and used IP connection (Dial-Up Network connection for debugging) is blocked or disturbed by this firewall, please configure the firewall or the Dial-Up Network connection manually to accept the new installed programs and the port or to use another port or contact your local PC administrator for help.

11.3 Java IDE

The SMTK is integrated into your Java IDE during installation. Please note that the IDE integration is intended to create MIDlets suitable for the Java enabled module and for debugging using the emulator. JAR files used in the module must be configured according to the batch file examples given. If the SMTK install succeeded, you can easily switch between the Siemens environment and Standard-JDK environment, the special libraries/APIs and emulators are available, and AT commands can be sent to the module. Regular function of the IDE for non-Siemens projects is unchanged.

Using the debugger please keep in mind that the MIDlet-URL, included in the Jad file, has to indicate and store the location where the emulator will find the corresponding Jar file. Generally the location will only be the file name for the Jar file.

If you are using Eclipse IDE the location of the Jar file is "deployed\<filename>.jar". Please check this path name inside the Jad file before starting a debugging session with Eclipse IDE and change it manually, if the "deployed" subdirectory is missing. Please keep in mind, that the subdirectory "deployed" is used as a default setting in the Eclipse IDE and can be changed by the user within the Eclipse menu.

While using "on-device debugging" the ME is restarted after the end of each debugging session. This is independent of the used IDE (Eclipse 3.0.1, Eclipse 3.0.2, Eclipse 3.1.0, Eclipse 3.1.1, Eclipse 3.1.2, Eclipse 3.2.x¹⁰, NetBeans IDE 5.0, NetBeans 5.5.x¹⁰, JBuilder X, JBuilder 2005, JBuilder 2006 Enterprise/Developer).

Please note that the USB port has to be disconnected manually before the module is restarted, in case of using a connected terminal program on USB port for directing the Java "System.out". It is recommended to use ASC0 or ASC1 for directing Java "System.out" to avoid closing manually the COM port.

Please keep in mind, that it is not possible to use obfuscated files for a debugging session.

When writing and debugging a midlet be aware of the midlet life cycle (see [Section 6.2](#) "MIDlet Life Cycle").

11.3.1 NetBeans IDE 5.0, NetBeans 5.5 or NetBeans 5.5.x

Integration for NetBeans IDE 5.5 and 5.5.x is only supported for TC65. The described steps for using Netbeans IDE 5.0 are identical for NetBeans IDE 5.5 and Netbeans 5.5.x.

This section indicates the changes to your IDE you will see after integrating the SMTK and describes how to exploit these features to build and debug your applications.

All installed emulators can be found using the NetBeans IDE 5.0 menu

Tools → *Java Platform Manager*. See [Figure 31](#).

¹⁰ only supported for TC65

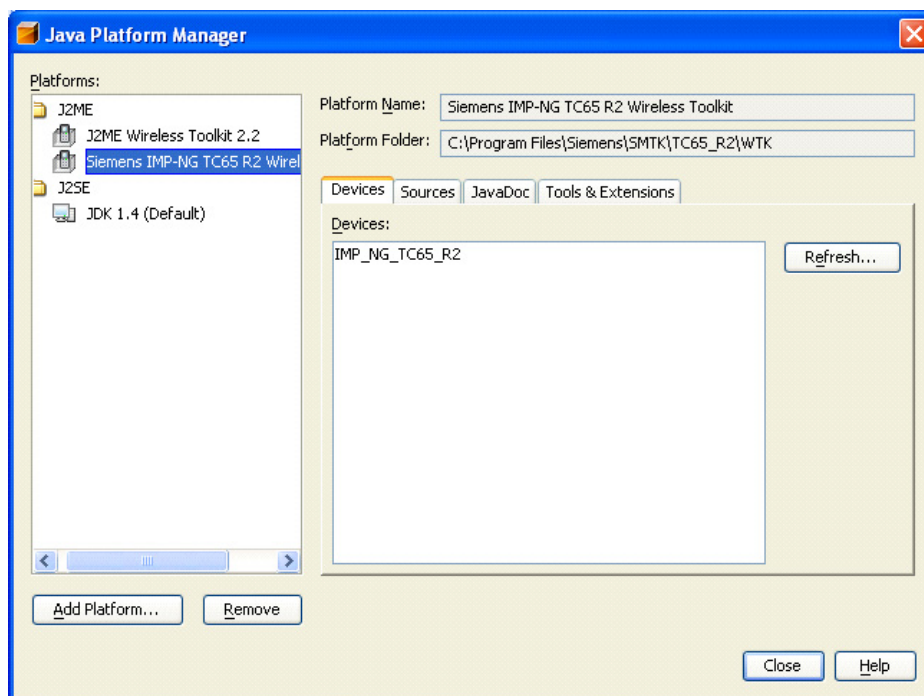


Figure 31: NetBeans IDE 5.0 - installed emulators

11.3.1.1 Switching Emulator to IMP-NG Emulator

You can switch to the SMTK emulator project dependent using the context menu for project properties (e.g. "Hello Sample" <properties>) and select the emulator platform and the device e.g. "Siemens IMP-NG TC65 R2 Wireless Toolkit" and "IMP_NG_TC65_R2" for TC65 Release 2. See [Figure 32](#).

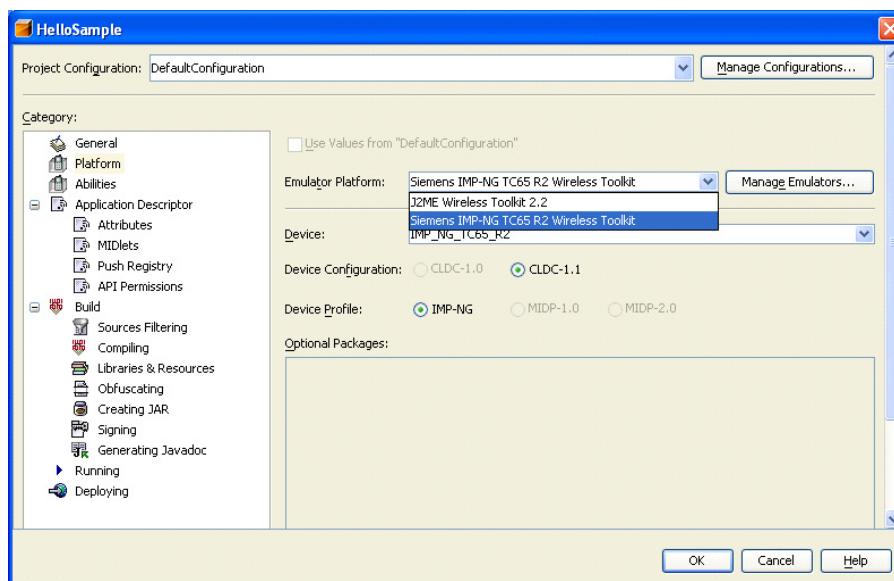


Figure 32: NetBeans IDE 5.0 - Switching to IMP-NG emulator

11.3.1.2 Templates

Templates for a Siemens MIDlet can be found in the file explorer and under NetBeans IDE 5.0 menu *File* → *New File...* The MIDlet template provides the skeleton of an IMP-NG MIDlet application.

The *New File* wizard opens. Select category “IMP-NG” and File Type “IMP-NG MIDlet” and press the *Next* button for working with this skeleton.

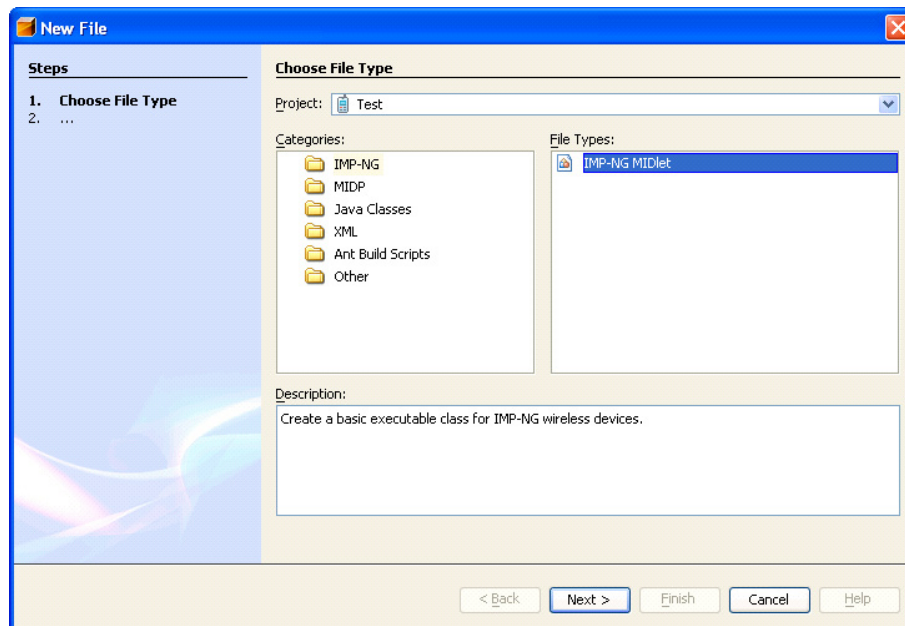


Figure 33: NetBeans IDE 5.0 - Selecting an IMP-NG MIDlet template (e.g. project “Test”)

11.3.1.3 Examples

There are three IMP-NG MIDlet sample projects ("HelloSample", "NetDemo" and "RS232Sample") included. Each sample project can be selected directly in NetBeans IDE 5.0. You can open the sample project (e.g. "HelloSample") using the NetBeans IDE 5.0 menu *File* → *New Project...* The *New Project* wizard opens. Select Category *Samples* → *Mobile* → *IMP-NG* and select (e.g. "Hello World Example"). Press the *Next* button.

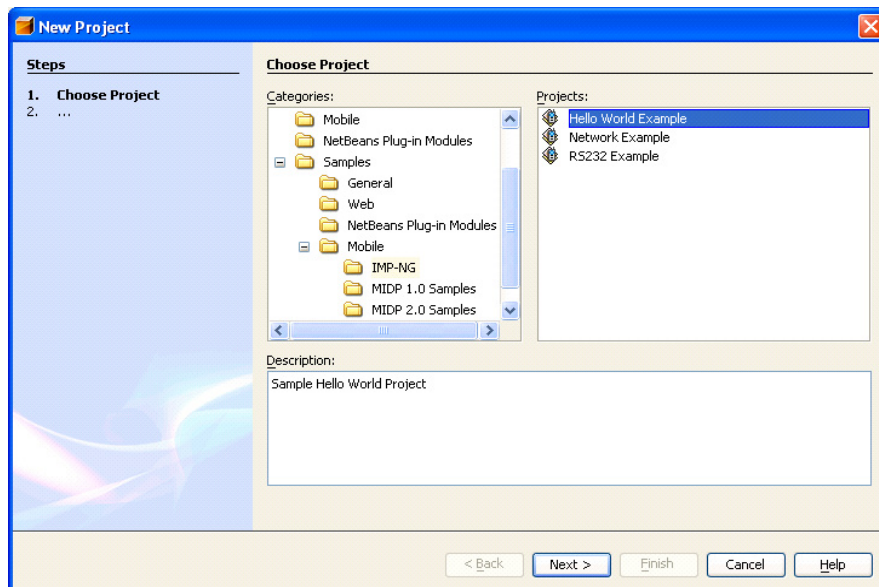


Figure 34: NetBeans IDE 5.0 - selecting sample project "Hello World Sample"

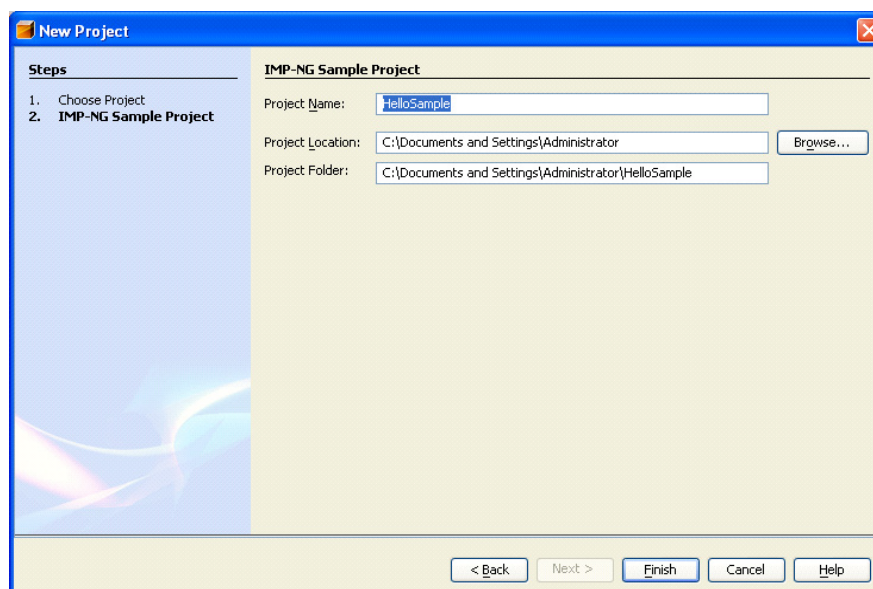


Figure 35: NetBeans IDE 5.0 - confirmation of sample project "Hello World Sample"

Press the *Finish* button to end the selection of the sample project.

Note: Keep in mind, that if you are selecting the "HelloWorld-Sample" you have to choose the used emulator after loading the "HelloWorld-Sample".

Please select project properties in the "HelloWorld" project's context menu and choose the emulator (e.g. "TC65_R3") for the Java debugging session. Otherwise NetBeans 5.x indicates a reference problem, because it does not know, which kind of emulator has to be used!

11.3.1.4 Compile and Run

Ensure that the proper emulator will be used and compile the project as normal. Any output will be shown in the output window in the IDE together with some debugging information of the IDE. The html help files of the SMTK can be accessed directly by pressing Alt+F1.

11.3.1.5 Starting Debug Session without Downloading Java Files

It is possible to start a debugging session without download of the Java files (*.jad and *.jar) again. The emulator has to be started with an additional parameter “-noload” and downloading of the Java files is suppressed.

If you like to suppress downloading of *.jar and *.jad file, please use the project context menu *Properties*, select category “Running” and type in “-noload” as extra parameter for the emulator as shown in the following figure:

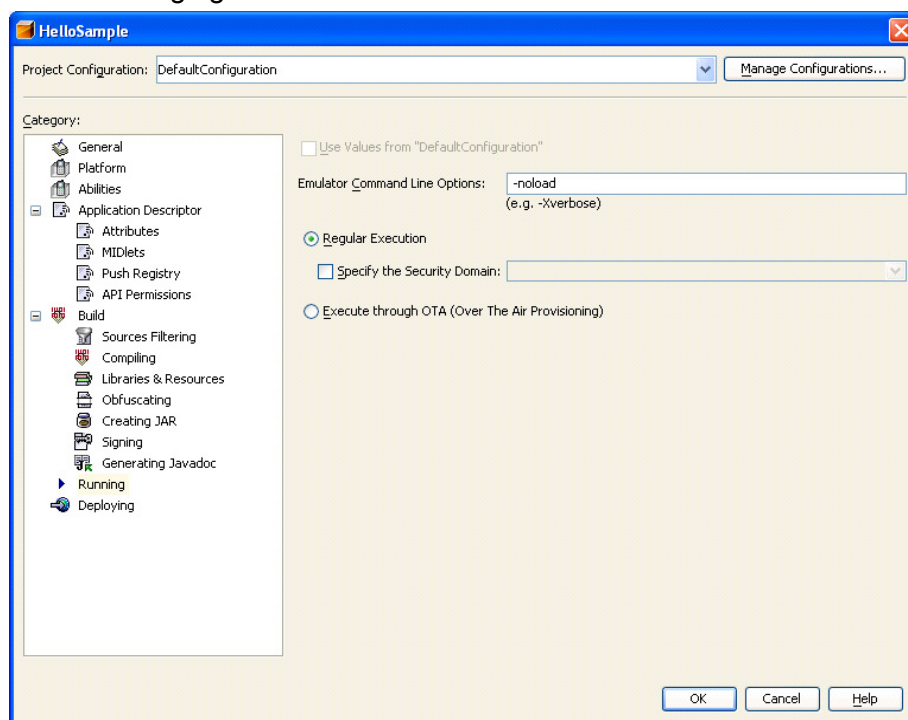


Figure 36: NetBeans IDE 5.0 - add emulator option “-noload” (e.g. project “HelloSample”)

Keep in mind that you have to remove this emulator option before starting debugging session with download of Java files. The Java files are not updated in the Flash Files System of the module while option “-noload” is set!

Note: This feature is not working in current NetBeans IDE 5.0 or [NetBeans IDE 5.5.1¹¹](#) version (included on the SMTK CD).

¹¹ Supported for TC65 only.

11.3.1.6 Displaying Java "System.out" in NetBeans IDE window

Please prepare redirection of Java "System.out" during a debugging session as described in [Section 11.5](#) Switching Java "System.out" to IDE debug window.

The *Debugging Console* tab of the NetBeans IDE window is selected by default after starting the debugging session.

To display the Java "System.out"s after starting the debugging session select the "*build.xml (debug)*" tab as shown in the below figure:

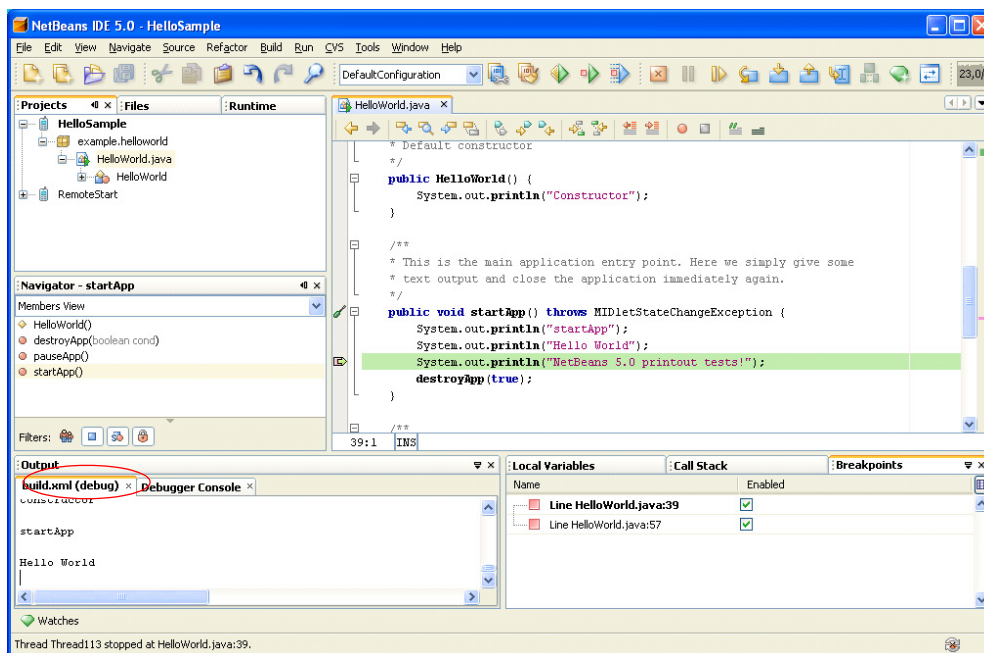


Figure 37: NetBeans IDE 5.0 - Displaying Java "System.out" in NetBeans IDE window

11.3.2 Eclipse 3.0 and Eclipse 3.1

We recommend that Eclipse 3.0.1 or higher is to be used.

11.3.2.1 Eclipse 3.0

Please use the customized Eclipse ME Plugin version that is distributed with the SMTK CD under the directory "EclipseMEplugin_WM" only for Eclipse 3.0.1 and 3.0.2 and install Eclipse ME as described in [Section 3.4](#). However, instead of selecting "eclipseme.feature_1.2.3_site.zip" choose "*EclipseMEplugging_WM\plugin.zip*"¹² from SMTK CD after clicking the *New Archived Site...* button.

11.3.2.2 Eclipse 3.1

If Eclipse is not installed, please follow the steps as described in [Section 3.4](#). Please use and install EclipseME plugin 1.2.1, 1.2.3 or 1.5.x for Eclipse 3.1.0, 3.1.1 or 3.1.2.

11.3.2.3 Eclipse 3.2

If Eclipse is not installed, please follow the steps as described in [Section 3.4](#). Please use and install EclipseME plugin 1.5.5 or 1.6.8.

It is recommended to use Eclipse 3.2.2 with ME 1.5.5 for working with Java Debugging session.

¹² Eclipse WM Plugin is not included anymore on TC65 CD

11.3.2.4 Using Eclipse with ME Plugin up to Version 1.2.3

11.3.2.4.1 Additional Configuration of Integrated Emulator

The following configuration is displayed after SMTK integration into Eclipse by using the Eclipse menu *Windows* → *Preferences* → *J2ME* → *Platform Components*:

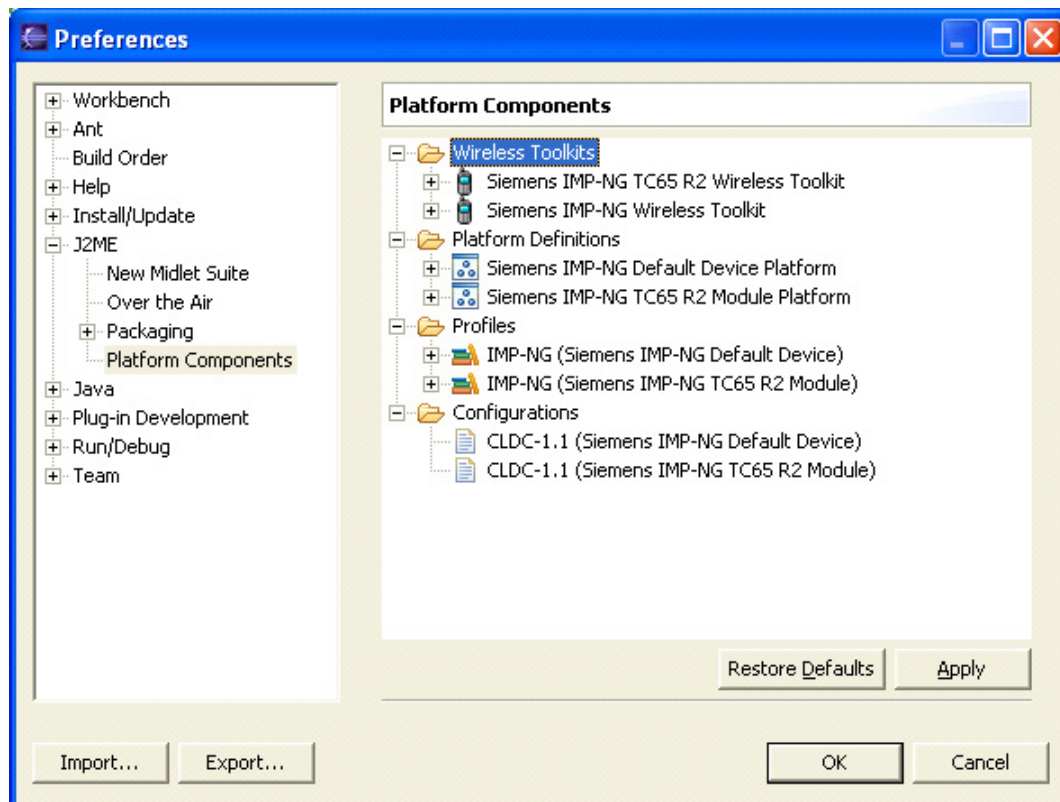


Figure 38: Eclipse – Display of different integrated emulators

To use the debugger it is necessary to increase the debug server delay timeout of Eclipse IDE. Please set the timeout under *Windows* → *Preferences* → *J2ME* → *Debug Server Delay* to 25000. If you develop an extremely large application you may have to increase this timeout.

11.3.2.4.2 Switching Emulators

You can easily switch between different installed emulators by using the preferences of a project and choosing e.g. *Siemens IMP-NG TC65 R2 Module*, see figure below.

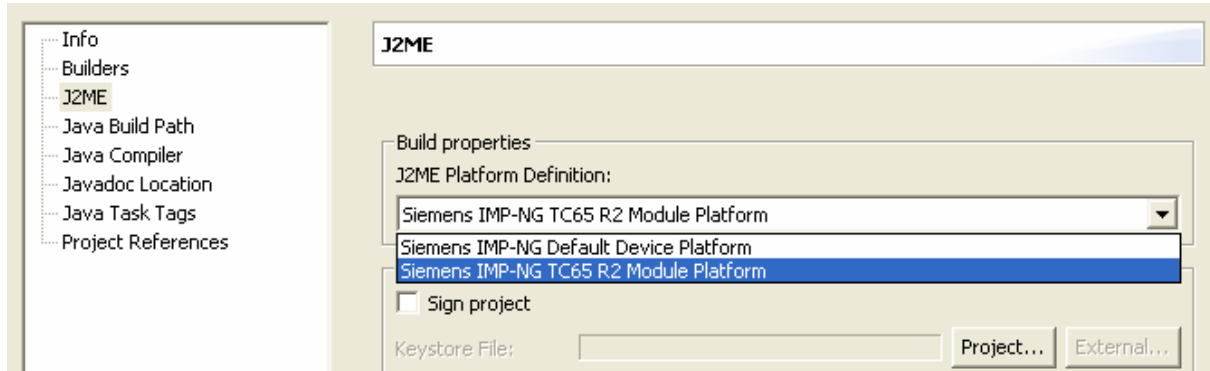


Figure 39: Eclipse – J2ME platform

11.3.2.5 Using Eclipse with ME Plugin 1.5.x

Eclipse ME Plugin 1.5.x is supported by the TC65, XT65/XT75 and AC65/AC75 CDs. This Eclipse ME Plugin is using a completely new device management concept to integrate different emulators. The integration and disintegration of the TC65 resp. XT65/XT75 or AC65/AC75 emulator is only automatically possible by using the TC65 resp. XT65/XT75 or AC65/AC75 SMTK CD!

Please note that selecting the TC65 resp. XT65/XT75 or AC65/AC75 emulator by using the Eclipse menu *Window → Preferences → J2ME → Device Management → Import* and browsing to the respective emulator directory will not integrate the emulator.

Note: Manual emulator integration (by using Eclipse menu) is supported by Eclipse with using ME Plugin 1.5.5 and later. Automatic emulator integration using SMTK CD is possible for all Eclipse ME Plugin 1.5.x.

11.3.2.5.2 Switching Emulators

You can easily switch between different installed emulators by using the properties of a project and choosing a Device Group, e.g. "Siemens IMP-NG XT75 Wireless Toolkit". You can select a device also by using the *Manage Devices...* button, see figure below.

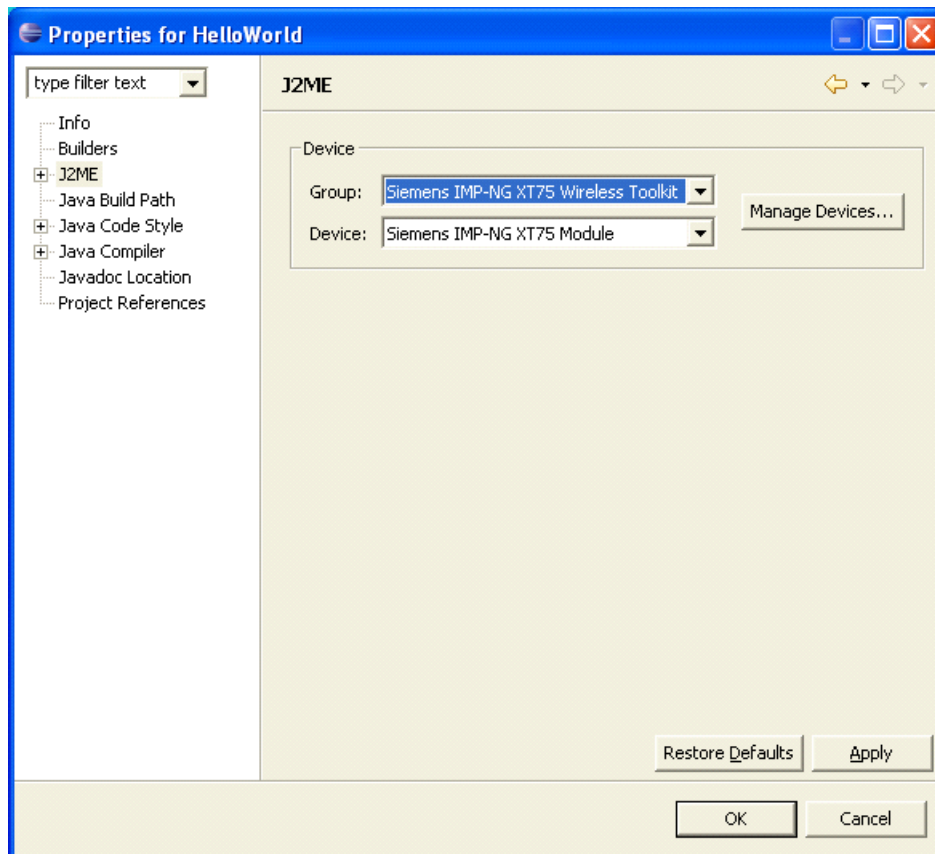


Figure 41: Eclipse with ME Plugin 1.5.0 – J2ME platform

11.3.2.6 Using Eclipse with ME Plugin 1.6.x

Automatic integration into Eclipse ME Plugin 1.6.x is supported by using the TC65 CD. All configurations, settings and using the Eclipse IDE are done in a very similar way as for Eclipse ME Plugin 1.5.x and are described in the [Section 11.3.2.5.1](#) and [Section 11.3.2.5.2](#).

11.3.2.7 Import Example

You can import an existing Eclipse project using the following steps:

- Open menu: *File* → *Import* → *Existing Project into Workspace*
- Choose the root directory of the Eclipse project (e.g. "Hello World" example of the SMTK CD). See figure below.

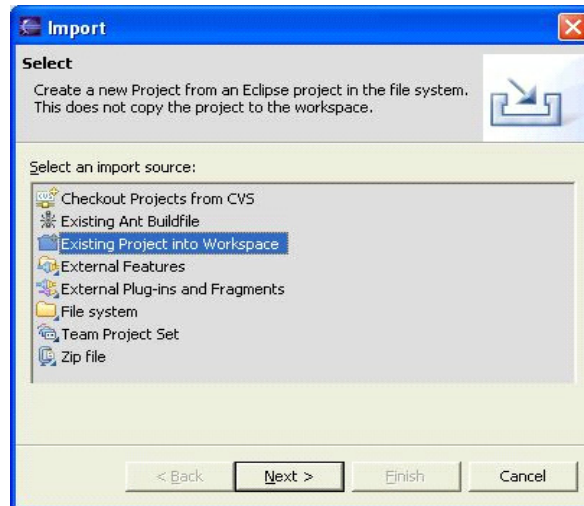


Figure 42: Eclipse – Project import

The following figure shows the "Hello World" example in the IDE.

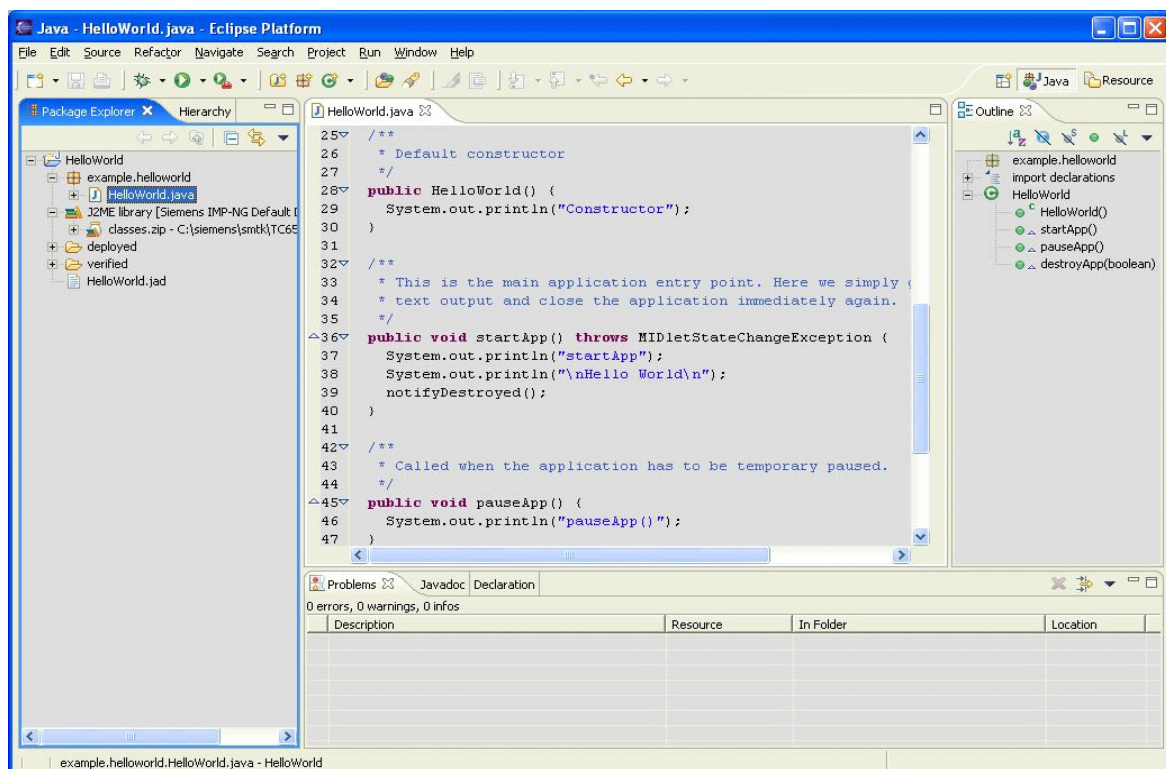


Figure 43: Eclipse - Example

The html help files of the SMTK can be accessed directly by pressing Shift+F2 while the cursor points to a Java expression in a Java source file.

11.3.2.8 Compile and Debug

To build the jar and jad files you have rebuild the project with the *Create Package* function. Open the context menu of the project and go to *J2ME* → *Create Package*.

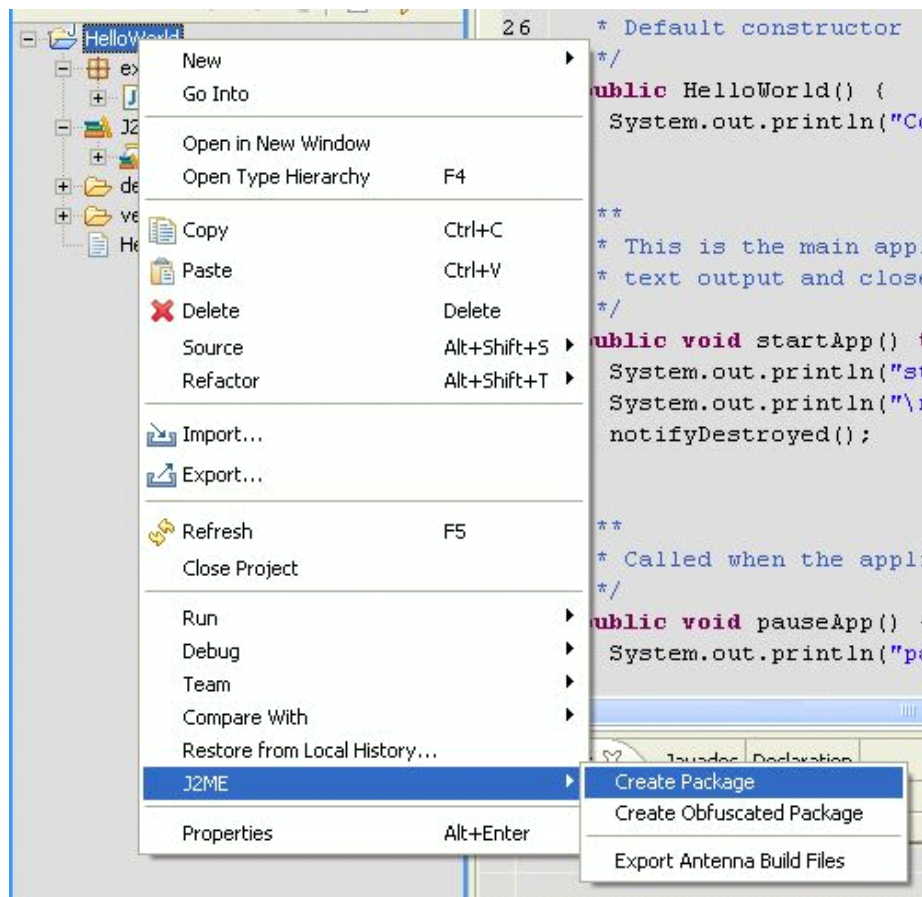


Figure 44: Eclipse – Create package

Now you are ready to debug your project. *Run* → *Debug*...

An emulator launcher with pre-settings is provided for starting the debugging session. Please ensure that you have selected the right project and executable midlet.

Note: Before starting Java debugging session with the HelloWorld-Sample it is recommended to check the setting of used emulator (e.g. TC65_R3 emulator in project properties see [Section 11.3.2.5.2](#)), to clean the project with configuration "automatically build" (using Eclipse menu *Project* → *Clean...*) and to compile it completely (using project's context menu of the "HelloWorld" project select *J2ME* → *Create Package*).

Reason: Eclipse is storing internally old settings for an old used "HelloWorld-Sample", if you have used Eclipse with "HelloWorld-Sample" for another IMP-NG product before!

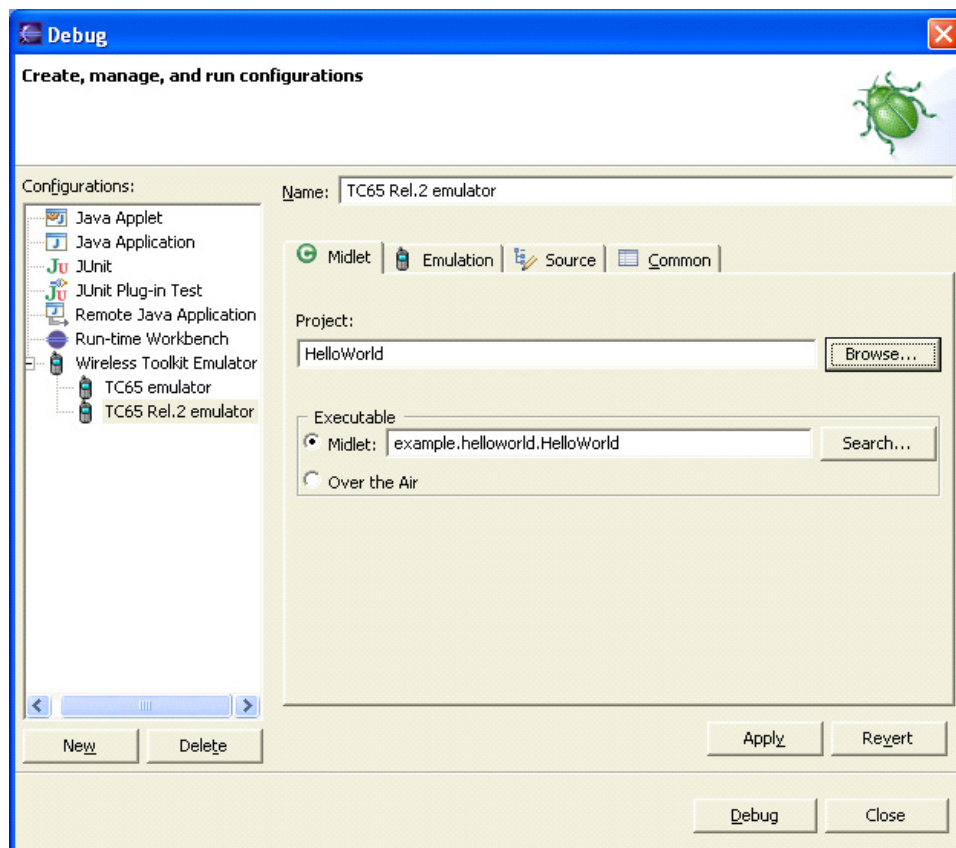


Figure 45: Eclipse - Configuration

Restriction:

The integration of the SMTK using the SMTK installer depends selecting the offered default workspace “\workspace” of Eclipse (e.g. Eclipse 3.0.1 and 3.0.2 “..\eclipse\workspace\..” or Eclipse 3.1.0, 3.1.1 and 3.1.2 “..\Documents and Settings\<user name>\workspace\..”).

If you like to use the SMTK integration inside other workspaces, please integrate SMTK manually in these workspaces using Eclipse menu *Window* → *Preferences* → *J2ME* → *Platform Components* (as shown in Figure 36). Please keep in mind that all manually integrated SMTKs have to be removed manually as well in case of removing SMTK.

Note for using Eclipse 3.2.2 ME 1.6.8:

Start debugging using "TC65 Rel.3 emulator" please select in "Midlet" the "HelloWorld" Midlet sample from the list of Midlets. The project name will be selected automatically.

Remarks using Eclipse under Windows Vista (only supported for TC65):

The Eclipse workspace directory differs from the location used under Windows 2000 and Windows XP. Using Windows Vista the following location is used for automatic integration of TC65 into Eclipse:

"<drive name>:\Users\<your login>\AppData\workspace"
(e.g. "c:\Users\<your login>\AppData\workspace")

Please select this workspace before starting Java debugging with Eclipse!

11.3.2.9 Starting Debug Session without Downloading Java Files

It is possible to start a debugging session without download of the Java files (*.jad and *.jar) again. The emulator has to be started with an additional parameter “-noload” and downloading of the Java files is suppressed. Please add the parameter in the following emulator configuration line as described in the figure:

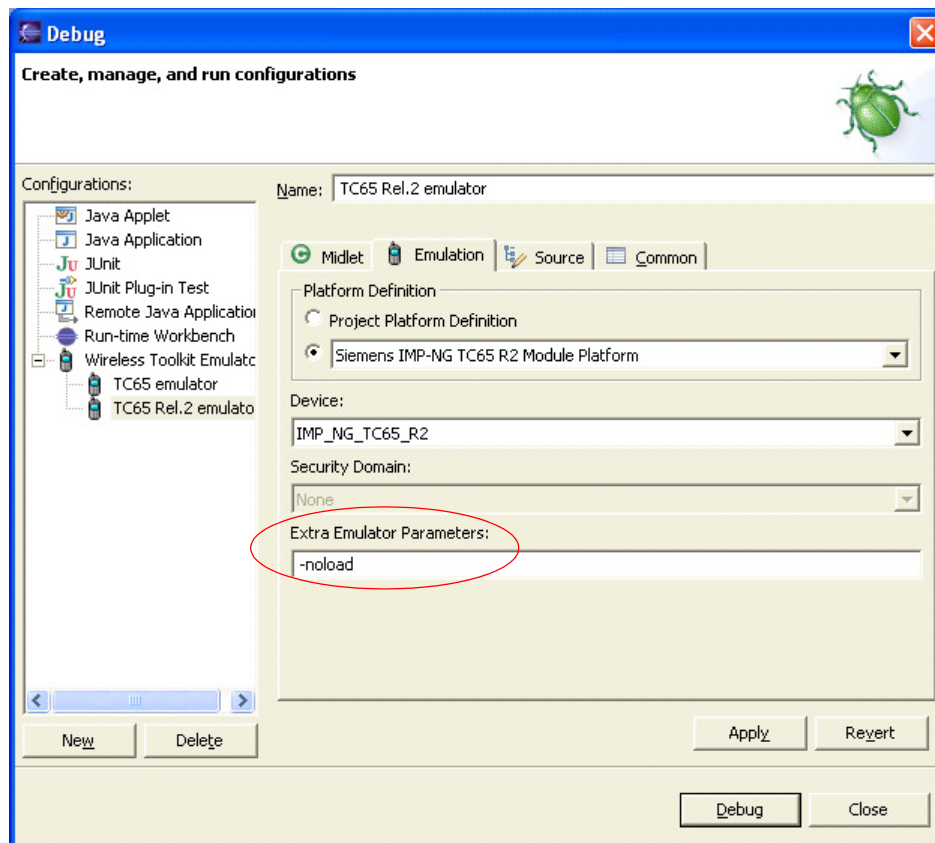


Figure 46: Eclipse - Configuration

Please keep in mind that you have to remove this emulator option before starting debugging session with download of Java files. The Java files are not updated in the Flash files system of the module while option “-noload” is set!

Note for Eclipse 3.2.2 ME 1.6.8:

The option “-noload” does not take previously set breakpoints into account. In other words, if you have set breakpoints in your Java source file and would like to start the debugging session with the “-noload” parameter, no previous set breakpoint is reached.

Please use Eclipse 3.2.2 ME 1.5.5 for starting debugging session with “-noload” parameter.

Note for using Eclipse 3.2.x ME 1.5.x and 1.6.x:

During debugging it is sometimes possible, that if a breakpoint is reached, the Java program stops, but no breakpoint is indicated in the Java source line (Java source windows). In this case please select the Java Thread in the "Debug" window and select "System Thread" where the hit breakpoint is shown. The corresponding source line is highlighted inside the Java source windows (e.g. "HelloWorld.java") as well for the hit breakpoint. See the following figure.

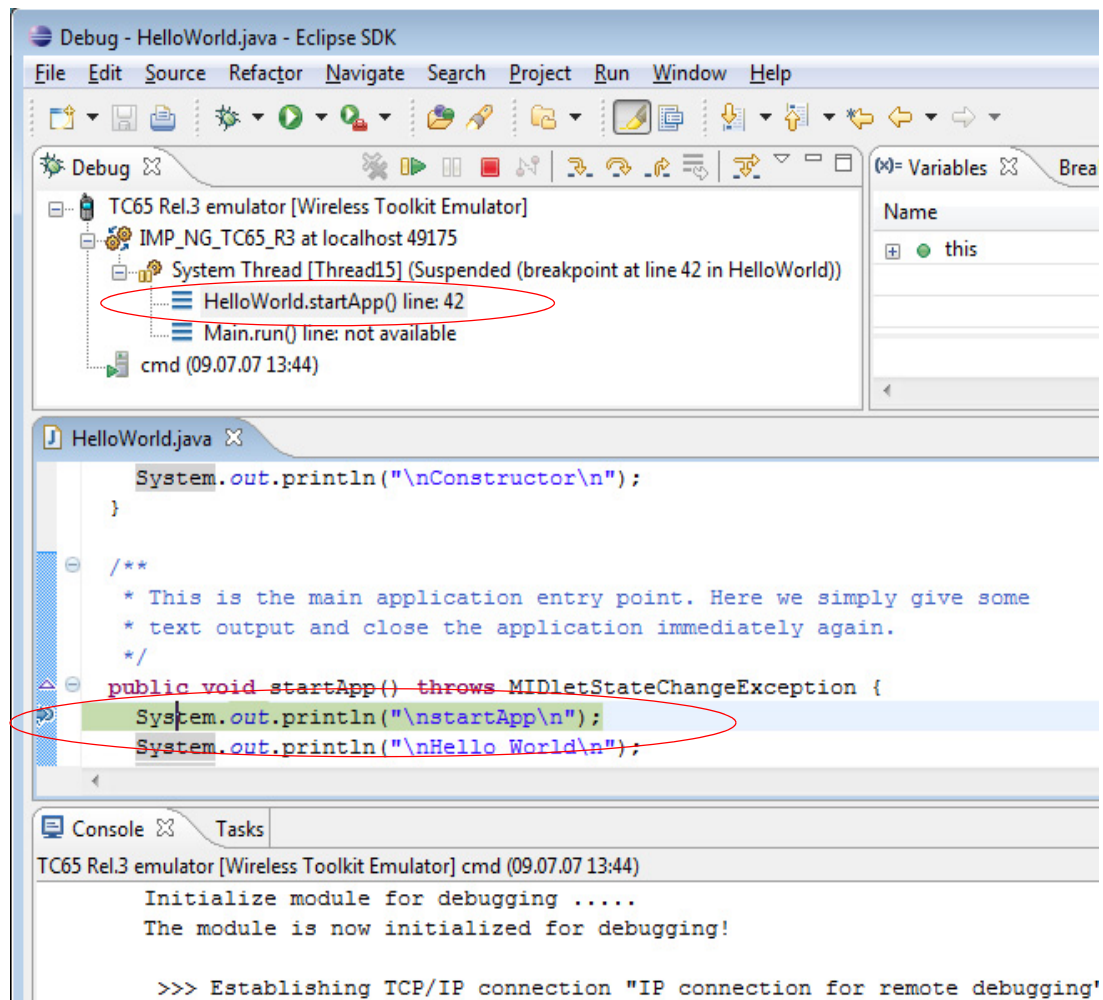


Figure 47: Eclipse 3.2.x ME1.5.x and 1.6.x select System Java Thread for showing breakpoint line in Java source

11.3.3 Borland JBuilder X

If you want to use JBuilder X and it is not installed, first install JBuilder X and follow the installation wizard instructions. Run the SMTK installation program in maintenance mode. The SMTK will find the installed JBuilder X IDE. Select JBuilder X to integrate the SMTK into JBuilder X.

After integration of SMTK into JBuilder X you can examine the integration by opening the menu *Tools* → *Configure JDKs...* (see Figure below).

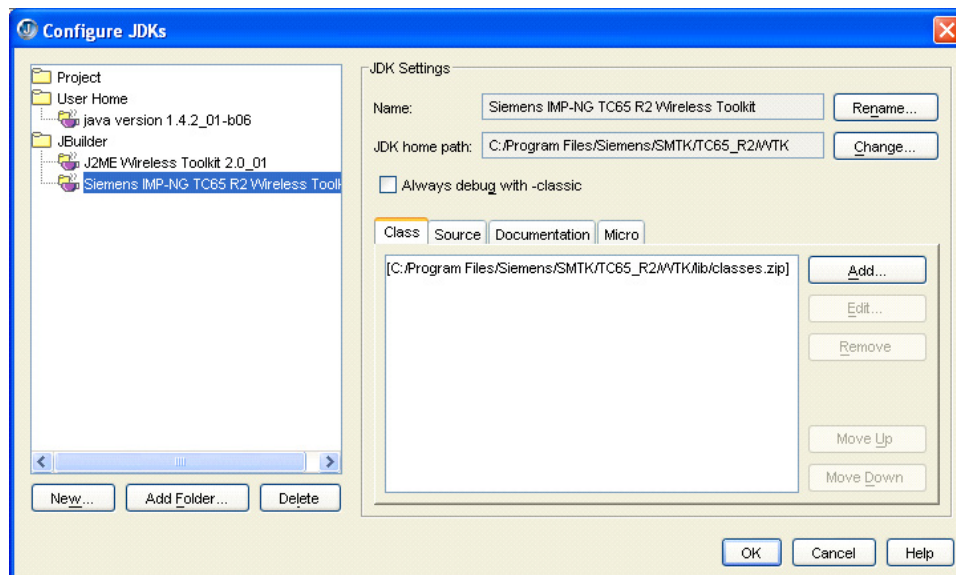


Figure 48: JBuilder X – JDK settings

The libraries included with the SMTK can be examined by opening the menu *Tools* → *Configure Libraries...* (see Figure below).

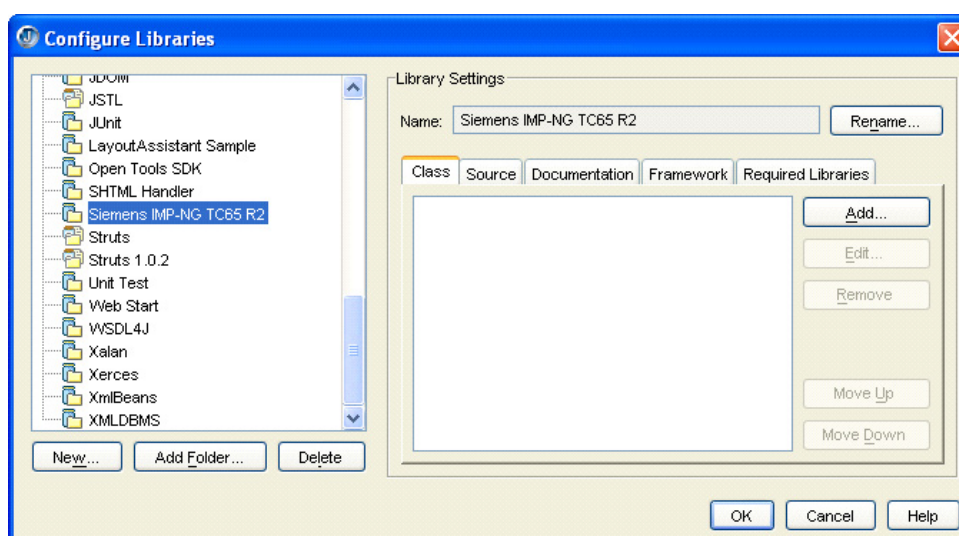


Figure 49: JBuilder X – Siemens Library

11.3.3.1 Examples

There are sample projects provided with the SMTK. These projects can be found in the JBuilderSamples directory of the SMTK installation directory. This directory is accessed by opening a project using the menu *File* → *Open Project...* (see Figure below).

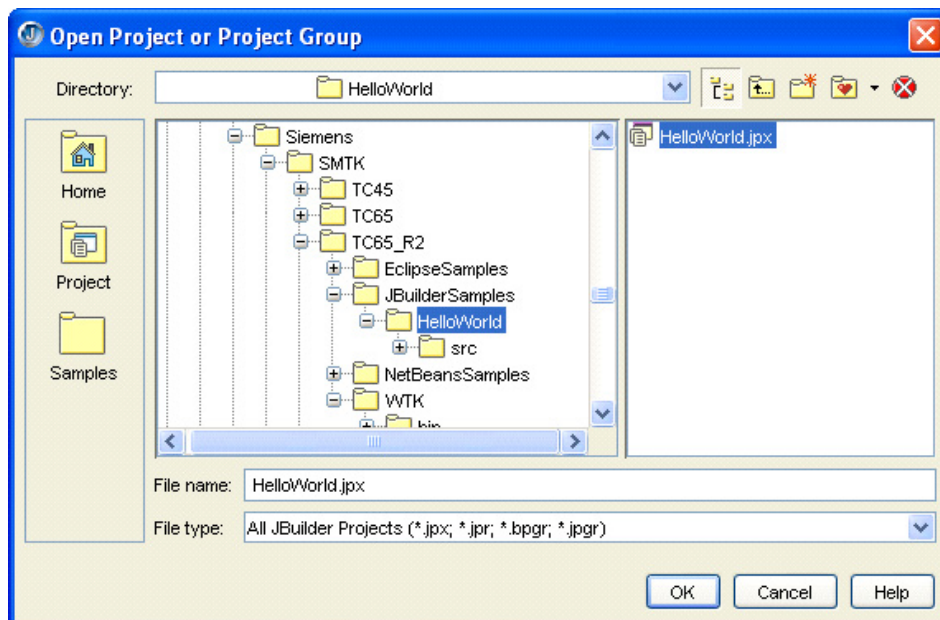


Figure 50: JBuilder X – Sample Projects

Open the Project (e.g. “HelloWorld.jpx”), rebuild the sources and start the debugger using the micro edition (context menu “HelloWorld.jad” → *Micro Debug using “HelloWorld”*).

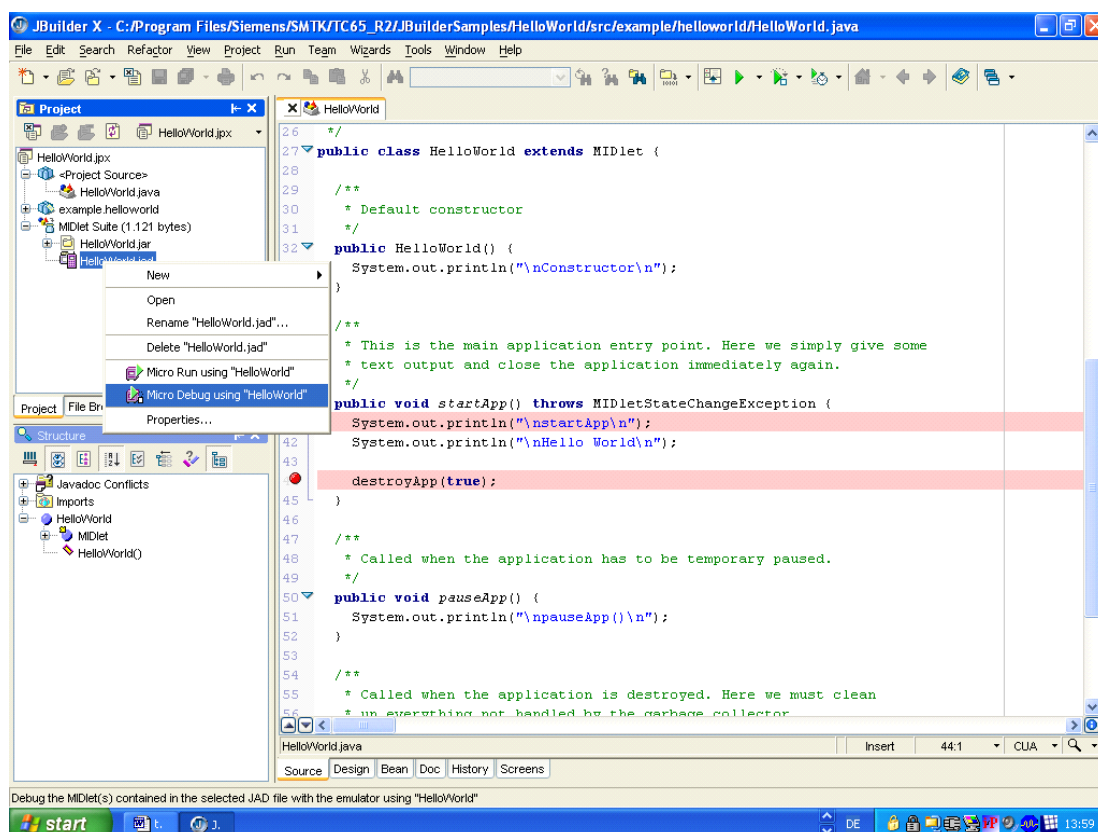


Figure 51: JBuilder X – Starting the debugging session

11.3.3.2 Starting Debug Session without Downloading Java Files

It is possible to start a debugging session without download of the Java files (*.jad and *.jar) again. The emulator has to be started with an additional parameter “-noload” and downloading of the Java files is suppressed. Please add the parameter in the following emulator running configuration line as described in the figures above.

Select the project properties (e.g. “HelloWorld.jpx”) and edit the emulator configuration.

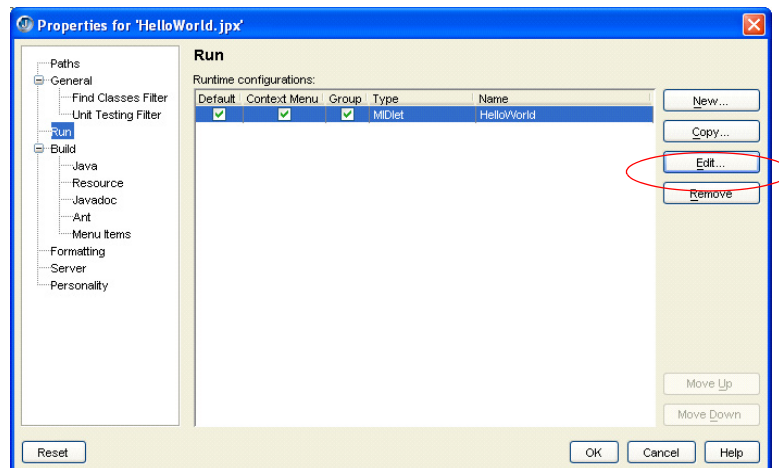


Figure 52: JBuilder X – Edit project properties for starting the emulator

Set the additional emulator parameter “-noload” and press OK.

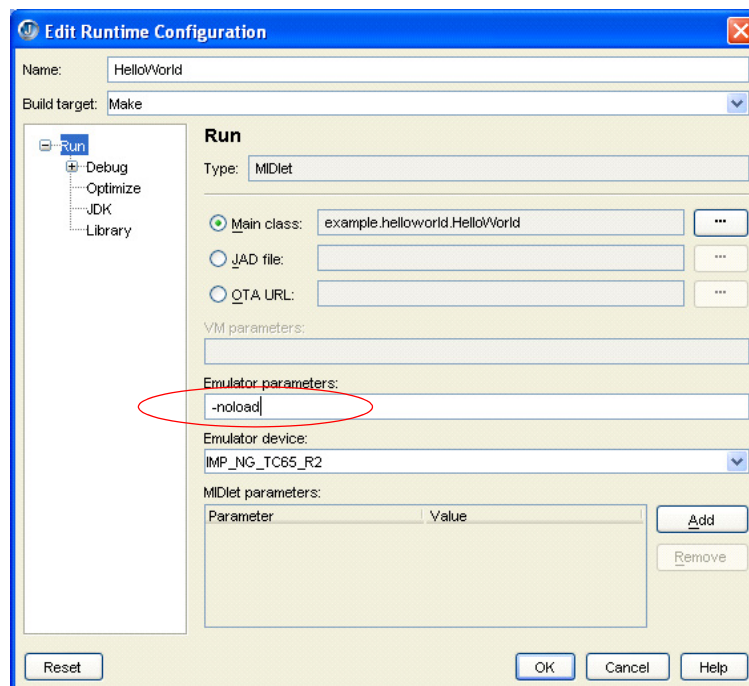


Figure 53: JBuilder - Runtime Configuration

Keep in mind, that you have to remove this emulator option before starting debugging session with download of Java files. The Java files are not updated in the Flash files system of the module while option “-noload” is set!

The same procedure is used for all different JBuilder IDE versions.

11.3.4 Borland JBuilder 2005 and JBuilder 2006 Enterprise/Developer

If JBuilder 2005 or JBuilder 2006 Enterprise/Developer is not installed, run the JBuilder 2005 or JBuilder 2006 Enterprise/Developer install program and follow the installation wizard instructions. Use the SMTK installation routine in maintenance mode. The SMTK will find the installed JBuilder 2005 or JBuilder 2006 Enterprise/Developer IDE. Select JBuilder 2005 or JBuilder 2006 Enterprise/Developer to integrate the SMTK into JBuilder 2005 or JBuilder 2006 Enterprise/Developer.

After the integration of the SMTK into JBuilder 2005 or JBuilder 2006 Enterprise/Developer you can examine the integration by opening the menu *Tools* → *Configure* → *JDKs...* (see Figure below).

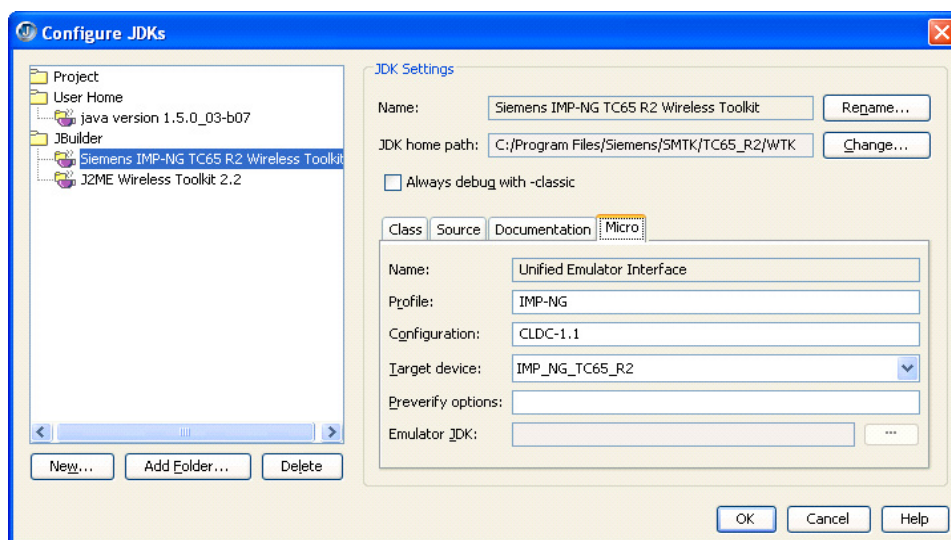


Figure 54: JBuilder 2006 Enterprise/Developer – JDK settings

The libraries included with the SMTK can be examined by opening the menu *Tools* → *Configure* → *Libraries...* (see Figure below).

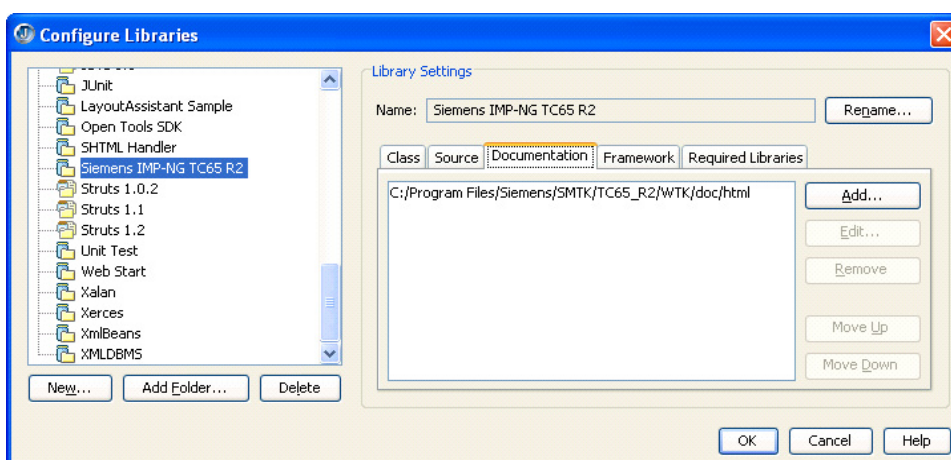


Figure 55: JBuilder 2006 Enterprise/Developer – Siemens Library

11.3.4.1 Examples

There are sample projects provided with the SMTK. These projects can be found in the JBuilderSamples directory of the SMTK installation directory. This directory is accessed by opening a project using the menu *File* → *Open Project...* (see Figure below).

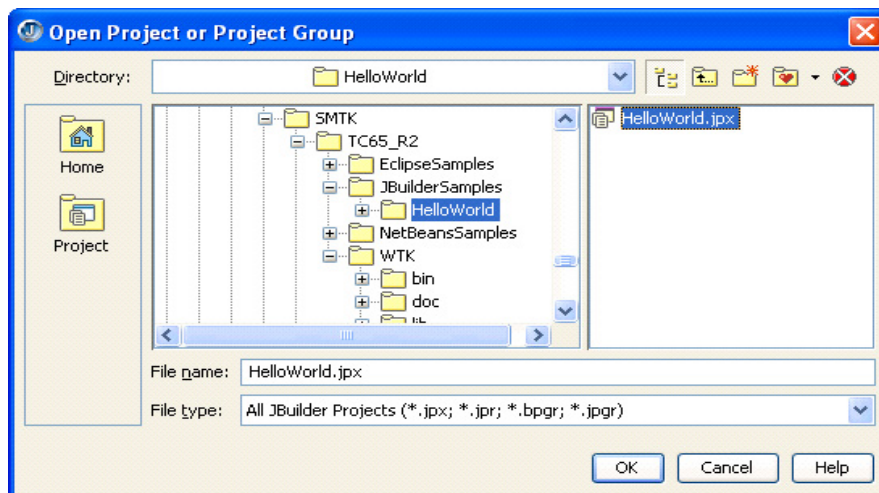


Figure 56: JBuilder 2006 Enterprise/Developer – Sample Projects

Starting the debugging session is done in the same way as for JBuilder X (see chapter for JBuilder X above).

11.4 Breakpoints

Breakpoints can be set as usual within the IDE. The debugger cannot step through methods or functions whose source code is not available.

11.5 Switching Java "System.out" to IDE Debug Window

The Java "System.out" can be redirected during a debugging session using a UDP socket connection as described in [Section 5.9](#) "System Out" and [Section 5.9.3](#) "UDP". Switching between Java "System.out" using serial port and Java "System.out" using UDP socket is done by a setting inside of the emulator configuration file "WM_Debug_config.ini" (e.g. TC65 Release 2: located under "TC65_R2\WTK\bin", TC65 Release 3: located Windows OS dependent under "Application Data" folder as described in [Section 11.2](#)). Switching Java "System.out" to serial port is used as default setting.

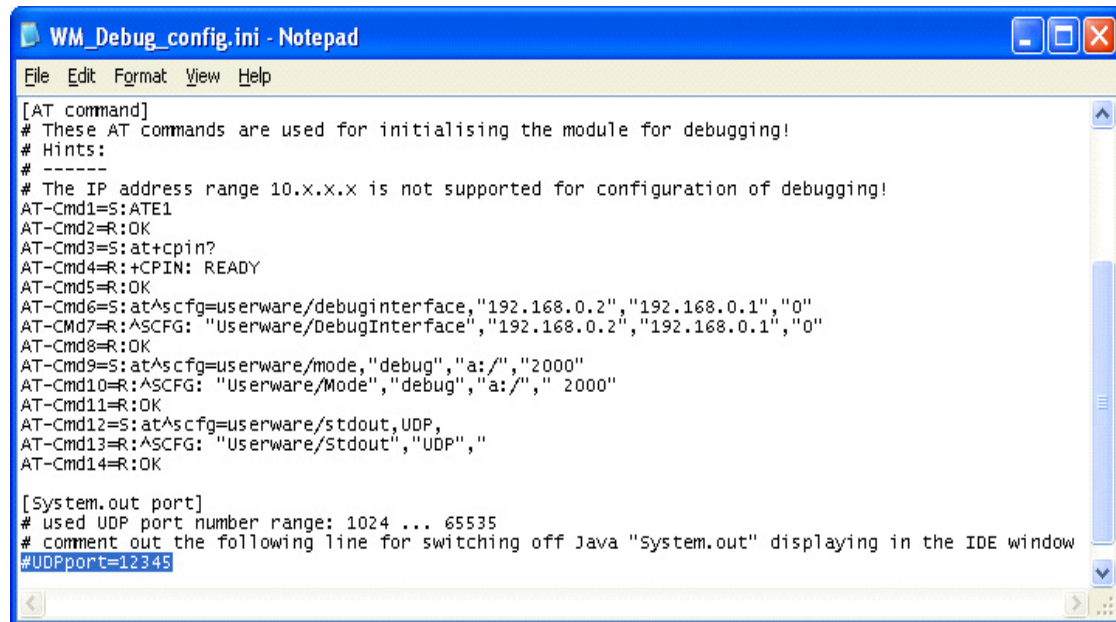


Figure 57: Emulator configuration file "switching Java System.out to serial port"

The following line of the "WM_Debug_config.ini" file is used for switching the Java "System.out" direction:

```
#UDPport=12345
```

To switch the Java "System.out" direction to the UDP socket and display it on a IDE window please remove "#". The configuration line looks as follows:

```
UDPport=12345
```

To switch the Java "System.out" direction to serial port output please add "#" (default setting). The configuration line looks as follows:

```
#UDPport=12345
```

Remarks:

Please keep in mind that the handling of Java "System.out" is done asynchronous. It is possible, that not all Java "System.out" data are written into the IDE window. To avoid this problem please set a breakpoint in front of the Java function call "notifyDestroyed()" inside your Java source.

Java "System.out" using IDE window is only supported during debugging session.

11.6 Important Information for Java Debugging on Windows Vista

This section applies only to TC65.

Java Debugging on Windows Vista requires that administrator privileges be set. To do so, follow these steps:

1. Log on your system using an administrator account.
2. Start each IDE with option "Run as administrator" for starting Java debugging:
 - Temporarily: Right-click the IDE icon (on your desktop) and select "Run as administrator" or
 - Permanently: Open the Windows Explorer and change the option for the IDE executable. For example, right-click the "Eclipse.exe", select *Properties* and tab *Compatibility*, then select "Run this program as an administrator" in section "Privilege Level" (see figure below).

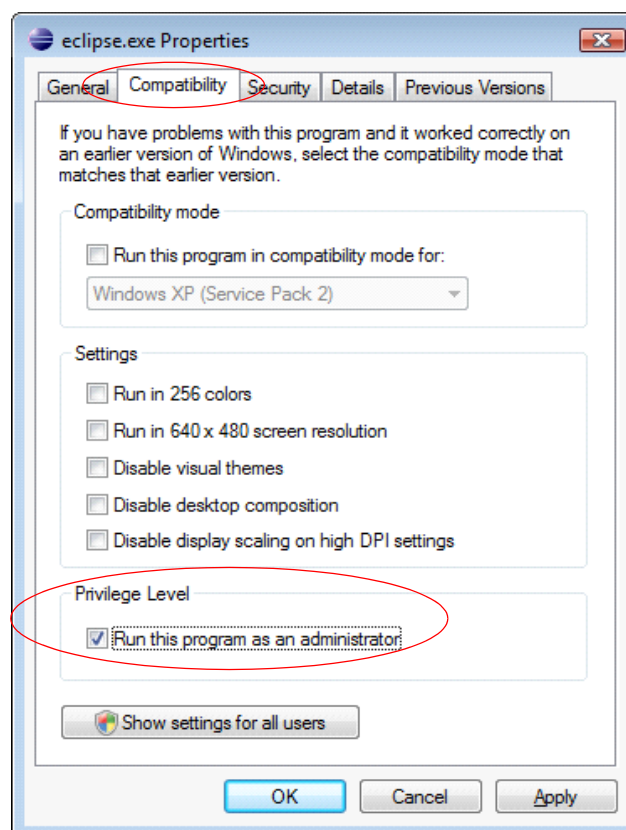


Figure 58: Using Windows Vista: Set Eclipse.exe permanent to "Run as administrator"

3. Eclipse workspace directory is located at <drive name>:\Users\<login>\AppData\workspace (e.g. "c:\Users\MyLoginName\AppData\workspace")
Please select this workspace before starting Java debugging with Eclipse!
The automatic integration of TC65 is only done in this workspace.

12 Java Security

The Java Security Model follows the specification of MIDP 2.0 and is IMP-NG conforming. It integrates only a simple protection domain concept since protection domains are not needed for module use cases.

Java Security is divided into two main areas:

- Secure MIDlet data links (HTTPS, Secure Connection) (see [Section 12.1](#))
- Execution of signed/unsigned MIDlets (see [Section 12.2](#))

The interface of Java Security offers the following functionality.

- Insert/delete X.509 certificate (default is no certificate, see [Section 12.2.1](#))
- Switch between trusted and untrusted mode for the execution of MIDlet (default is trusted after inserting the certificate, see [Section 12.2.1](#))
- Enable/disable untrusted domain in trusted mode (default is disabled)
- Switch MES (default is ON see [Section 12.3](#))
- Switch https certificate verification (default is OFF, see [Section 12.1](#))

Restrictions:

- The module does not supply users independent date/time base. Therefore no examination of the validity of the expiration date/time of the certificate takes place.

12.1 Secure Data Transfer

This feature makes it possible for MIDlets to use safe data links to external communications partners. The specification IMP-NG defines two java classes with this characteristic - HTTPS-Connection and SecureConnection

The Siemens implementation follows the recommendations in IMP-NG:

HTTPSConnection

- HTTP over TLS as documented in [RFC 2818](#) and TLS Protocol Version 1.0 as specified in [RFC 2246](#).

SecureConnection

- TLS Protocol Version 1.0 as specified in [RFC 2246](#)

Two modes exist for safe data links.

Mode 1:

- No examination of the server certificate takes place when setting up the connection. The authenticity of the server certificate is not verified. See [Figure 59](#).

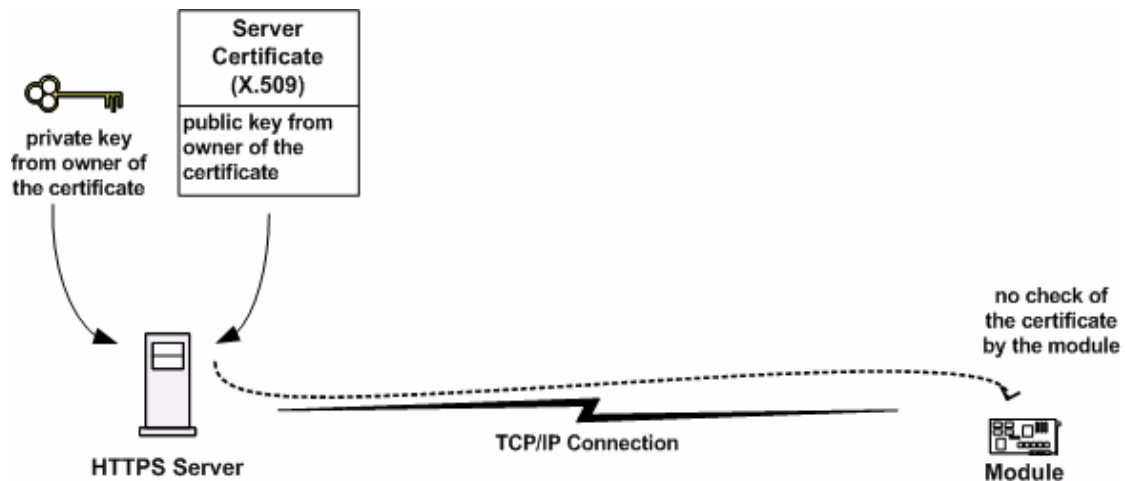


Figure 59: Mode 1 – Customer Root Certificate does not exist

Mode 2 (see [Section 12.2.1](#), 1. Step):

- Customer Root Certificate is inside of the module.
- Command: Switch on Certificate Verification for HTTPS Connections was sent.
- The server certificate is examined when setting up a connection. Two configurations are valid. The server certificate is identical to the certificate in the module (both certificates are self signed root certificates) or the server certificate forms a chain with the certificate of the module. Thus the authenticity of the server certificate can be examined with the help of the certificate of the module. See [Figure 60](#) and [Figure 61](#).

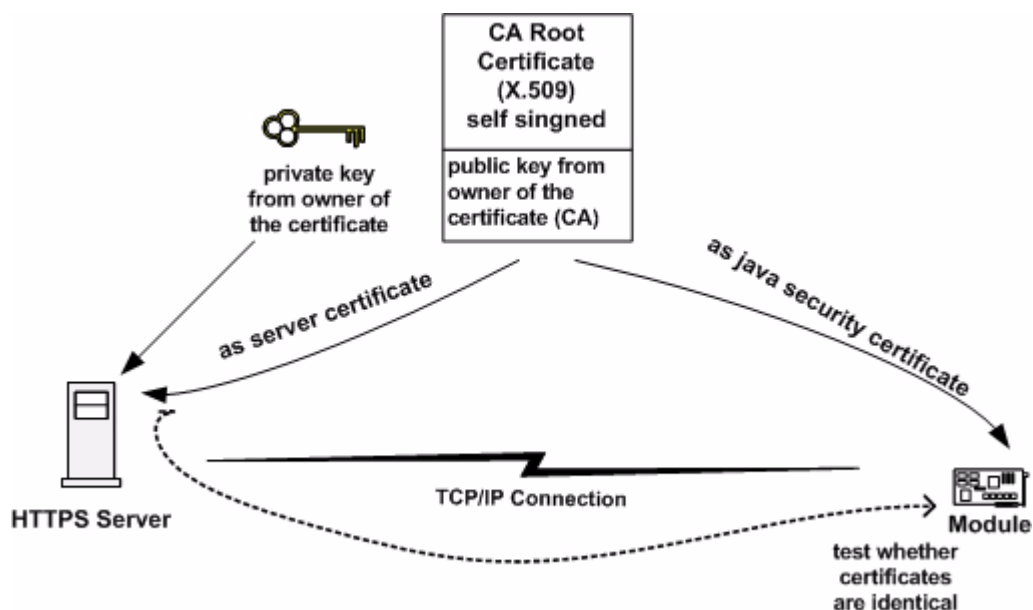


Figure 60: Mode 2 - Server Certificate and Certificate into module are identical

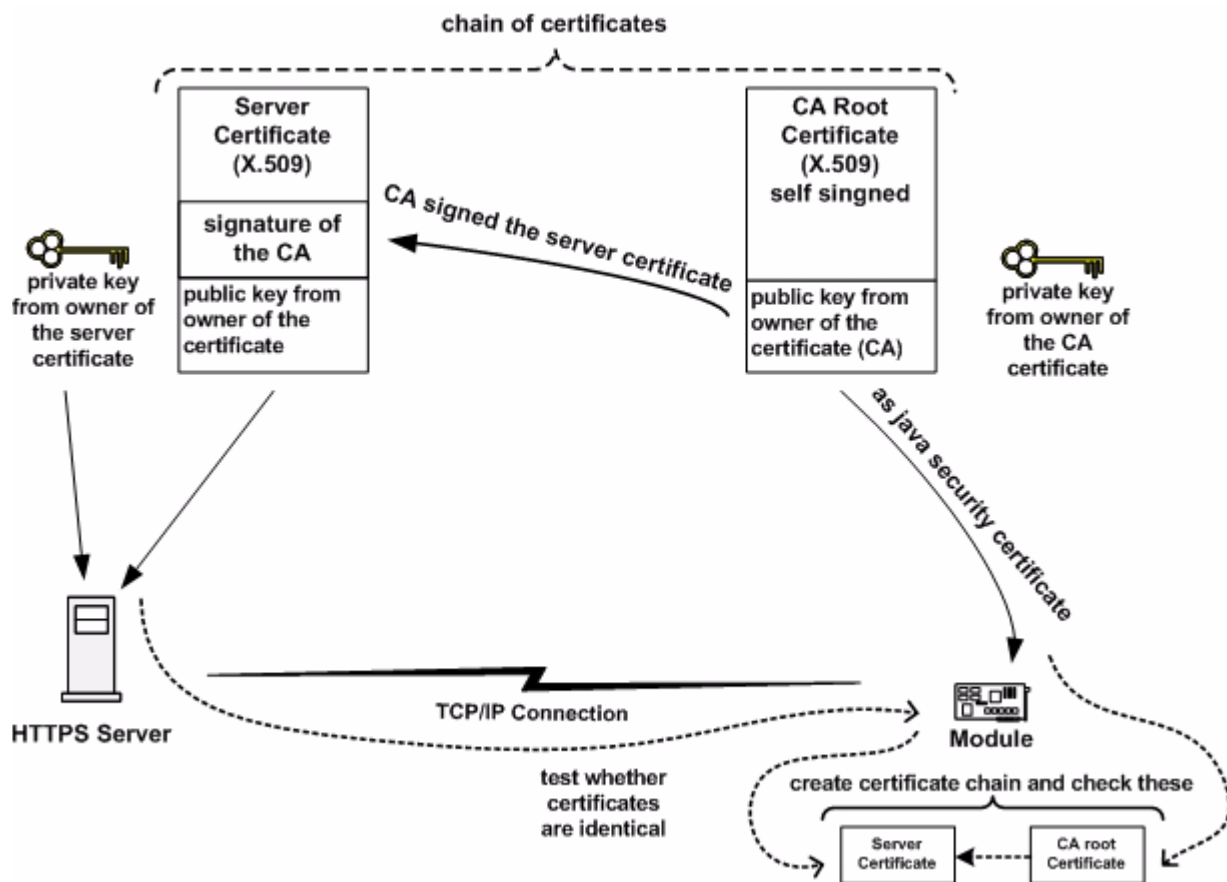


Figure 61: Mode 2 - Server Certificate and self signed root Certificate in module form a chain

12.1.1 Create a Secure Data Transfer Environment Step by Step

The following steps describe the configuration:

- The certificate exists within the module (see [Section 12.2.1](#), Step 1).
- Certificate verification is activated for a data connection (HTTPS or SecureConnection).

The steps described below use the cygwin + openssl environment (for installation see <http://www.cygwin.com/>. The openssl documentation can be found here <http://www.openssl.org/docs/apps/openssl.html>)

A CA Root certificate is generated. This certificate can be placed on the HTTPS-Server. Another possibility is to use the private key of the certificate in order to sign thereby a server certificate. Both certificates form then a chain, which can be examined by the ME. A step-by-step description for the latter scenario can be found below.

1. Create CA and generate CA Root Certificate

- We need certificates with sha1 signature. Java Security supports a sha1 signature of the certificate only.

Add the parameter "-sha1" to the command "Making CA certificate ..." in the section of file CA.pl (cygwin location `\cygwin\usr\ssl\misc`)

- Create a shell (use location `\cygwin\usr\ssl\misc`)
- Execute commands

```
>perl CA.pl -newca
```

- Convert file format from PEM to DER
CA certificate cacert.pem

```
>openssl x509 -in ./demoCA/cacert.pem -inform PEM  
-out ./demoCA/cacert.der -outform DER
```

CA private key file cakey.pem

```
>openssl pkcs8 -in ./demoCA/private/cakey.pem  
-inform PEM -out ./demoCA/private/cakey.der  
-outform DER -nocrypt -topk8
```

2. Create server certificate and java keystore

- Execute command

```
>keytool -genkey -alias server  
-keypass keypass -keystore customer.ks -storepass keystorepass  
-sigalg SHA1withRSA -keyalg RSA
```

The field "name" of the certificate is the domain name or the IP address of the server.

3. Create certificate request for server certificate

- Execute command

```
>keytool -certreq -alias server -file server.csr  
-keypass keypass -keystore customer.ks  
-storepass keystorepass
```

4. Sign certificate request by CA

- Execute command

```
>openssl ca -in server.csr -out server.pem
```

- Convert file format from PEM to DER

```
>openssl x509 -in server.pem -inform PEM  
-out server.der -outform DER
```

5. Import CA root certificate and CA private key into java keystore
 - Use the CA Root Certificate for the creation of Java Security Command. See [Section 12.5.3](#).
 - Execute command

```
>java -jar setprivatekey.jar -alias dummyca  
-storepass keystorepass -keystore customer.ks  
-keypass cakeypass  
-keyfile ./democa/private/cakey.der -certfile ./democa/cacert.der
```

6. Export private key from server certificate
 - The private key is needed for the (HTTPS or Secure Connection)server configuration.
 - Execute command

```
java -jar getprivatekey.jar -alias server  
-keystore customer.ks -storepass keystorepass  
-keypass keypass -keyfile server_privkey.der
```

- Convert format

```
>openssl pkcs8 -in server_privkey.der  
-inform DER -out server_privkey.pem  
-outform PEM -nocrypt
```

7. Send CA Root Certificate to the module
 - Create Java Security Command "**SetRootCert**". See [Section 12.5.3](#).
 - Send this command with AT^SJSEC to the module. See [Section 12.4.3](#).
8. Send Java Security Command "Switch on Certificate Verification for HTTPS Connections" to the module. See [Section 12.5.3](#).

Result:

- You have a keystore for the configuration of the Java Security of the module.
- You have a signed server certificate (files "server.pem" or "server.der").
- You have a private key file for your server configuration (files "server_privkey.pem" or "server_privkey.der").
- The module contains the CA Root Certificat.
- HTTPS certificate verification is activate.

Consult the documentation of your web server on how to set up the certificate on it.

12.2 Execution Control

The Java environment of the ME supports two modes.

Unsecured mode:

- The device starts all Java applications (MIDlets).

Secured mode:

- A condition for the secured mode of the device is the existence of a certificate inside of the module.
- The customer can activate the secured mode of the device. To do so, the customer sends a root certificate (x.509 certificate) and the command Switch ON Security Mode to the device (over an AT Interface). The device changes from unsecured mode to the secured mode. From this time the module will only start Java applications with a valid signature. In addition, the device will only accept special commands from the customer if they are marked with a signature. The device examines each command with the public key of the customer root certificate.
- The secured mode supports a simple protection domain concept, providing a domain for unsigned MIDlets. If this domain (domain for untrusted MIDlets) is active, then an unsigned MIDlet is assigned to this domain and has only limited access to the Java-API. The untrusted domain is activated by use of Java Security Command Switch ON Untrusted Domain (see [Section 12.5.3](#)).

untrusted domain:

- HTTP-Connection is permitted
- TCP/IP-Socket Connection is permitted

Standard behavior of the module:

Siemens supplies modules with unsecured mode as the default configuration.

Insert the certificate:

- The module changes into the mode "trusted" for MIDlet execution. "Untrusted Domain" is OFF.
- HTTPS certificate verification is OFF.
- MES is ON.

Remove the certificate:

- The module changes into the mode "untrusted" for MIDlet execution.
- HTTPS certificate verification is OFF
- MES is ON.

12.2.1 Change to Secured Mode Concept

Create and insert a customer root certificate:

A condition for the change to the secured mode is the existence of a customer root certificate inside of the module.

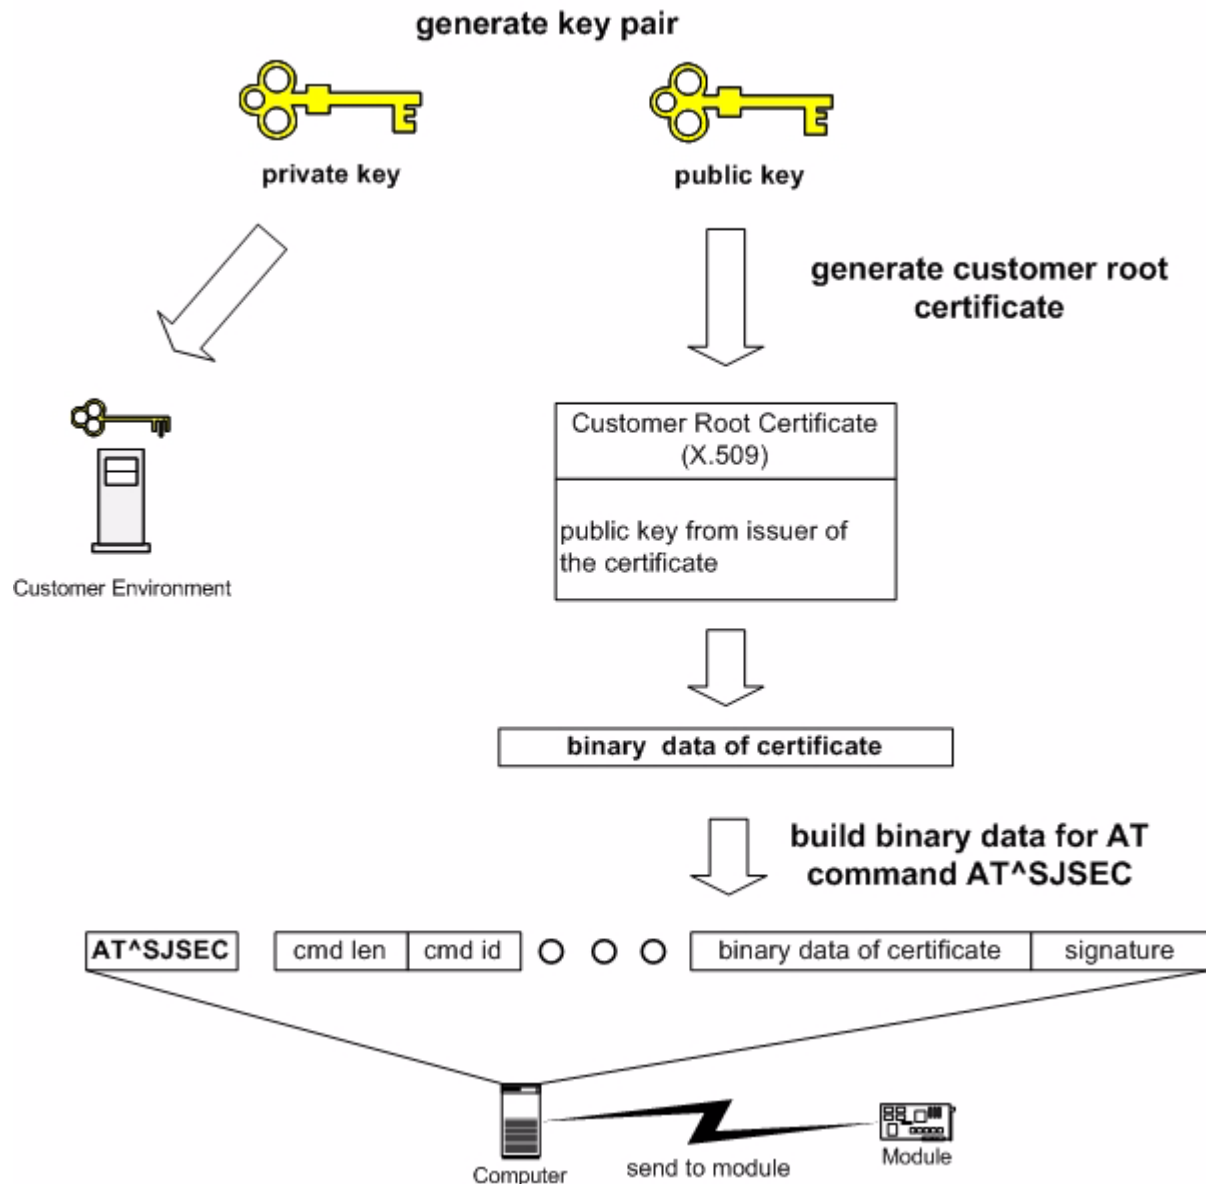


Figure 62: Insert Customer Root Certificate

After this action the module is in the following conditions:

- The module changes into the mode "trusted" for MIDlet execution. "Untrusted Domain" is OFF.
- HTTPS certificate verification is OFF.
- MES is ON.

12.2.2 Concept for the Signing the Java MIDlet

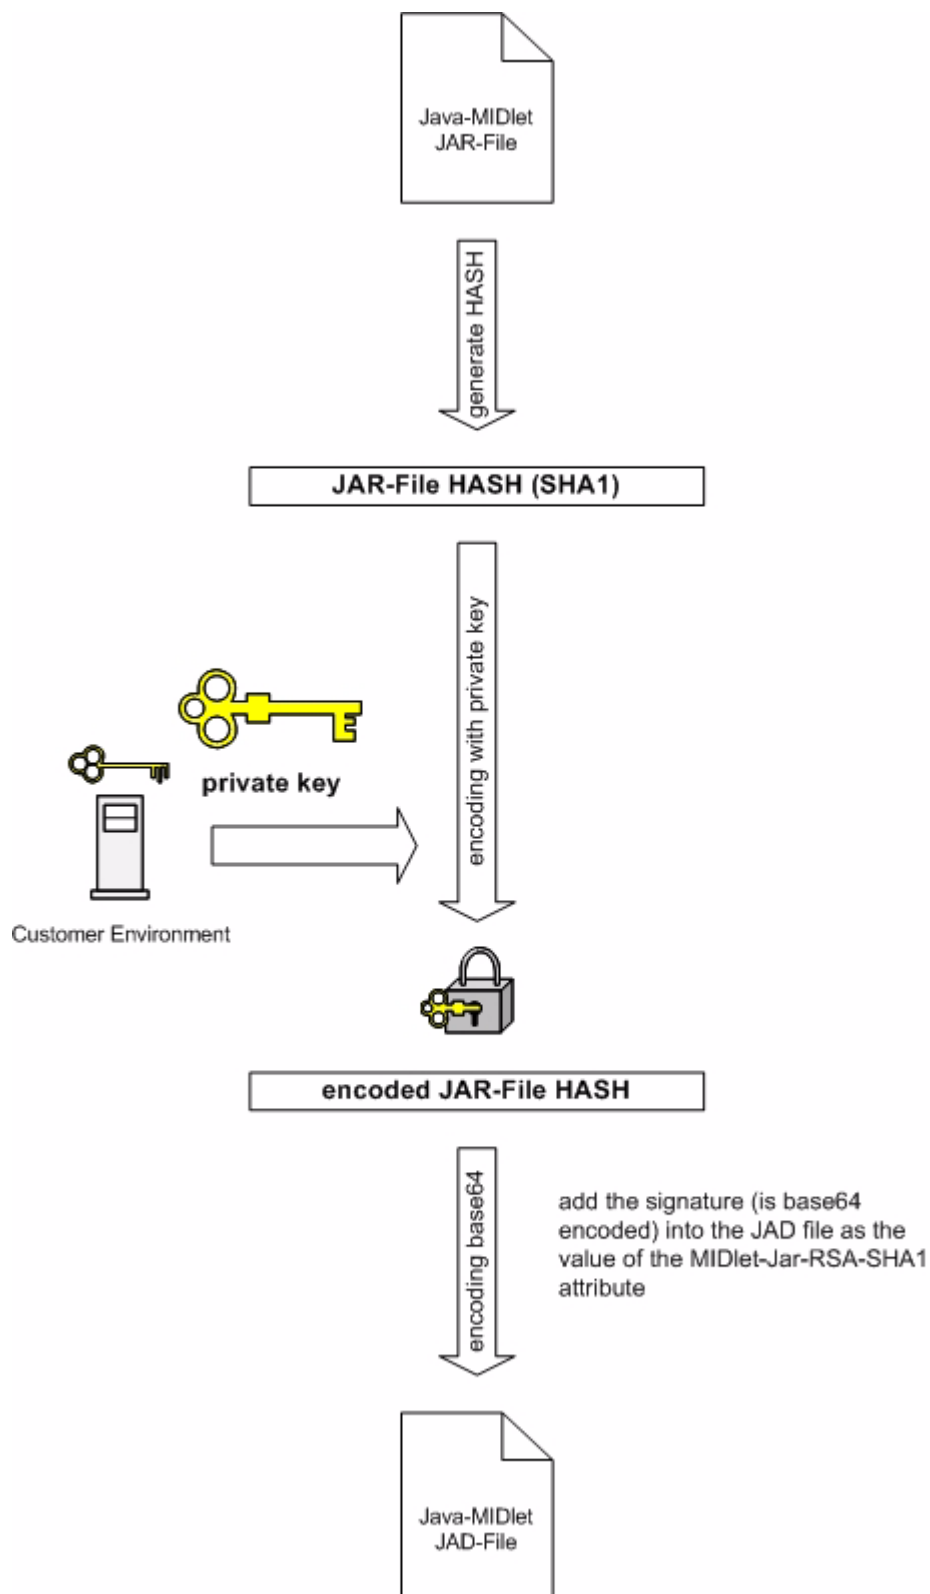


Figure 63: Prepare MIDlet for Secured Mode

12.3 Application and Data Protection

In addition to the Java secured mode it is possible to prevent the activation of the Module Exchange Suite. When Module Exchange Suite access is deactivated with `AT^SJSEC`, it is no longer possible to access to the Flash file system on the module. A condition for the deactivation of the access to the Flash file system is the existence of a customer root certificate inside of the module (see [Section 12.2.1](#)).


The default state of MES is ON.

12.4 Structure and Description of the Java Security Commands

Special commands are used in the Java security environment. These commands are transferred to the module with the help of the special AT command `AT^SJSEC`. This command makes it possible to send binary data to the module. After `AT^SJSEC` is issued, the module changes into a block transfer mode. Now binary data in a fixed format can be sent. These binary data contain the actual Java security commands.

12.4.1 Structure of the Java Security Commands

General structure

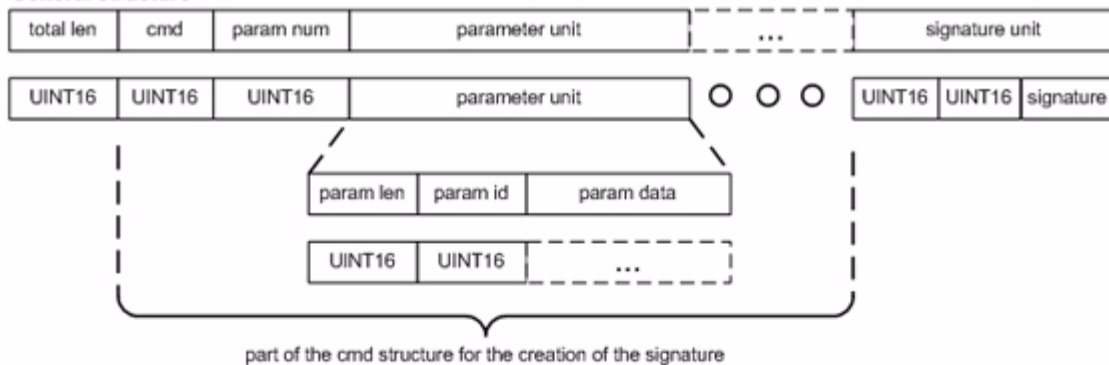

total len = all bytes of the command structure (including size of "total len")

param len = all bytes of the parameter structure (including size of "param len")

List of parameters

param id	param len	param data	description
0x0001	D	certificate data	content of *.der file
0x0002	0x0005	0x00 or 0x01	on/off switch, 0x00 = off, 0x01 = on
0x0003	0x0014	IMEI	numeric numbers in ASCII format (zero terminated string)
0x0004	D	signature data	SHA-1signature the of command, base64 coded (zero terminated string)

D - depend from the length of parameter

List of commands

cmd id	description
0x0001	Set Customer Root Certificate
0x0002	Del Customer Root Certificate
0x0003	Switch on/off Certificate Verification for HTTPS Connections
0x0004	Switch on/off OBEX Functionality
0x0005	Switch on/off Security Mode of the module
0x0006	Switch on/off Untrusted Domain inside of the Security Mode

Set Customer Root Certificate

total len	0x0001	0x0003	param unit certificate	param unit IMEI	param unit signature
-----------	--------	--------	------------------------	-----------------	----------------------

Del Customer Root Certificate

total len	0x0002	0x0002	param unit IMEI	param unit signature
-----------	--------	--------	-----------------	----------------------

Switch on/off Certificate Verification for HTTPS Connections

total len	0x0003	0x0003	param unit switch	param unit IMEI	param unit signature
-----------	--------	--------	-------------------	-----------------	----------------------

Switch on/off OBEX Functionality

total len	0x0004	0x0003	param unit switch	param unit IMEI	param unit signature
-----------	--------	--------	-------------------	-----------------	----------------------

Switch on/off Security Mode

total len	0x0005	0x0003	param unit switch	param unit IMEI	param unit signature
-----------	--------	--------	-------------------	-----------------	----------------------

Switch on/off Untrusted Domain

total len	0x0006	0x0003	param unit switch	param unit IMEI	param unit signature
-----------	--------	--------	-------------------	-----------------	----------------------

12.4.2 Build Java Security Command

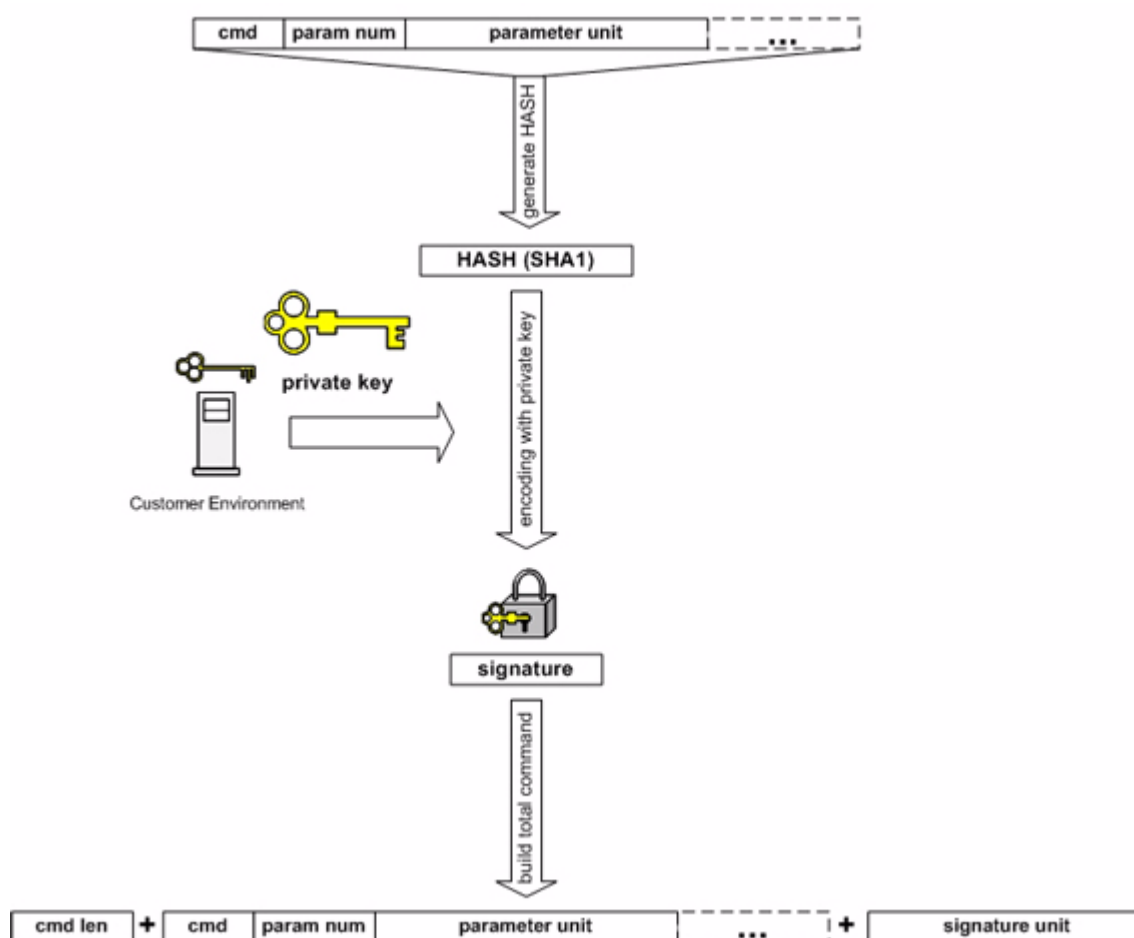


Figure 64: Build Java Security Command

12.4.3 Send Java Security Command to the Module

Use a terminal program. Enter:

AT^SJSEC

Wait for the answer:

CONNECT

JSEC READY: SEND COMMAND ...

Now you can send the binary data of the command (for example: from a file with the binary data of the command).

The module's answer depends on the result of the operation.

The read command, AT^SJSEC?, can be used to request the current Java security status.

Read command AT^SJSEC?	<p>The read command can be used to request the current status of java security.</p> <p>Response</p> <p>^SJSEC:<state>,<HTTPS state>,<OBEX state>,<untrusted domain> [<certificate content>]</p> <p><state> Java security mode</p> <ul style="list-style-type: none"> 0 Unsecured mode, i.e. security mode not active (default) 1 Secured mode, i.e. security mode active <p><HTTPS state></p> <ul style="list-style-type: none"> 0 The HTTPS connection or Secure Connection is possible if the server certificate (or certificate chain) is valid (default) 1 The HTTPS Connection or Secure Connection is possible only if the server certificate is signed by the customer (owner of root certificate in device) <p><OBEX state></p> <ul style="list-style-type: none"> 0 Start of Module Exchange Suite is not permitted 1 Start of Module Exchange Suite is permitted (default) <p><untrusted domain></p> <ul style="list-style-type: none"> 0 Untrusted domain does not exist, MIDlets must be signed (default) 1 Untrusted domain does exist, unsigned MIDlets have limited rights of access to the Java-API <p>Certificate Information: (default no certificate)</p> <p>Issuer:</p> <p>SerialNumber:</p> <p>Subject:</p> <p>Signature algorithm:</p> <p>Thumbprint algoritm:</p> <p>Thumbprint:</p>
---------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

12.5 Create a Java Security Environment Step by Step

12.5.1 Create Key Store

The key store contains the key pairs for signing data. For producing the key store with keys the tool "keytool.exe" can be used. The program is in the Java SDK. (for a description see <http://java.sun.com/j2se/1.3/docs/tooldocs/solaris/keytool.html>).

Example:

```
keytool -genkey -alias keyname -keypass keypassword -keystore customer.ks  
-storepass keystorepassword -sigalg SHA1withRSA -keyalg RSA
```

If you want to re-use the key store created in [Section 12.1.1](#) you have to use the alias and passwords used there.

12.5.2 Export X.509 Root Certificate

For exporting the x.509 root certificate use "keytool.exe". The program is in the Java SDK. (for description see <http://java.sun.com/j2se/1.3/docs/tooldocs/solaris/keytool.html>)

```
keytool -export -v -keystore customer.ks -storepass keystorepassword  
-alias keyname > certificate.der
```

12.5.3 Create Java Security Commands

For producing the java security commands the tool "jseccmd.jar" can be used. This program is in the folder "wkt\bin".

Command for inserting the Customer Root Certificate

- In consequence of the command
Java security mode: ON (untrusted domain OFF)
HTTPS certificate verification: OFF
MES state: ON

```
java -jar jseccmd.jar -cmd SetRootCert  
-certfile certificate.der  
-imei 012345678901234 -alias keyname  
-storepass keystorepassword -keypass keypassword  
-keystore customer.ks > SetRootCert.bin
```

Command for removing the Customer Root Certificate

- In consequence of the command all switches are reset
Java security mode: OFF (untrusted domain OFF)
HTTPS certificate verification: OFF
MES state: ON

```
java -jar jseccmd.jar -cmd DelRootCert  
-imei 012345678901234 -alias keyname  
-storepass keystorepassword -keypass keypassword  
-keystore customer.ks > DelRootCert.bin
```

Command: switch on Java Security Mode

```
java -jar jseccmd.jar -cmd TrustedModeOn  
-imei 012345678901234 -alias keyname  
-storepass keystorepassword -keypass keypassword  
-keystore customer.ks > TrustedModeOn.bin
```

Command: switch off Java Security Mode

```
java -jar jseccmd.jar -cmd TrustedModeOff  
-imei 012345678901234 -alias keyname  
-storepass keystorepassword -keypass keypassword  
-keystore customer.ks > TrustedModeOff.bin
```

Command: switch on Untrusted Domain (it is possible only inside of the Java Security Mode)

```
java -jar jseccmd.jar -cmd UntrustedDomainOn  
-imei 012345678901234 -alias keyname  
-storepass keystorepassword -keypass keypassword  
-keystore customer.ks > UntrustedDomainOn.bin
```

Command: switch off Untrusted Domain

```
java -jar jseccmd.jar -cmd UntrustedDomainOff  
-imei 012345678901234 -alias keyname  
-storepass keystorepassword -keypass keypassword  
-keystore customer.ks > UntrustedDomainOff.bin
```

Command: switch on Certificate Verification for HTTPS Connections

```
java -jar jseccmd.jar -cmd HttpsVerifyOn  
-imei 012345678901234 -alias keyname  
-storepass keystorepassword -keypass keypassword  
-keystore customer.ks > HttpsVerifyOn.bin
```

Command: switch off Certificate Verification for HTTPS Connections

```
java -jar jseccmd.jar -cmd HttpsVerifyOff  
-imei 012345678901234 -alias keyname  
-storepass keystorepassword -keypass keypassword  
-keystore customer.ks > HttpsVerifyOff.bin
```

Command: switch on module exchange functionality

```
java -jar jseccmd.jar -cmd ObexActivationOn  
-imei 012345678901234 -alias keyname  
-storepass keystorepassword -keypass keypassword  
-keystore customer.ks > ObexActivationOn.bin
```

Command: switch off module exchange functionality

```
java -jar jseccmd.jar -cmd ObexActivationOff  
-imei 012345678901234 -alias keyname  
-storepass keystorepassword -keypass keypassword  
-keystore customer.ks > ObexActivationOff.bin
```

12.5.4 Sign a MIDlet

Use the tool "jadtool.jar" to sign a Java MIDlet. This program is in the folder "wkt\bin".

```
java -jar jadtool.jar -addjarsig -jarfile helloworld.jar  
-inputjad helloworld.jad  
-outputjad helloworld.jad  
-alias keyname -storepass keystorepassword  
-keypass keypassword -keystore customer.ks  
-encoding UTF-8
```

12.6 Attention

The central element of Java Security is the **private key**. If Java Security is activated and you lose the private key, then the **module is destroyed**. You have no chance of deactivating Java Security, downloading of a new Midlet or starting any other operation concerning Java Security. To prevent problems you are strongly advised to **secure the private key**.

13 Java Tutorial

This small tutorial includes explanations on how to use the AT Command API and suggestions for programming MIDlets. The developer should read about MIDlets, Threads and AT commands as a complement to this tutorial.

13.1 Using the AT Command API

Perhaps the most important API for the developer is the AT command API. This is the API that lets the developer issue commands to control the module. This API consists of the *ATCommand* class and the *ATCommandListener* and *ATCommandResponseListener* interfaces. Their javadocs can be found in ...\\wtk\\doc\\html\\index.html, [3].

13.1.1 Class ATCommand

The *ATCommand* class supports the execution of AT commands in much the same way as they would be executed over a serial interface. It provides a simple way to send strings directly to the device's AT parsers.

13.1.1.1 Instantiation with or without CSD Support

There can be only exactly as many *ATCommand* instances as there are parsers on the device. If there are no more parsers available, the *ATCommand* constructor will throw *ATCommandFailedException*. All AT parser instances support CSD. However from a Java application point of view it may make sense to have one dedicated instance for CSD call handling. Therefore, and also for historical reasons, only one parser with CSD support may be requested through the constructor. If more then one parser with CSD support is requested, the constructor will throw *ATCommandFailedException*.

```
try {
    ATCommand atc = new ATCommand(false);
    /* An instance of ATCommand is created. CSD is not explicitly
     * requested. */
} catch (ATCommandFailedException e) {
    System.out.println(e);
}
```

The *csdSupported()* method returns the CSD capability of the connected instance of the device's AT parser. The method checks as well, if the current mode of the module supports CSD. Please notice that this check has not been done when opening the *ATCommand* instance.

```
boolean csd_support = atc.csdSupported();
```

release() releases the resources held by the instance of the *ATCommand* class. After calling this function the class instance cannot be used any more but the resources are free to be used by a new instance

13.1.1.2 Sending an AT Command to the Device, the send() Method

An AT command is sent to the device by using the send() method. The AT command is sent as a string which must include the finalizing line feed "\r" or the corresponding line end character.

```
String response = atc.send("at+cpin?\r");  
/* method returns when the module returns a response */  
System.out.println(response);  
  
#Possible response printed to System.out:  
+CPIN: READY OK
```

This send function is a blocking call, which means that the calling thread will be interrupted until the module returns a response. The function returns the response, the result code of the AT command, as a string.

Occasionally it may be infeasible to wait for an AT command that requires some time to be processed, such as AT+COPS. There is a second, non-blocking, send function which takes a second parameter in addition to the AT command. This second parameter is a callback instance, *ATCommandResponseListener*. Any response to the AT command is delivered to the callback instance when it becomes available. The method itself returns immediately. The *ATCommandResponseListener* and the non-blocking send method are described in [Section 13.1.2](#).

Note: Using the send methods with strings with incorrect AT command syntax will cause errors.

13.1.1.3 Data Connections

If a data connection is created with the *ATCommand* class, for instance with 'atd', an input stream is opened to receive the data from the connection. Similarly, an output stream can be opened to send data on the connection.

```
/* Please note that this example would not work unless the module had
 * been initialized and logged into a network. */

System.out.println("Dialing: ATD" + CALLED_NO);
response = atc.send("ATD" + CALLED_NO + "\r");
System.out.println("received: " + response);

if (response.indexOf("CONNECT") >= 0) {
    try {
        // We have a data connection, now we do some streaming...
        // IOException will be thrown if any of the Stream methods fail
        OutputStream dataOut = ATCmd.getDataOutputStream();
        InputStream dataIn = ATCmd.getDataInputStream();

        // out streaming...
        dataOut.write(new String("\n\rHello world\n\r").getBytes());
        dataOut.write(new String("\n\rThis data was sent by a Java " +
            "MIDlet!\n\r").getBytes());
        dataOut.write(new String("Press 'Q' to close the " +
            "connection\n\r").getBytes());

        // ...and in streaming
        System.out.println("Waiting for incoming data, currently " +
            dataIn.available() + " bytes in buffer.");
        rcv = 0;
        while(((char)rcv != 'q') && ((char)rcv != 'Q') && (rcv != -1)){
            rcv = dataIn.read();
            if (rcv >= 0) {
                System.out.print((char)rcv);
            }
        }
    }
    /* The example continues after the next block of text */
}
```

These streams behave slightly differently than regular data streams. The streams are not closed by using the `close()` method. A stream remains open until the *release()* method is called. A module can be switched from the data mode to the AT command mode by calling the *breakConnection()* method.

```
/* continue example */
if (rcv != -1) {
    // Now break the data connection
    System.out.println("\n\n\rBreaking connection");
    try {
        strRcv = ATCmd.breakConnection();
    } catch (Exception e) {
        System.out.println(e);
    }
    System.out.println("received: " + strRcv);
} else {
    // Received EOF, somebody else broke the connection
    System.out.println("\n\n\rSomebody else switched to " +
        "command mode!");
}
System.out.println("Hanging up");
strRcv = ATCmd.send("ATH\r");
System.out.println("received: " + strRcv);
} catch (IOException e) {
    System.out.println(e);
}
} else {
    System.out.println("No data connection established,");
}
```

An `IOException` is thrown if any function of the I/O streams are called when the module is in AT command mode, except for read functions. The read function case is explained in more detail in [Section 13.1.3](#). The `ATCommand` class does not report the result codes returned after data connection release.

Data Connections are not only used for data transfer over the air but also to access external hardware. Here is a list of at commands which open a data connection:

- `atd`, for data calls
- `AT^SSPI`, for access to I2C/SPI
- `AT^SIS` commands for Internet services

For data connection signaling see also [Section 13.1.3](#).

13.1.1.4 Synchronization

For performance reasons no synchronization is done in the `ATCommand` class. If an instance of this class has to be accessed from different threads ensure that the `send()` functions, the `release()` function, the `cancelCommand()` function and the `breakConnection()` function are synchronized in the user implementation.

13.1.2 ATCommandResponseListener Interface

The `ATCommandResponseListener` interface defines the capabilities for receiving the response to an AT command sent to one of the module's AT parsers. When the user wants to use the non blocking version of the `ATCommand.send` function of an implementation class of the `ATCommandResponseListener` interface must be created first. The single method of this class, `ATResponse()`, must contain the processing code for the possible response to the AT command sent.

```
class MyListener implements ATCommandResponseListener {  
  
    String listen_for;  
  
    public MyListener(String awaited_response) {  
        listen_for = awaited_response;  
    }  
  
    void ATResponse(String Response) {  
        if (Response.indexOf(listen_for) >= 0) {  
            System.out.println("received: " + strRcv);  
        }  
    }  
}
```

13.1.2.1 Non-Blocking ATCommand.send() Method

After creating an instance of the `ATCommandResponseListener` class, the class instance can be passed as the second parameter of the non-blocking `ATCommand.send()` method. After the AT command has been passed to the AT parser, the function returns immediately and the response to the AT command is passed to this callback class later when it becomes available. Somewhere in the application:

```
MyListener connect_list = new MyListener("CONNECT");  
atc.send("ATD" + CALLED_NO + "\r", connect_list);  
  
/* Application continues while the AT command is processed*/  
/* When the module delivers its response to the AT command the callback  
 * method ATResponse is called. If the response is "CONNECT", we will see  
 * the printed message from ATResponse in MyListener. */
```

A running AT command sent with the non-blocking send function can be cancelled with `ATCommand.cancelCommand()`. Any possible responses to the cancellation are sent to the waiting callback instance.

Note: Using the send methods with incorrect AT command syntax in the strings will cause errors.

13.1.3 ATCommandListener Interface

The *ATCommandListener* interface implements callback functions for:

- URCs
- Changes of the serial interface signals RING, DCD and DSR
- Opening and closing of data connections

The user must create an implementation class for *ATCommandListener* to receive AT events. The *ATEvent* method of this class must contain the processing code for the different AT-Events (URCs). The *RINGChanged*, *DCDChanged*, *DSRChanged* and *CONNChanged* methods should contain the processing code for possible state changes. This code shall leave the listener context as soon as possible (i.e. running a new thread). While the callback method does not return it cannot be called again if changes occur.

The *CONNChanged* method indicates the start and the end of data connections. During a data connection it is possible to transfer data with the I/O stream methods (see [Section 13.1.1.3](#)). Some data services (i.e. FTP) transfer the data so quickly, that the *CONNChanged* start and close events are received even parallel to the response of the AT command which originated the data connection. The user's application must realize, that the data connection had taken place and read the data with the I/O stream read methods afterwards.

13.1.3.1 ATEvents

An ATEvent or a URC is a report message sent from the module to the application. An unsolicited result code is either delivered automatically when an event occurs or as a result of a query the module previously received. However, a URC is not issued as a *direct* response to an executed AT command. Some URCs must be activated with an AT command.

Typical URCs may be information about incoming calls, a received SM, temperature changes, the status of the battery, etc. A summary of URCs is listed in [\[1\]](#).

13.1.3.2 Implementation

```
class ATListenerA implements ATCommandListener {

    public void ATEvent(String Event) {
        if (Event.indexOf("+CALA: Reminder 1") >= 0) {
            /* take desired action after receiving the reminder */
        } else if (Event.indexOf("+CALA: Reminder 2") >= 0) {
            /* take desired action after receiving the reminder */
        } else if (Event.indexOf("+CALA: Reminder 3") >= 0) {
            /* take desired action after receiving the reminder */
        }
        /* No action taken for these events */
        public void RINGChanged(boolean SignalState) {}
        public void DCDChanged(boolean SignalState) {}
        public void DSRChanged(boolean SignalState) {}
    }

    class ATListenerB implements ATCommandListener {

        public void ATEvent(String Event) {
            if (Event.indexOf("+SCKS: 0") >= 0) {
                System.out.println("SIM Card is not inserted.");
                /* perform other actions */
            } else if (Event.indexOf("+SCKS: 1") >= 0) {
                System.out.println("SIM Card is inserted.");
                /* perform other actions */
            }
        }
        public void RINGChanged(boolean SignalState) {
            /* take some action when the RING signal changes if you want to */
        }

        public void DCDChanged(boolean SignalState) {
            /* take some action when the DCD signal changes if you want to */
        }

        public void DSRChanged(boolean SignalState) {
            /* take some action when the DSR signal changes if you want to */
        }

        public void CONNChanged(boolean SignalState) {
            /* take some action when the state of a connection changes if you want
            to */
        }
    }
}
```

13.1.3.3 Registering a Listener with an ATCommand Instance

After creating an instance of the *ATCommandListener* class, it must be passed as a parameter to the *ATCommand.addListener()* method. The callback methods of the instance will be called by the runtime system each time the corresponding events (URCs or signal state changes) occur on the corresponding device AT parser.

```
/* we have two ATCommands instances, atc1 and atc2 */  
ATListenerA reminder_listener = new ATListenerA();  
ATListenerB card_listener = new ATListenerB();  
atc1.addListener(reminder_listener);  
atc2.addListener(card_listener);
```

The *ATCommand.removeListener()* method removes a listener object that has been previously added to the internal list table of listener objects. After it has been removed from the list it will not be called when URCs occur. If it was not previously registered the list remains unchanged.

The same *ATCommandListener* may be added to several *ATCommand* instances and several *ATCommandListeners* may be added to the same *ATCommand*.

13.2 Programming the MIDlet

The life cycle and structure of MIDlets are described in [Chapter 6](#). Since the MIDlets will run on Java ME™, all of Java ME™'s features, including threads, are available. Small applications, such as those without any timer functions or those used only for tests and simple examples, can be written without using threads. Longer applications should be implemented with threads.

13.2.1 Threads

Although small applications can be written without using threads longer applications should use them. The Java programming language is naturally multi-threaded which can make a substantial difference in the performance of your application. Therefore we recommend referring to Java descriptions on threads before making any choices about threading models. Threads can be created in two ways. A class can be a subclass of *Thread* or it can implement *Runnable*.

For example, threads can be launched in *startApp()* and destroyed in *destroyApp()*. Note that destroying Java threads can be tricky. It is recommended that the developer read the Java documentation on threads. It may be necessary to poll a variable within the thread to see if it is still alive.

13.2.2 Example

/ This example derives a class from Thread and creates two instances
* of the subclass. One thread instance finishes itself, the other one
* is stopped by the main application. */*

```
package example.threaddemo;
import javax.microedition.midlet.*;
public class ThreadDemo extends MIDlet {
    /* Member variables */
    boolean    runThreads = true; // Flag for stopping threads
    DemoThread thread1;          // First instance of DemoThread
    DemoThread thread2;          // Second instance of DemoThread

    /* Private class implementing the thread to be started by the
    * main application */
    private class DemoThread extends Thread {
        int loops;

        public DemoThread(int waitTime) {
            /* Store number of loops to execute */
            loops = waitTime;
            System.out.println("Thread(" + loops + "): Created");
        }

        public void run() {
            System.out.println("Thread(" + loops + "): Started");
            for (int i = 1; i <= loops; i++) {
                /* Check if main application asked thread to die */
                if (runThreads != true) {
                    System.out.println("Thread(" + loops + "): Stopped from outside");
                    /* Leave thread */
                    return;
                }
            }
        }
    }
}
```

```

        /* Print loop counter and wait 1 second,
         * do something useful here instead */
        System.out.println("Thread(" + loops + "): Loop " + i);
        try {
            Thread.sleep(1000);
        } catch (InterruptedException e) {
            System.out.println(e);
        }
    }
    System.out.println("Thread(" + loops + "): Finished naturally");
}
}
}
/**
 * ThreadDemo - constructor
 */
public ThreadDemo() {
    System.out.println("ThreadDemo: Constructor, creating threads");
    thread1 = new DemoThread(2);
    thread2 = new DemoThread(6);
}
/**
 * startApp()
 */
public void startApp() throws MIDletStateChangeException {
    System.out.println("ThreadDemo: startApp, starting threads");
    thread1.start();
    thread2.start();
    System.out.println("ThreadDemo: Waiting 4 seconds before stopping threads");
    try {
        Thread.sleep(4000);
    } catch (InterruptedException e) {
        System.out.println(e);
    }
    destroyApp(true);
    System.out.println("ThreadDemo: Closing application");

}
/**
 * pauseApp()
 */
public void pauseApp() {
    System.out.println("ThreadDemo: pauseApp()");
}
/**
 * destroyApp()
 */
public void destroyApp(boolean cond) {
    System.out.println("ThreadDemo: destroyApp(" + cond + ")");
    System.out.println("ThreadDemo: Stopping threads from outside");
    runThreads = false;
    try {
        System.out.println("ThreadDemo: Waiting for threads to die");
        thread1.join();
        thread2.join();
    } catch (InterruptedException e) {
        System.out.println(e);
    }
    System.out.println("ThreadDemo: All threads died");
    notifyDestroyed();
}
}

```

14 Differences to the TC45

For those who are familiar with the Siemens WM IMP1.0 product (TC45) this is an overview of the main differences between this and the IMP-NG product line (e.g. TC65).

- „real“ TCP and UDP access interfaces: `SocketConnection`, `ServerSocketConnection`, `UDP-DatagramConnection`.
Use of `StreamConnection`, `StreamConnectionNotifier`, `DatagramConnection` is now discouraged.
- `CommConnection` can access both RS232 interfaces `ASC0` and `ASC1`
- `Standard.out` can be directed to any of the serial interfaces `ASC0`, `ASC1`, USB or written to the flash file system.
- No IO pin multiplexing: GPIOs, DAI and the serial interface for `CommConnection` do not share any pins, so the selection mechanism no longer exists.
- The `CommConnection` interface which used to be proprietary (`com.siemens.icm.io`) is now part of the standard package (`javax.microedition.io`).
- No interface emulation on the PC: When running a MIDlet under the emulator, it is completely executed in the connected module and therefore uses the modules' interfaces. The emulation of interfaces such as networking, file system or serial interface on the PC side no longer exists.
- jad files required: A suitable descriptor file is now not only required for OTAP but in all cases. An absent or invalid .jad file causes an error when starting an application (`AT^SJRA` or `autostart`).
- Mandatory attributes: the attributes `MicroEdition-Profile` and `MicroEdition-Configuration` are now mandatory attributes in the manifest and .jad file.
- Flexible echo: When using the `ATCommand` class the "echo" can be switched on and off as in non-Java mode. The default is echo on. In the TC45 the echo was always off.
- `activeCount` result: The method `activeCount` of class `Thread` returns the number of threads currently present in the VM. In the TC45 only the non sleeping or waiting threads were counted.